
 

 

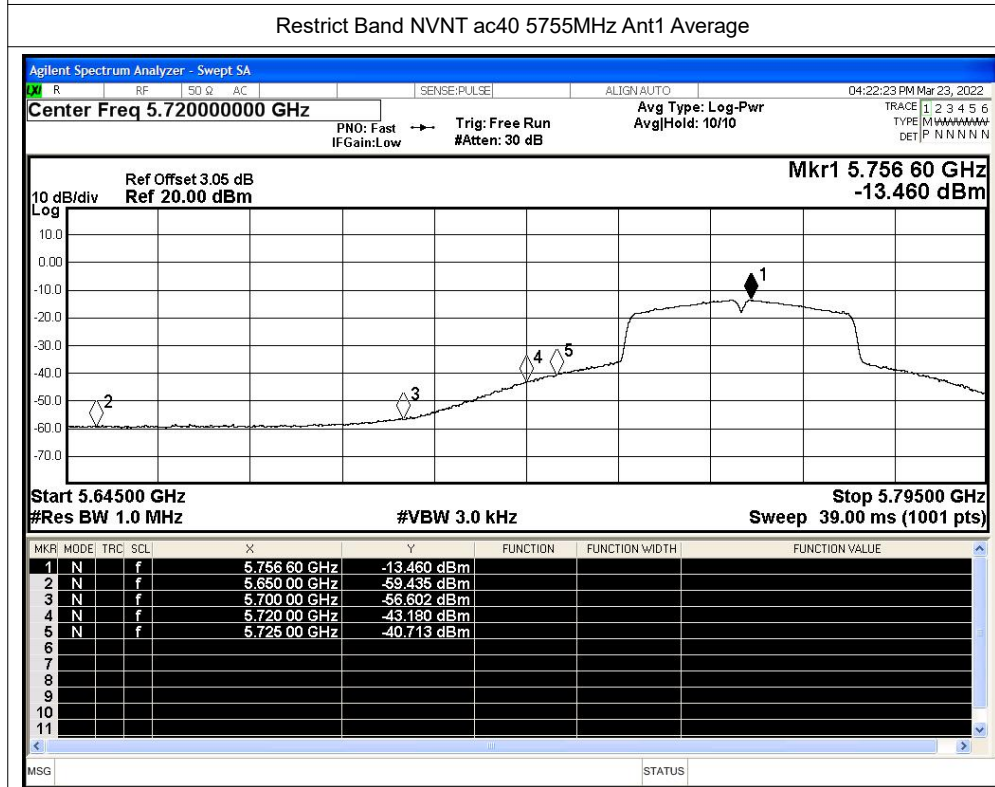

 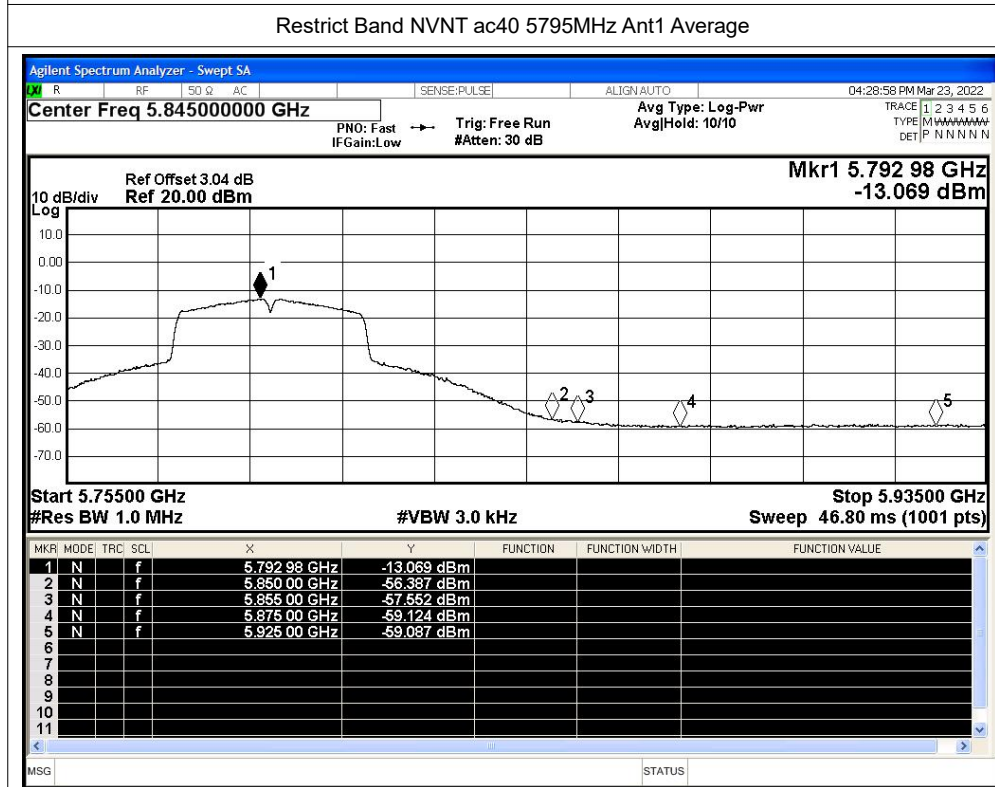




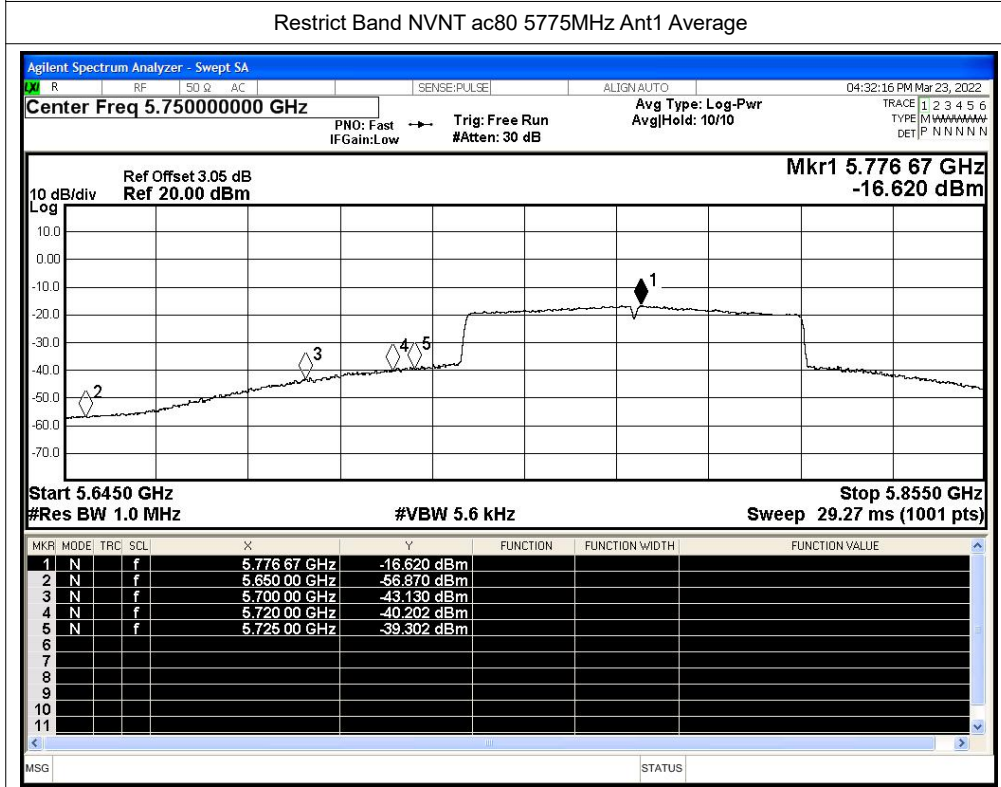

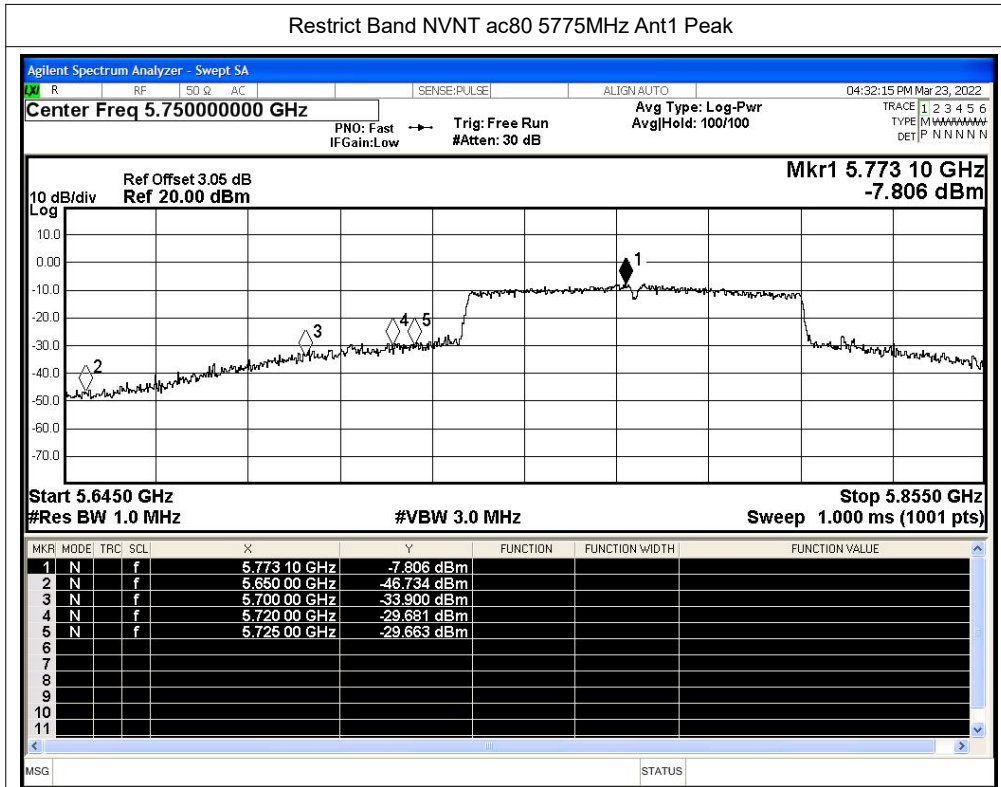

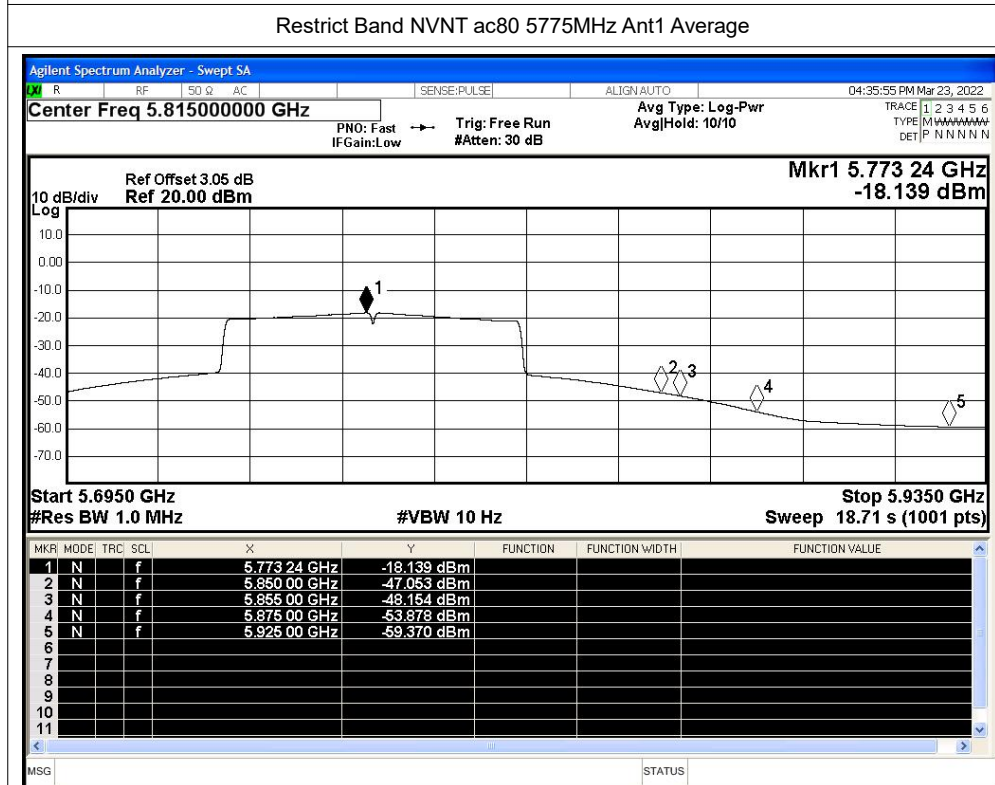




E.5 Frequency Stability

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5745	Ant1	5745	0	0	25	Pass
NVNT	a	5785	Ant1	5785.02	20000	3.46	25	Pass
NVNT	a	5825	Ant1	5825	0	0	25	Pass
NVNT	n20	5745	Ant1	5745.02	20000	3.48	25	Pass
NVNT	n20	5785	Ant1	5785.02	20000	3.46	25	Pass
NVNT	n20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n40	5755	Ant1	5755	0	0	25	Pass
NVNT	n40	5795	Ant1	5795	0	0	25	Pass
NVNT	ac20	5745	Ant1	5745	0	0	25	Pass
NVNT	ac20	5785	Ant1	5785.02	20000	3.46	25	Pass
NVNT	ac20	5825	Ant1	5824.96	-40000	-6.87	25	Pass
NVNT	ac40	5755	Ant1	5755	0	0	25	Pass
NVNT	ac40	5795	Ant1	5795.04	40000	6.9	25	Pass
NVNT	ac80	5775	Ant1	5775	0	0	25	Pass






Test Graphs



Freq. Stability NVNT a 5745MHz Ant1

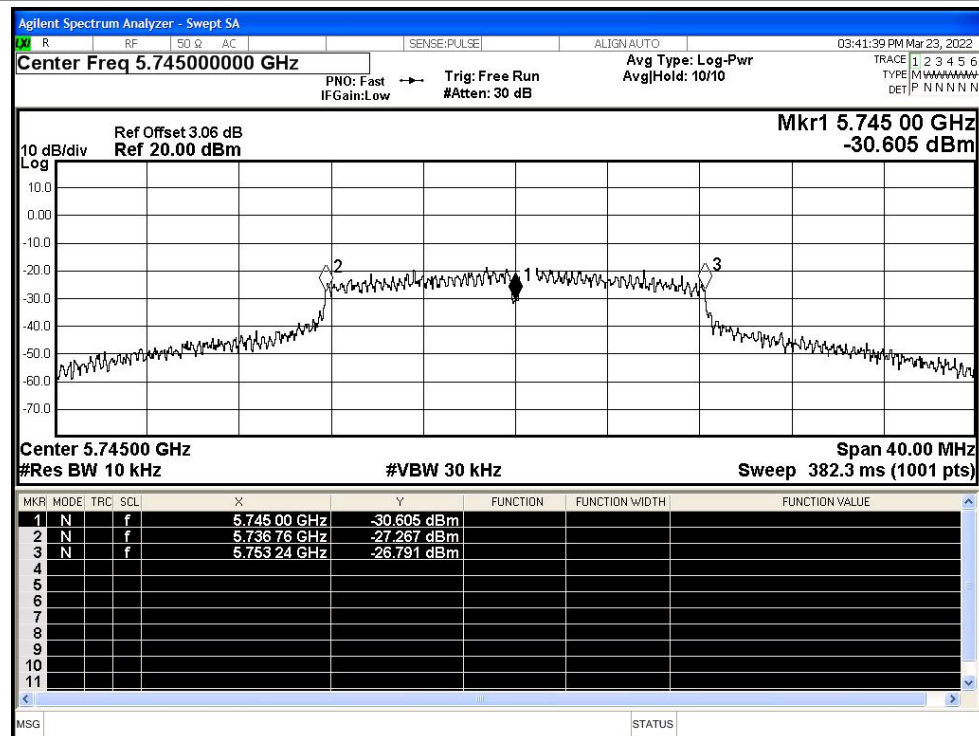

Freq. Stability NVNT a 5785MHz Ant1

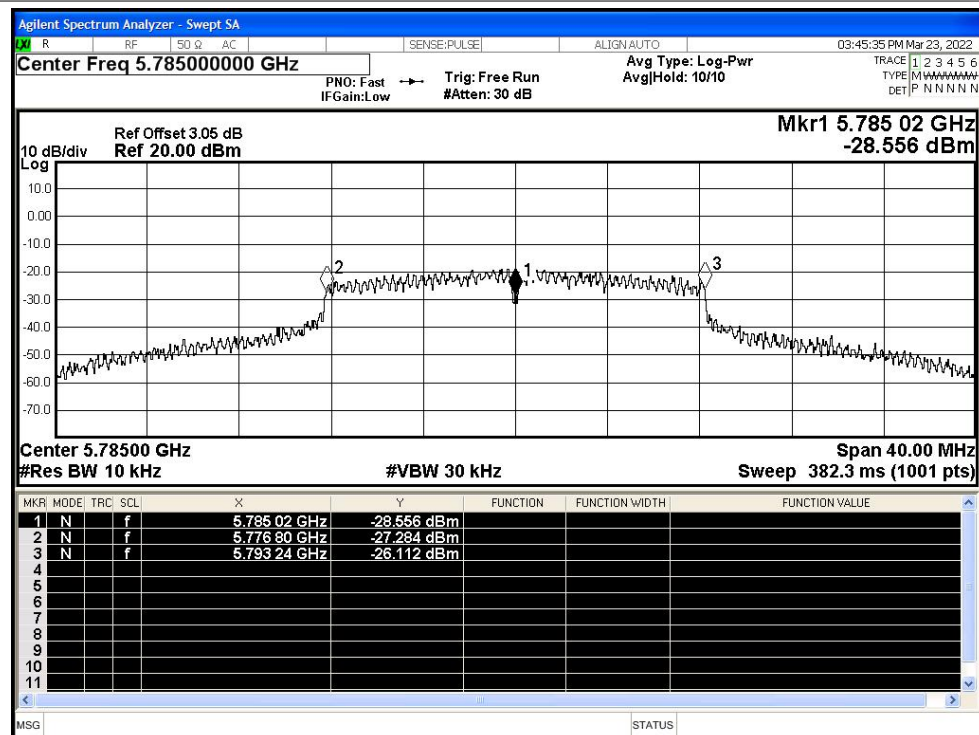


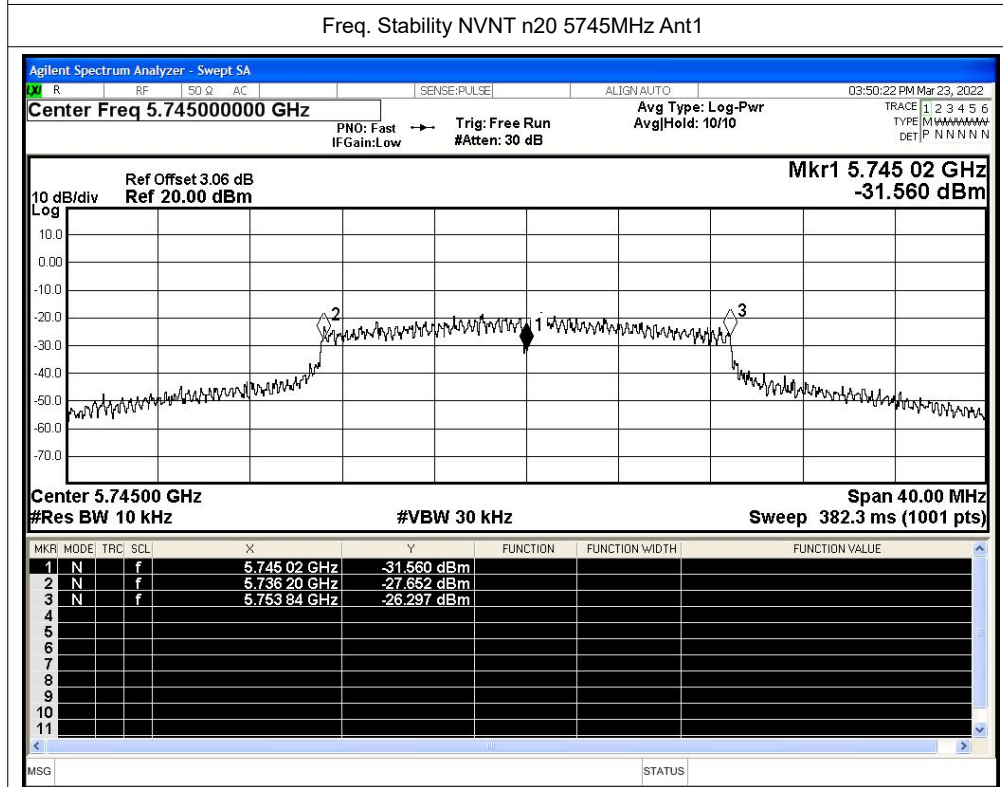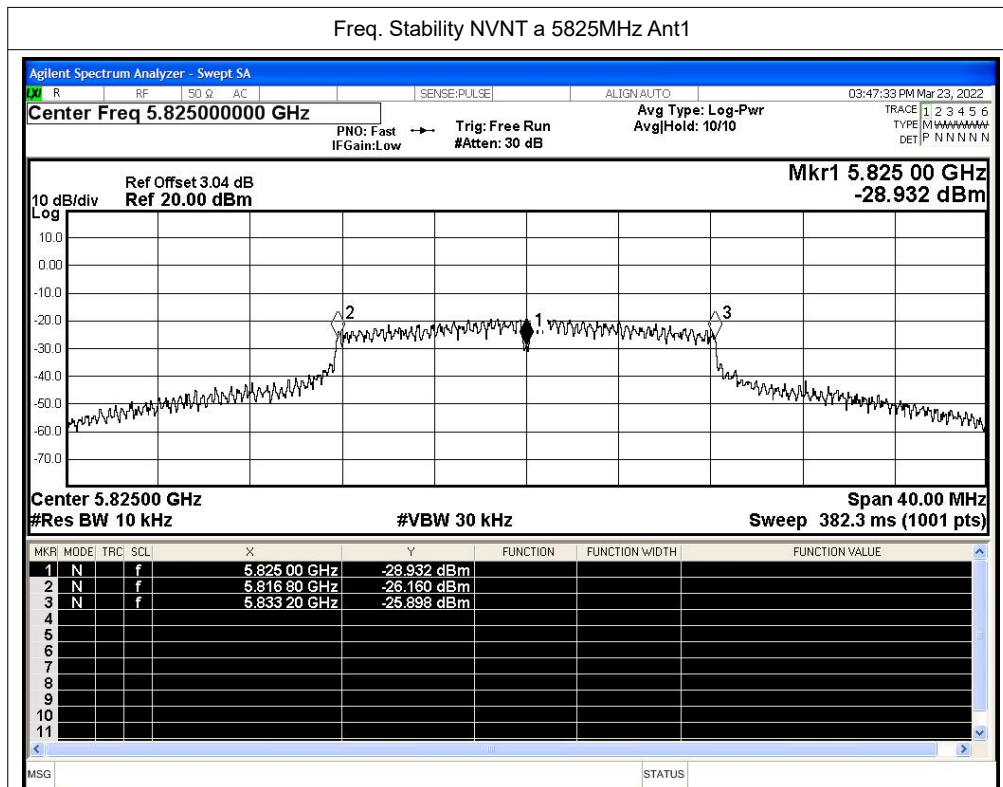

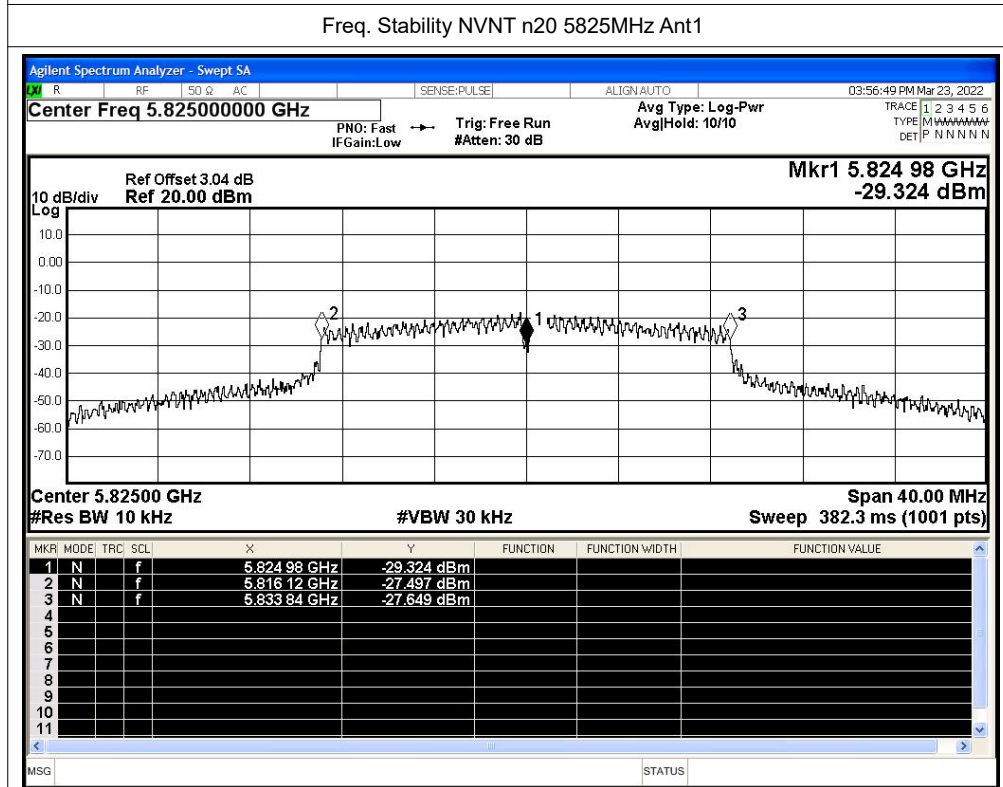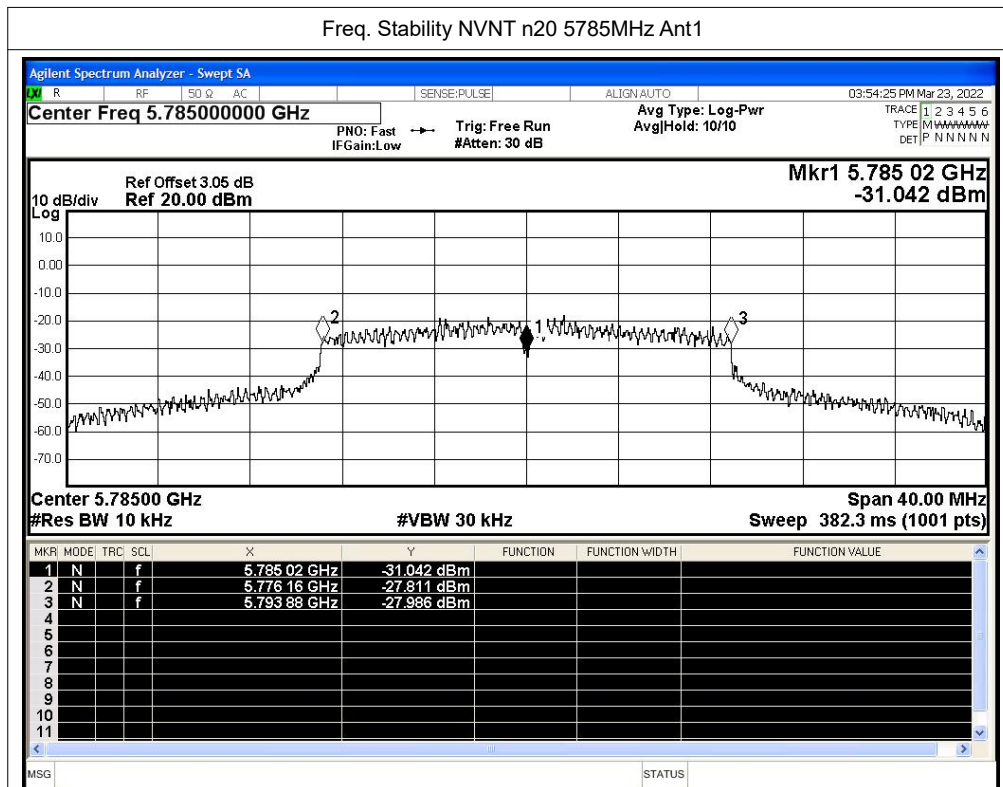








Freq. Stability NVNT n40 5755MHz Ant1


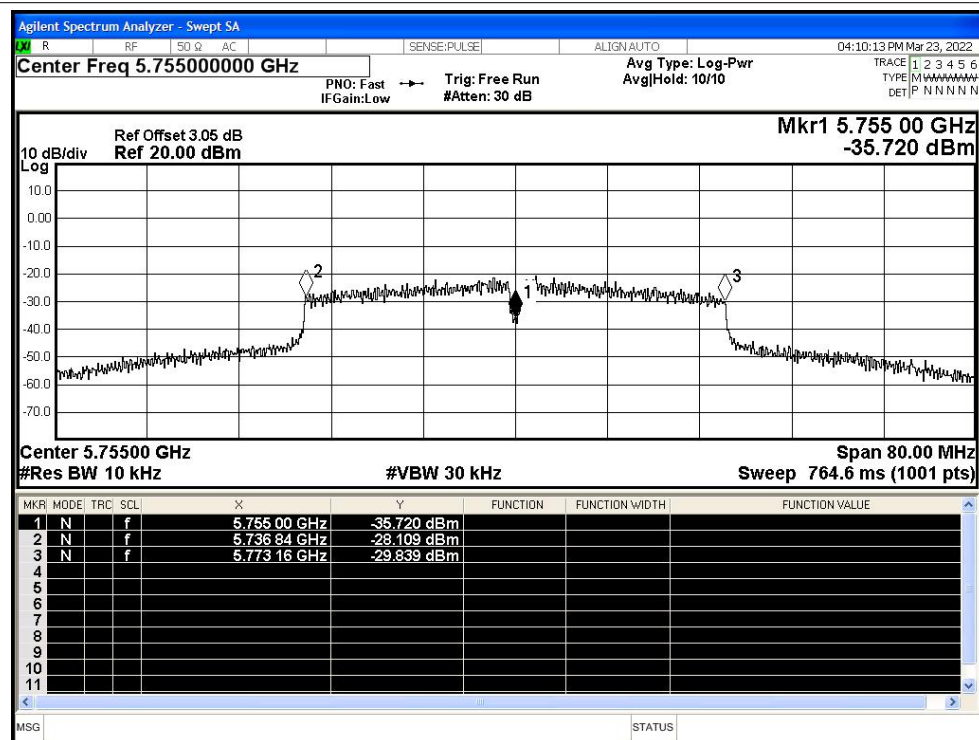


Freq. Stability NVNT n40 5795MHz Ant1

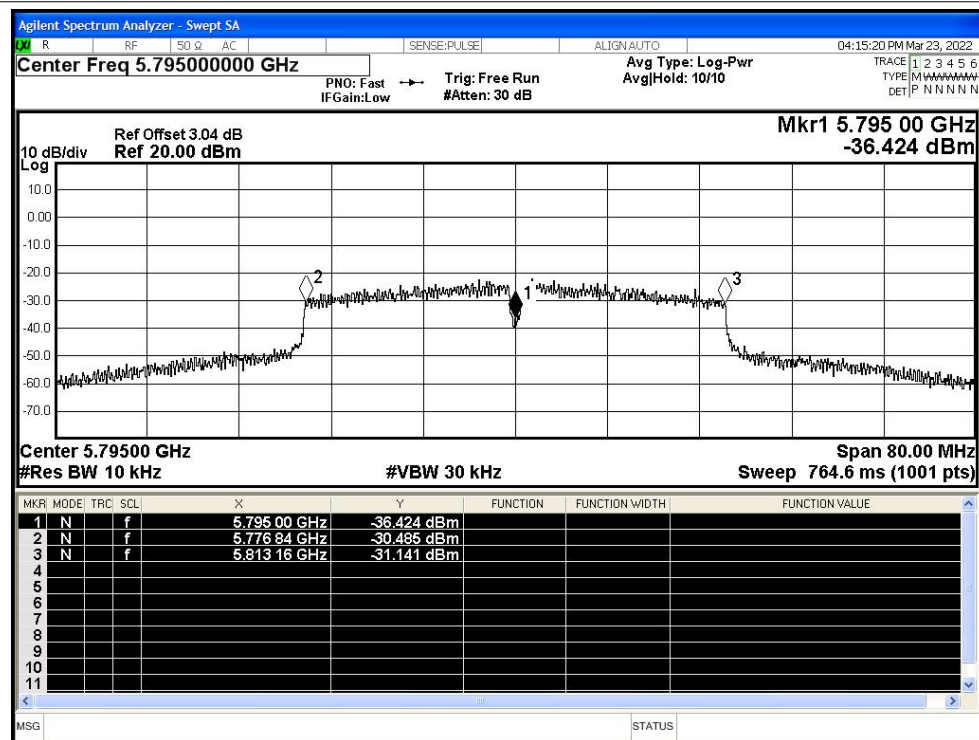

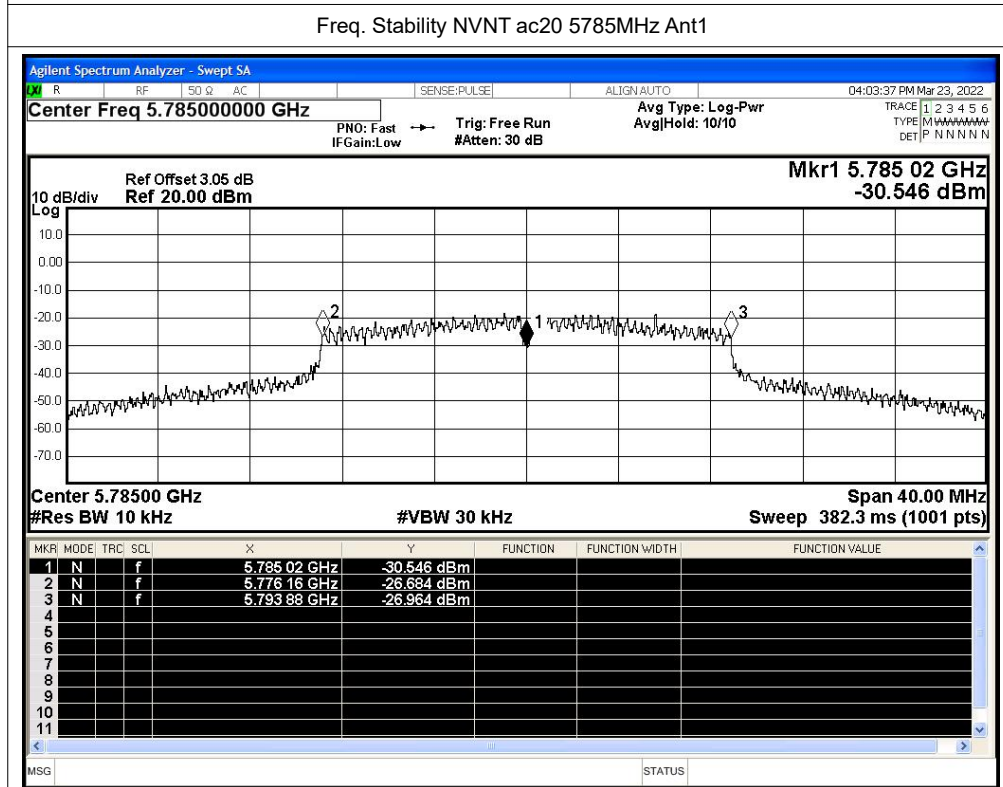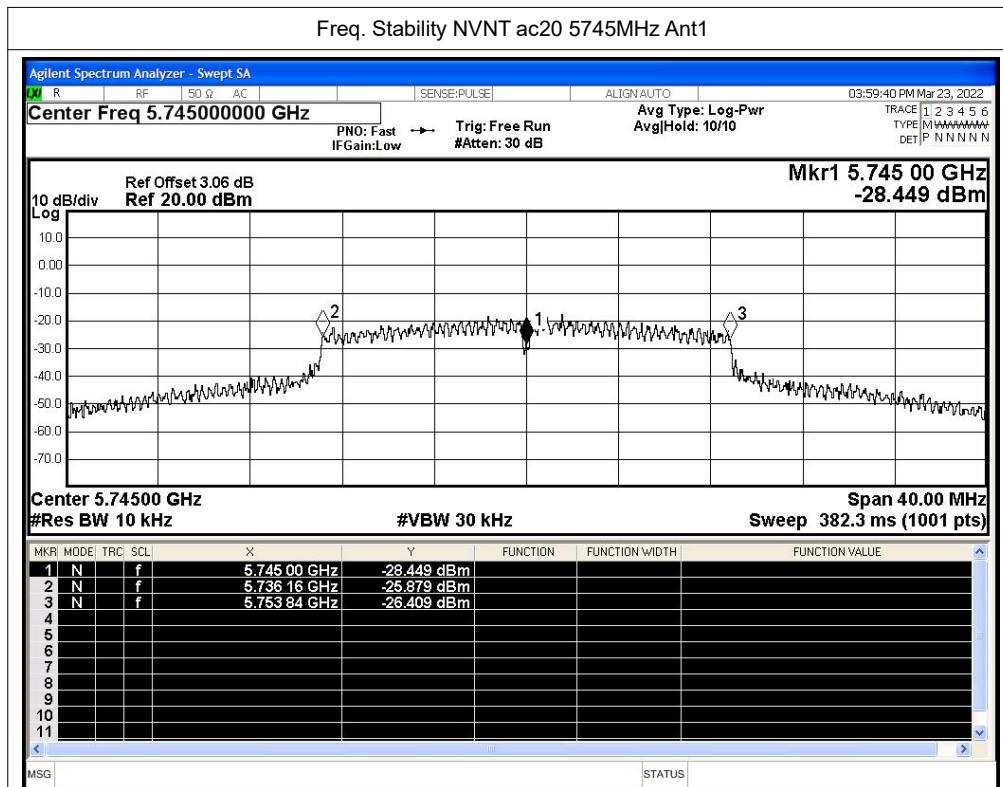

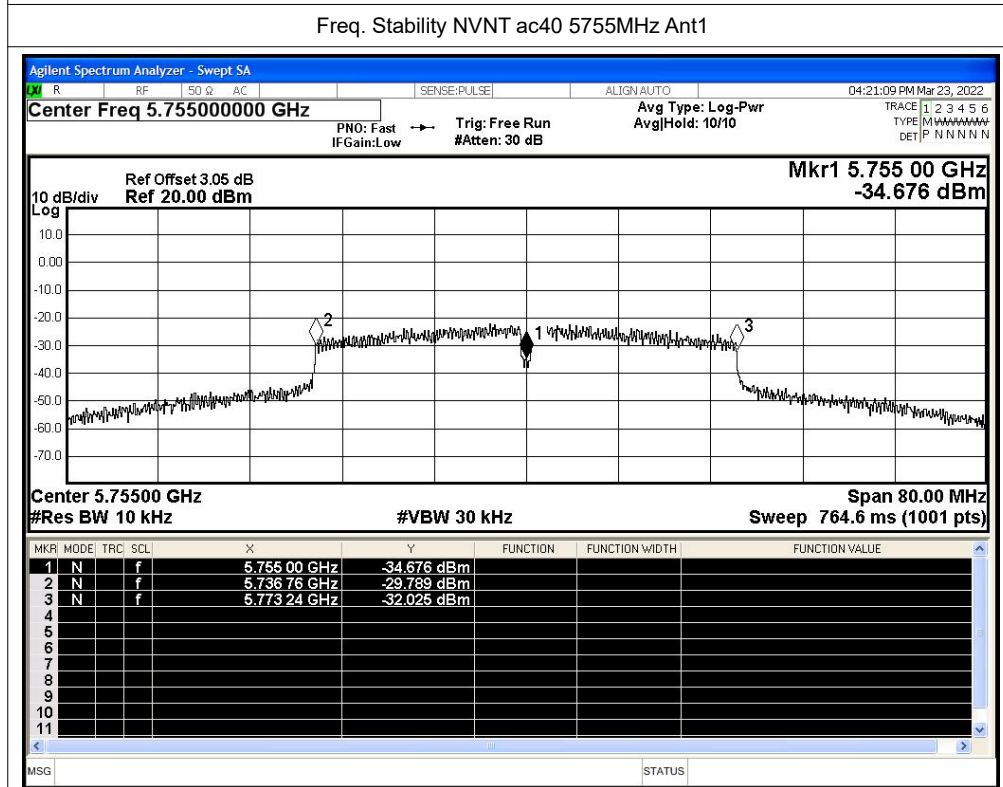
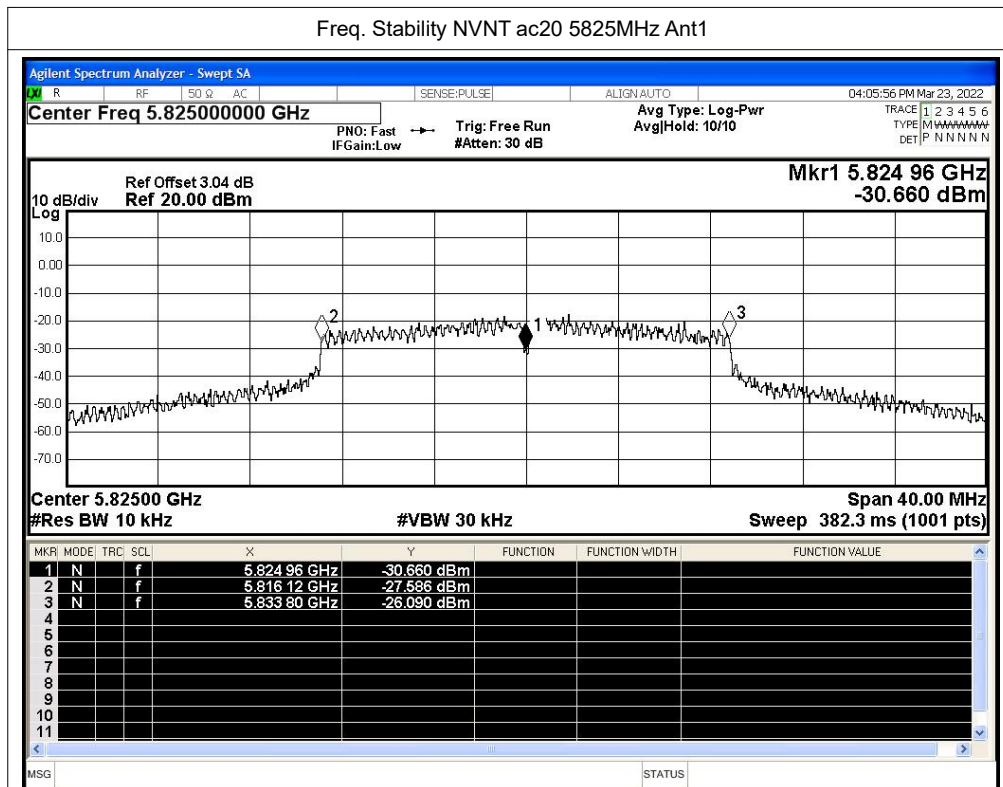


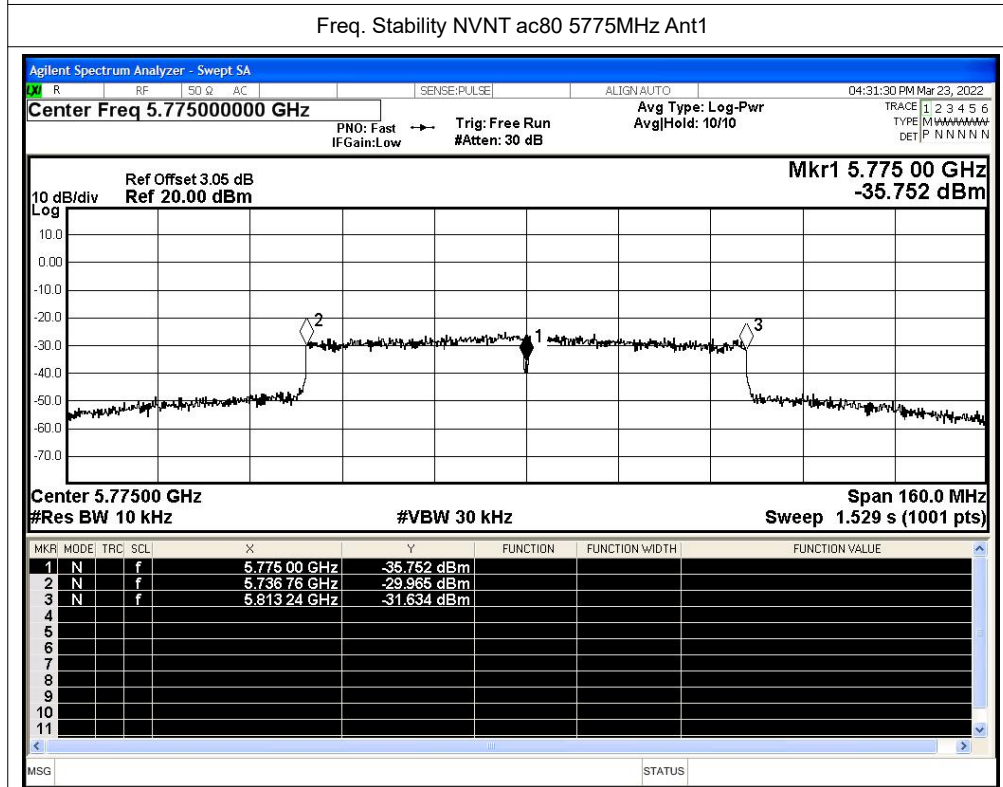
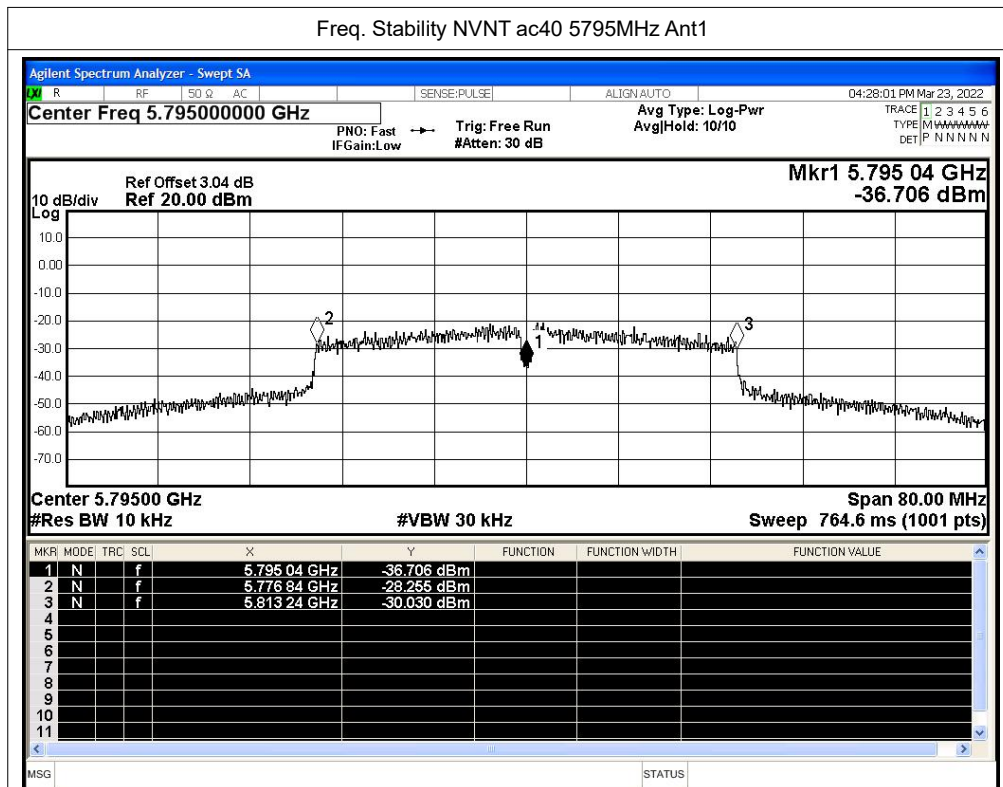








E.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	100	0	0
NVNT	a	5785	Ant1	100	0	0
NVNT	a	5825	Ant1	100	0	0
NVNT	n20	5745	Ant1	100	0	0
NVNT	n20	5785	Ant1	100	0	0
NVNT	n20	5825	Ant1	100	0	0
NVNT	n40	5755	Ant1	100	0	0
NVNT	n40	5795	Ant1	100	0	0
NVNT	ac20	5745	Ant1	100	0	0
NVNT	ac20	5785	Ant1	100	0	0
NVNT	ac20	5825	Ant1	100	0	0
NVNT	ac40	5755	Ant1	100	0	0
NVNT	ac40	5795	Ant1	100	0	0
NVNT	ac80	5775	Ant1	100	0	0

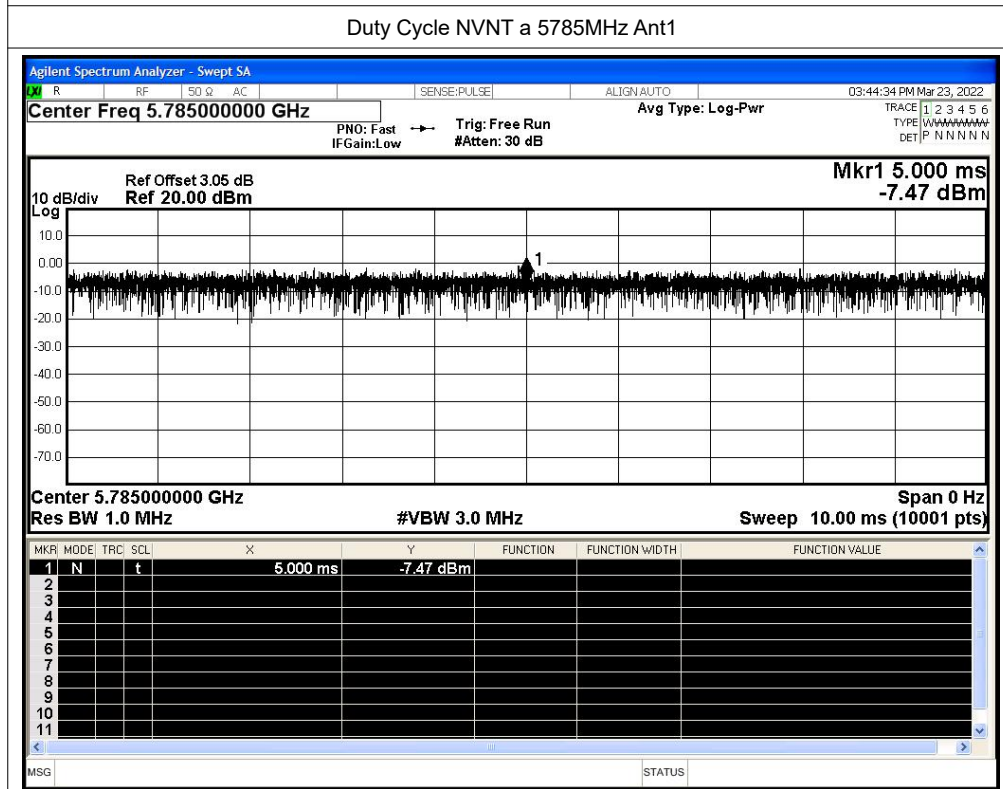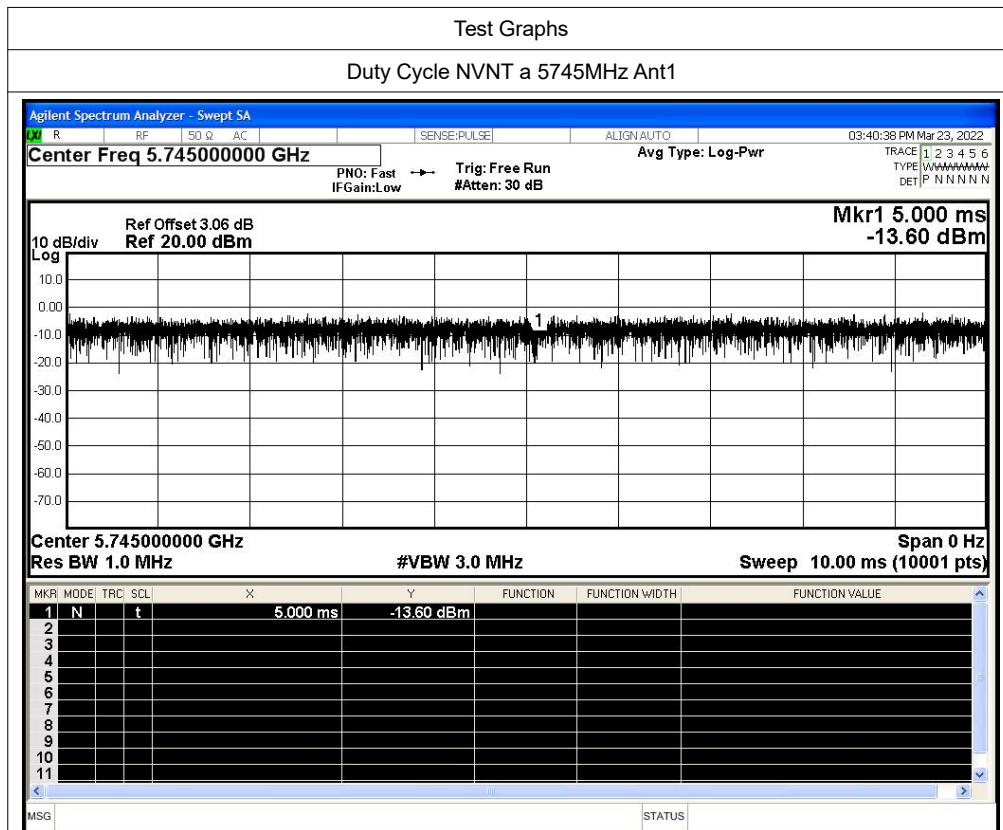

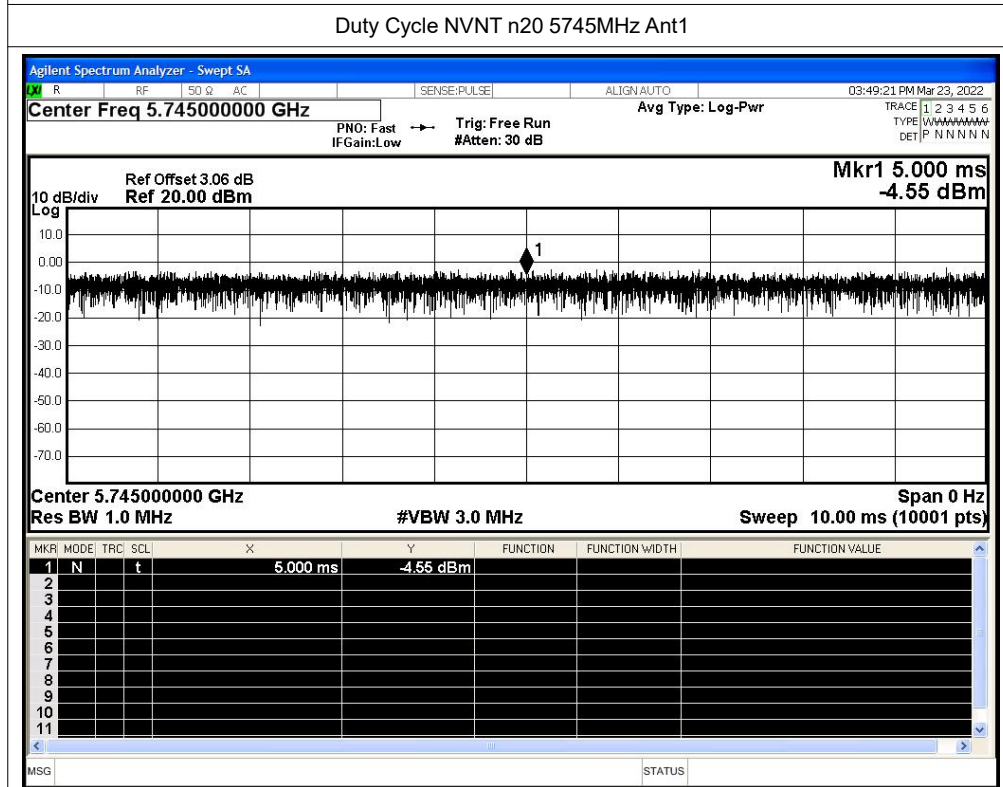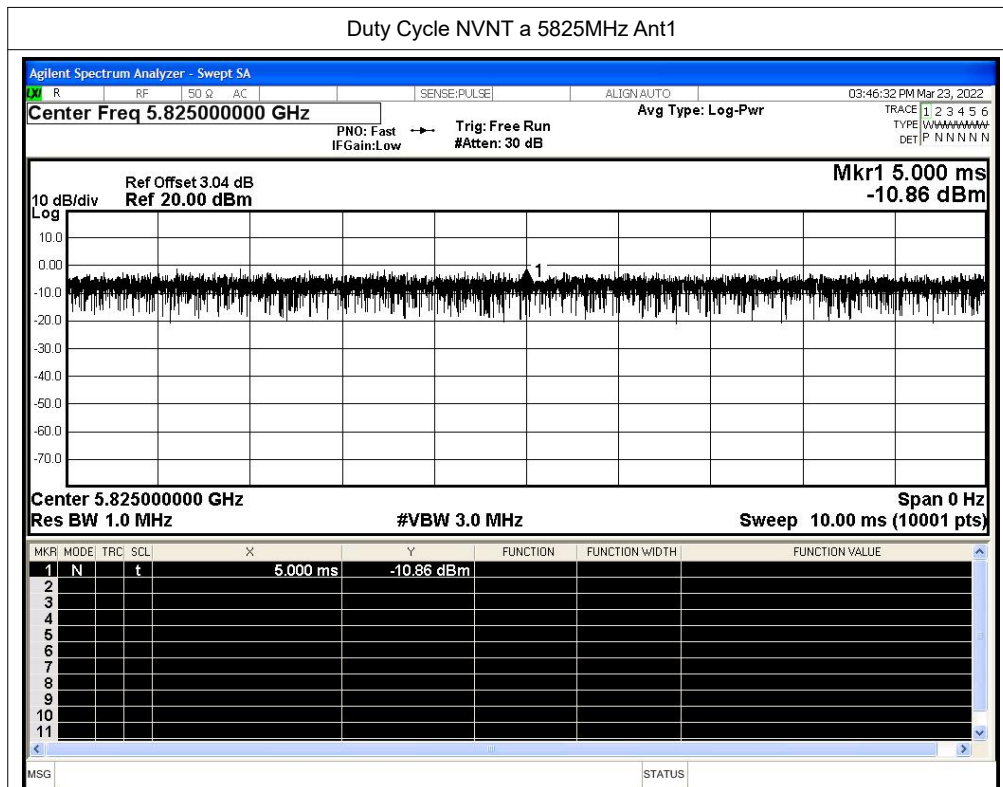


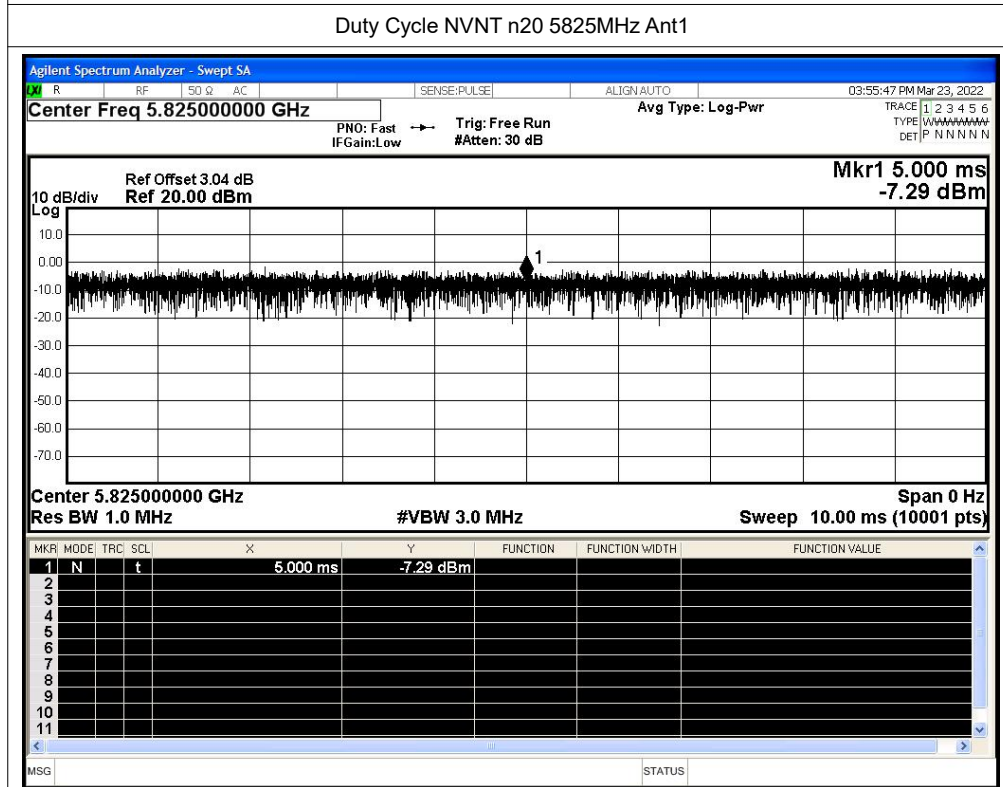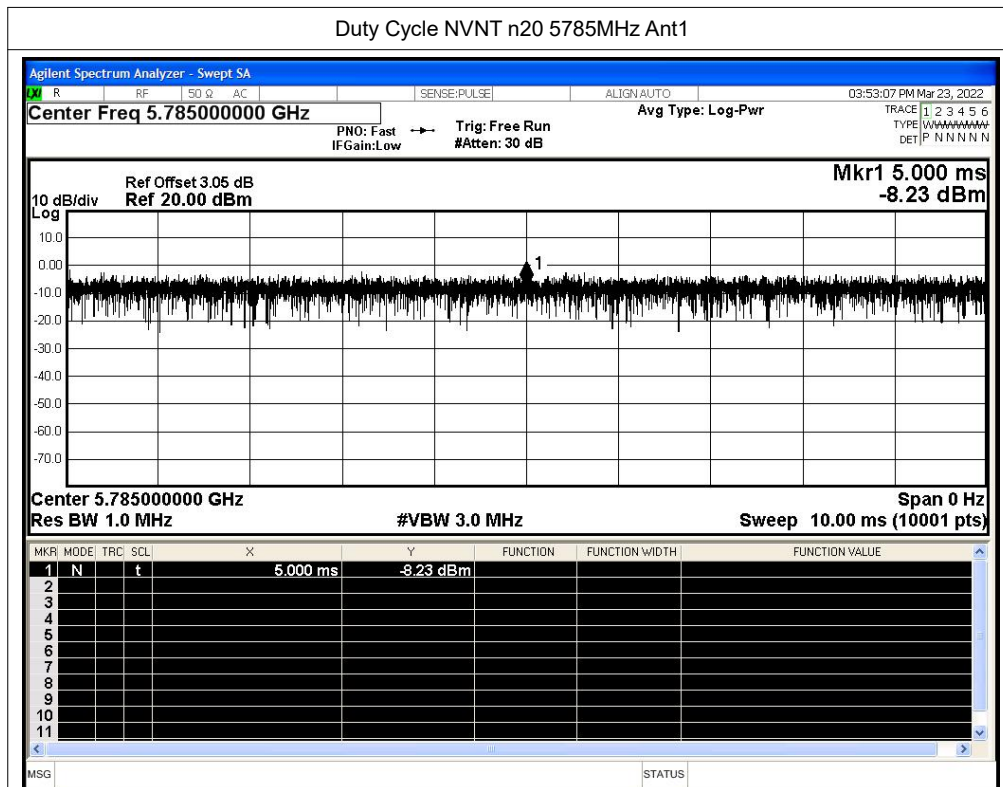

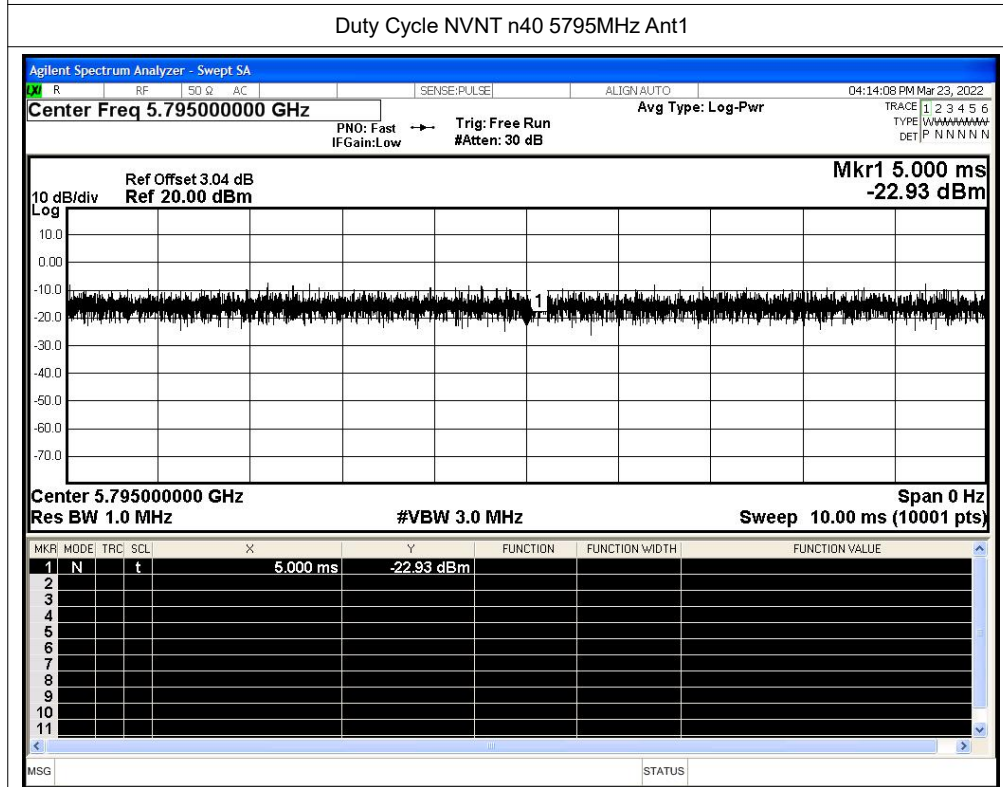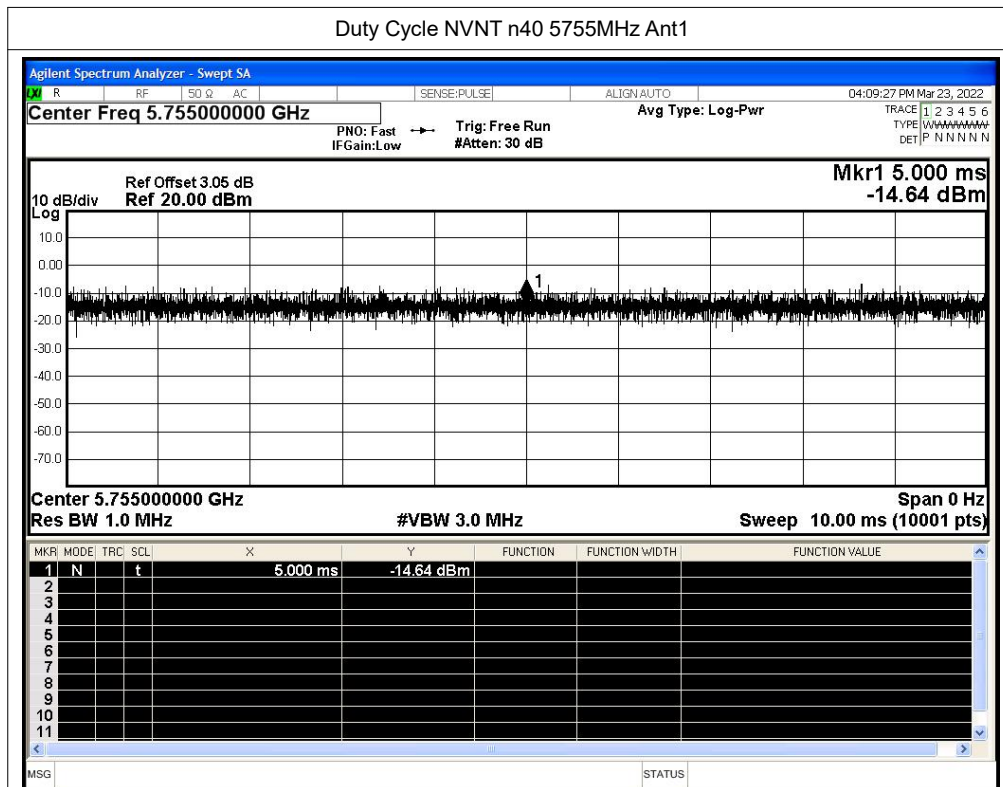



Duty Cycle NVNT ac20 5745MHz Ant1

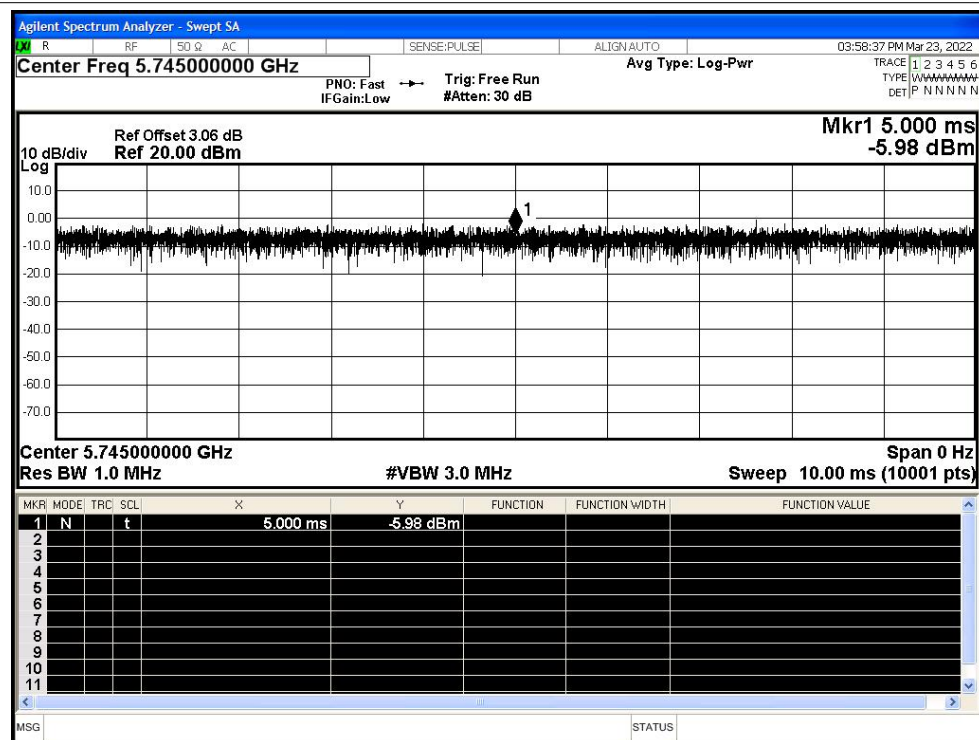

Duty Cycle NVNT ac20 5785MHz Ant1

