

Mini smartphone instruction manual airplane mode. Pull down the main interface and select the icon in the upper right corner to have flight mode. touch screen Use your phone's touch screen to make it easier to select items or perform functions. Learn the basics of using a touch screen: ✧ To avoid scratching the touch screen, do not use sharp tools. ✧ Do not allow the touch screen to touch other electronic devices. Electrostatic discharge may cause the touch screen to malfunction. ✧ Do not let the touch screen touch the water. The touch screen may malfunction in a humid environment or when exposed to water. ✧ In order to achieve the best results, please remove the touch screen protective film before using the phone. ✧ The touch screen has a protective layer that reveals tiny charges from the body. For the best performance, tap the touch screen with your fingertips. The touch screen does not react to the touch of a sharp tool, such as a stylus or pen. The following operations can be performed to control the touch screen: ✧ Click. Click once with your finger to select or launch a menu, option, or application. ✧ Click and hold. Hold down the item for more than 2 seconds to pop up a list of options. ✧ Scroll. Click and drag your finger up, down, left or right to move to the items in the list. ✧ Drag and drop. Click and hold an item with your finger, then drag your finger to move the item. ✧ Double-click. When viewing a photo, tap twice with your finger to zoom in or out. ✧ If the phone is not used for the specified length of time, the phone will turn off the touch screen. To turn 6	Mini smartphone instruction manual the touch screen back on, press [Power On/Off]. ✧ The backlight time can also be adjusted. In standby mode, then select Settings --> Display --> Sleep --> Sleep time Lock or unlock the touch screen and buttons. The touch screen and buttons can be locked to prevent any accidental phone operation. To lock, press [Switch button]. To unlock, press [Power On/Off] and follow the on-screen prompts to manually unlock. Select wallpaper source You can set the wallpaper to customize the standby screen or lock screen interface (the wallpaper can customize the pictures in the album). ✧ Lock screen wallpaper: set lock screen interface image. ✧ Desktop wallpaper: set desktop wallpaper. ✧ Live Wallpaper: You can set live wallpaper. ✧ Video wallpaper: set background video. Move items on the idle screen Click and hold the item you want to move. ✧ Drag the project to the desired location after the project vibrates. ✧ Remove item from standby screen Click and hold the item you want to remove. The item vibrates and X delete appears in the top left corner of the item. ✧ Use the shortcut panel When in standby mode or while using the app, touch the indicator icon area at the top of the screen and drag your finger down. Open the shortcuts panel. You can activate or deactivate other features such as wireless connections and access a list of notifications, such as messages, calls, events, or processing status. To hide the list, drag the bottom border of the list up. Swipe the shortcut icon left and right in the shortcuts panel 7	Mini smartphone instruction manual to use the following options: Wi-Fi: Turn Wi-Fi connection on or off. Long click this icon to enter the Wi-Fi settings interface. ✧ Data connection: start or close the data connection. ✧ Bluetooth: Turns Bluetooth wireless connection on or off. ✧ Airplane mode: Activate or deactivate flight mode. ✧ Scene mode: standard, mute, switch between conference and outdoor mode. ✧ One-click cleanup: Click to end the background application and release some memory. ✧ Brightness: Adjust the brightness of the screen. ✧ Battery: Shows device power usage. ✧ Hibernate: Adjust the delay time for the screen to automatically turn off. ✧ One-button lock screen: After clicking, the device is off screen and locked. ✧ More: You can set the shortcut function and sequence display in the shortcut panel. Access application ✧ If you want to access the app of your phone: ✧ Open phone lock. ✧ Scroll left or right to other application screens. ✧ Select the launcher. ✧ Press the middle button to return to the main standby screen. ✧ The phone has a built-in motion sensor that detects the direction of the phone. If you rotate your phone while using certain features, the phone interface will automatically switch to landscape mode. If you want to set the interface does not change with the rotation of the phone, Open the shortcuts panel at the top of the screen and select Auto Rotate. Alternatively, select Settings --> Display --> Rotate Screen --> Auto or Keep 8	Mini smartphone instruction manual Portrait, Widget. Click the Menu button from standby, select Add widget, select any widget and press and drag to standby. Custom phone Customize your phone to your personal preferences; themes and desktop slideshow effects, etc. ✧ Set current time and date ✧ In the main menu interface, then select Settings --> Date & Time. ✧ Set time and date and change other options. Turn touch tones on or off In the main menu interface, then select Settings --> Sounds & Notifications --> Standards --> click on the right setting --> select the touch tone. ➤ Adjust the ring volume Press the up or down volume button to adjust the ring volume. ➤ Switch to vibration mode To shake or de-vibrate your phone, do one of the following: ✧ Switch directly in the shortcut panel mood mode. ✧ In standby mode, press and hold [Switch button]. ✧ Then select the vibration mode. ➤ Change ringtone ✧ In the main menu interface, then select Settings --> Sound & Notifications --> Standards --> Point Right Settings --> Phone Ringtone / Black Receipt Notification Tone / Message Ringtone. Select a ringtone from the list and select OK. ➤ Select the wallpaper of the standby screen ➤ In standby mode, press menu --> wallpaper --> select the type of wallpaper to be set. Adjust the brightness of the display Adjust screen brightness under the setup menu. 9
Mini smartphone instruction manual Manage applications locally and change administrative settings for installed applications. Safety Screen lock mode: set to none, slide, pattern, PIN, password, fingerprint recognition. Auto lock: select auto lock time Owner information: After editing, the information you edit will be displayed in the standby lock. Encrypted phones: Please see their instructions for specific information. Set the SIM card lock: Lock the SIM card: Click to lock the SIM card, enter the PIN code and turn on the lock SIM card function. Change SIM card PIN: Enter the original PIN code first, then enter the new PIN code twice. Show password: Turns the display password on and off. Device Manager: View or deactivate Device Manager. Unknown source: Whether to allow the installation of a location-sourced app. It can be turned on and off. Self-start management: Allow or disable the application to run automatically. App permissions: Manage app permissions for security and privacy Mobile phone theft: remotely lock the phone or remotely destroy the data Storage Type: Shows the type of storage. Trusted credentials: Use certificates and credentials to ensure secure use of individual applications. Install from phone storage: Install the encryption certificate stored in the phone storage. Clear credentials: delete the contents of the voucher in the phone and reset the password. Account Add account: Change the settings of the auto sync feature or 15	Mini smartphone instruction manual Manage accounts to sync. language and keyboard Language and input method: you can choose the language, set the keyboard, select the input method. Backup and reset Backup and reset: Restoring the factory default settings will erase all data on the phone, please be cautious. Date and time Automatically determine date and time: use the network to provide time. Automatically determine the time zone: Use the time zone provided by the network. Set date: Set the current date manually. Set time: Set the current time manually. Select time zone: set local time zone. Use 24-hour format: set to display time in 24-hour format. Timer switch Set the time when the phone is turned on and off. Print Connect the printer to print the necessary images and other files About mobile phone Query information about your phone, such as system upgrades, status information, legal information, phone model, version number, processor, etc. Common problems and solutions in order to save your time and unnecessary expenses, please do the following simple check before contacting professional after-sales service. Unable to start phone Check if you press and hold the [Power On/Off] key for at least 1 second. Check if the battery is in poor contact. Please remove it and reinstall it. Try again. Check if the battery is exhausted, please charge. Start the phone, there is information display. 16	Mini smartphone instruction manual Enter the phone lock password and select the auto lock function. You must enter the phone password before using it. Enter the PIN code and select the function to enter the PIN every time you turn it on. You must enter the PIN code. Enter the PUK code: connect the error PIN code three times and lock the SIM card. Enter the PUK code provided by the operator. SIM card error The metal surface of the SIM card is dirty. Wipe the metal contact point of the SIM card with a clean cloth. If the SIM card is not installed, install the SIM card correctly according to the instruction manual. SIM card is damaged, contact your network service provider. Unable to connect to network The signal is weak. Please move to a strong signal and try again. Exceeding the network coverage area of the network service provider. Invalid SIM card, contact your network provider. The number cannot be called out Please confirm whether the dialing button is pressed after dialing. Please confirm if the call is forbidden due to arrears. Please confirm if the SIM card is valid. Please confirm if the call barring function is set. Please confirm if the fixed dialing function is set. Poor call quality Please check if the volume adjustment is not suitable. Using mobile phones in poorly received areas, such as near high-rise buildings or basements, radio waves cannot be effectively communicated. Use the phone during a call-intensive period, such as after 17	Mini smartphone instruction manual work hours, the line is congested and the call cannot be made. Number cannot be called in Please confirm that the phone is turned on and connected to the network. Please confirm if you are prohibited from calling due to arrears. Please confirm if the SIM card is valid. Please confirm if the call restriction function is set. Contacts can't hear you Please confirm that the microphone is turned on. Please keep the microphone in the lower part of the phone close to your mouth. Short standby time The standby time is related to the system settings of the network and may be in an area where reception is poor. When the signal is not received, the phone will continue to transmit to find the base station, which consumes a large amount of battery power, resulting in a shorter standby time. Please phone, move to a place with strong signal or temporarily turn off the phone. Need to replace the battery, please replace the battery. Unable to charge Poor contact, check if the plug is connected. Dirty, wipe the phone and battery terminals with a soft, clean cloth. When charging in an environment below 0 °C or above 45 °C, please change the charging environment. The battery or charger is damaged and needs to be replaced. If the above information does not help you solve the problem, please record your phone model and serial number, authorization or insurance policy information, and a clear description of the problem, then contact your local after-sales service provider. Attention Explosion hazard if you replace it with the wrong type of battery. Always dispose of the used battery as instructed! 18