

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information
SAR tests are conducted using standard operating positions accepted by the FCC with the Mini smartphone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the Mini smartphone while operating can be well below the maximum value. Before a new model Mini smartphone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each Mini smartphone are performed in positions and locations as required by the FCC.

For body worn operation, this model Mini smartphone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

Head: 0.739 W/kg
Body: 1.395 W/kg

Mini smartphone instruction manual

Thank you for choosing this mini smartphone. This mobile phone is a smart phone based on Android operating system. It has stylish design and high-end manufacturing technology.

interface is simple and easy to use, so that you can fully enjoy the comfortable experience. It is forbidden to use any tool root this phone, otherwise there may be unrecoverable faults, and the root phone does not enjoy the warranty!

In order to use this phone safely and effectively, please read the instruction manual carefully before use.

Introduction to this manual

This manual describes concise information about how to use your mobile phone. If you want to quickly grasp the basic actual methods of this mobile phone, please Refer to "Understanding the phone".

Safety Precautions

Safe boot

Do not use your mobile phone when it is forbidden to use your mobile phone or if it may cause interference or danger.

Traffic safety first

Do not use your mobile phone while driving, so as not to interfere with safe driving.

Shut down in restricted areas.

Please comply with the relevant restrictions or regulations.

Shut down on airplanes or near flammable materials, chemicals or medical equipment.

Interference

Mobile communications can be subject to radio interference, which can affect performance.

Waterproof

This phone is not waterproof, please keep it dry.

Specialized service

Mini smartphone instruction manual

Do not disassemble the phone and accessories. Only authorized organizations can repair the phone.

Install SIM or USIM card and battery

When you order a mobile phone service, you will receive a Subscriber Identity Module (SIM) card with your order details, such as a Personal Identification Number (PIN) and optional services. To use the 3G (WCDMA) service, you can purchase a Universal Subscriber Identity Module (USIM) card. Install the SIM card or USIM card as follows,

1. On the right side of the phone, find the card slot of the SIM card.

2. There is a corresponding SIM card and memory card card insertion method on the card slot, please insert the card according to the pattern shown,

If you do not have a SIM or USIM card inserted, you can only use your phone's non-network services and some of the menus.

Do not insert the memory card into the SIM card slot.

Charging the battery

✧ You must charge the battery before using it for the first time. You can use the provided travel charger or connect your phone to your computer via a computer cable to charge your phone.

✧ When the battery is low, the phone will sound a warning tone and display a low battery message. If the battery is too low, the phone will automatically shut down. You need to charge the battery before you can continue using your phone.

➢ Charging with a travel charger

✧ Plug the small end plug of the travel charger into the multi-function jack. Improper connection of the travel charger may result in serious damage to the mobile phone and will not be warranted for any damage caused by mishandling.

Mini smartphone instruction manual

1. Plug the big end plug of the travel charger into the power outlet.

✧ You can use your phone while charging, but this will extend the battery charging time;

✧ The phone will heat up when charging, this phenomenon is normal and will not affect the life or performance of the phone.

2. When the battery is fully charged, disconnect the travel charger from the phone and unplug it from the power outlet.

Charging with computer data cable

Make sure your computer is turned on before charging.

1. Plug one end of the computer data cable (micro USB) into the multi-function jack.

2. Connect the other end of the computer data cable to the computer's USB port. Depending on the type of computer data cable used, it may take a while to start charging.

3. When the battery is fully charged, disconnect the computer data cable from the phone and unplug it from the computer.

➢ Format SD card storage

In the main menu, select Settings → Storage → Store Information → Format SD Storage.

Before formatting the SD card storage, remember to back up all the important data stored on your phone. The manufacturer warranty service does not include data loss due to user actions.

Power on and off3

To boot, press and hold [Power On/Off] the phone will turn on.

In areas where wireless devices are prohibited (such as airplanes and hospitals), please follow all posted warnings and instructions from official staff.

To use only your phone's non-network service, switch to

Mini smartphone instruction manual

airplane mode. Pull down the main interface and select the icon in the upper right corner to have flight mode, touch screen

Use your phone's touch screen to make it easier to select items or perform functions.

Learn the basics of using a touch screen;

✧ To avoid scratching the touch screen, do not use sharp tools.

✧ Do not allow the touch screen to touch other electronic devices. Electrostatic discharge may cause the touch screen to malfunction.

✧ Do not let the touch screen touch the water. The touch screen may malfunction in a humid environment or when exposed to water.

✧ In order to achieve the best results, please remove the touch screen protective film before using the phone.

✧ The touch screen has a protective layer that reveals tiny charges from the body. For the best performance, tap the touch screen with your fingertips. The touch screen does not react to the touch of a sharp tool, such as a stylus or pen.

The following operations can be performed to control the touch screen.

✧ Click; Click once with your finger to select or launch a menu, option, or application.

✧ Click and hold; hold down the item for more than 2 seconds to pop up a list of options.

✧ Scroll; Click and drag your finger up, down, left or right to move to the items in the list.

✧ Drag and drop; Click and hold an item with your finger, then drag your finger to move the item.

✧ Double-click; When viewing a photo, tap twice with your finger to zoom in or out.

✧ If the phone is not used for the specified length of time, the phone will turn off the touch screen. To turn

Mini smartphone instruction manual

the touch screen back on, press [Power On/Off].

✧ The backlight time can also be adjusted. In standby mode, then select Settings → Display → Sleep → Sleep time

Lock or unlock the touch screen and buttons.

The touch screen and buttons can be locked to prevent any accidental phone operation.

To lock, press [Switch button]. To unlock, press [Power On/Off] and follow the on-screen prompts to manually unlock.

Select wallpaper source

You can set the wallpaper to customize the standby screen or lock screen interface (the wallpaper can customize the pictures in the album).

✧ Lock screen wallpaper; set lock screen interface image.

✧ Desktop wallpaper; set desktop wallpaper.

✧ Live Wallpaper; You can set live wallpaper.

✧ Video wallpaper; set background video.

Move items on the idle screen

Click and hold the item you want to move.

✧ Drag the project to the desired location after the project vibrates.

✧ Remove item from standby screen Click and hold the item you want to remove, the item vibrates and X delete appears in the top left corner of the item.

➢ Click on X to delete the item

➢ Use the shortcut panel

When in standby mode or while using the app, touch the indicator icon area at the top of the screen and drag your finger down.

Open the shortcuts panel. You can activate or deactivate other features such as wireless connections and access a list of notifications, such as messages, calls, events, or processing status. To hide the list, drag the bottom border of the list up.

Swipe the shortcut icon left and right in the shortcuts panel

Mini smartphone instruction manual

to use the following options;

Wi-Fi; Turn Wi-Fi connection on or off. Long click this icon to enter the Wi-Fi settings interface.

✧ Data connection; start or close the data connection.

✧ Bluetooth; Turns Bluetooth wireless connection on or off.

✧ Airplane mode; Activate or deactivate flight mode.

✧ Scene mode; standard, mute, switch between conference and outdoor mode.

✧ One-click cleanup; Click to end the background application and release some memory.

✧ Brightness; Adjust the brightness of the screen.

✧ Battery; Shows device power usage.

✧ Hibernate; Adjust the delay time for the screen to automatically turn off.

✧ One-button lock screen; After clicking, the device is off screen and locked.

✧ More; You can set the shortcut function and sequence display in the shortcut panel.

Access application

➢ If you want to access the app of your phone;

✧ Open phone lock.

✧ Scroll left or right to other application screens.

✧ Select the launcher.

✧ Press the middle button to return to the main standby screen.

✧ The phone has a built-in motion sensor that detects the direction of the phone. If you rotate your phone while using certain features, the phone interface will automatically switch to landscape mode. If you want to set the interface does not change with the rotation of the phone, Open the shortcuts panel at the top of the screen and select Auto Rotate. Alternatively, select Settings → Display → Rotate Screen → Auto or Keep

Mini smartphone instruction manual

Portrait.

Widget

Click the Menu button from standby, select Add widget.

select any widget and press and drag to standby.

Custom phone

Customize your phone to your personal preferences; themes and desktop slideshow effects, etc.

✧ Set current time and date

✧ In the main menu interface, then select Settings →

Date & Time.

✧ Set time and date and change other options.

Turn touch tones on or off

In the main menu interface, then select Settings → Sounds & Notifications → Standards → click on the right setting → select the touch tone.

➢ Adjust the ringer volume

Press the up or down volume button to adjust the ringer volume.

➢ Switch to vibration mode

To shake or de-vibrate your phone, do one of the following:

✧ Switch directly in the shortcut panel mood mode.

✧ In standby mode, press and hold [Switch button].

✧ Then select the vibration mode.

➢ Change ringtone

✧ In the main menu interface, then select Settings → Sound & Notifications → Standards → Point Right Settings → Phone Ringtone / Black Receipt Notification Tone / Message Ringtone. Select a ringtone from the list and select OK.

➢ Select the wallpaper of the standby screen

➢ In standby mode, press menu → wallpaper → select the type of wallpaper to be set.

Adjust the brightness of the display Adjust screen brightness under the setup menu.