

1. In the main menu interface, then select Settings → Display → Brightness.
 2. Turn off the button on the auto-adjust brightness.
 3. Drag the slider to adjust the level of brightness.
- The brightness level of the display affects the speed at which the phone consumes battery power.

Set the unlock pattern

An unlock pattern can be set to prevent others from using the phone without permission.

1. In the main menu interface, then select Settings → Security → Screen Lock → Pattern.
 2. Watch the screen tips and sample patterns and choose Next (if necessary).
 3. Drag your finger to connect at least four points and draw a pattern.
 4. Choose to continue.
 5. Redraw the pattern to confirm.
 6. Select confirmation.
- ✧ After setting the unlock pattern, you will be asked to enter the unlock pattern each time you turn it on. If you want your phone to no longer require an unlock pattern, select Settings → Security → Screen lock → Draw the lock set pattern → None.

Note: If you select "None", the screen will not be locked.

- ✧ If you forget to unlock the pattern, you need to bring your phone to its customer service center to unlock it.
- ✧ Responsible for loss of passwords or personal data or other damage caused by the use of illegal software.

Lock SIM card or USIM card

The phone can be locked by activating the PIN code provided with the SIM card or USIM card.

1. In the main menu interface, then select Settings → Security → Settings SIM card lock mode → Lock SIM card.

2. Enter your PIN and choose OK.
 - ✧ If you activate the PIN lock, you must enter your PIN every time you turn it on.
 - ✧ If the PIN code is entered incorrectly three times, the SIM card or USIM card will be locked. You must enter your PIN unlocking key (PUK) to unlock your SIM card or USIM card.
- If the SIM card or USIM card is locked due to incorrect PUK input, bring the card to the service provider to unlock it.

Dial

Learn how to use call features, such as making and receiving calls through available options during a call, or customizing and using call-related features.

- call records
- Can view call history filtered by type.
1. In standby mode, click the dial button to enter the dialing interface and call log interface.
 2. In the call log interface, you can press the call type of the call.
 3. Select the record for which you want to view detailed call details.

Dialpad

Click the icon in the lower left corner of the main interface to close or pop up the dial pad to operate the contacts recorded in the call. Each time you dial a contact number, the contact automatically joins the call history page.

Function menu

Includes contacts, speed dials, setup options.

Browser

Learn how to create and send text messages (SMS) or multimedia messages (MMS), as well as view and manage the messages you have sent or received. Sending or receiving information outside the local service area may incur additional charges. For more information, please consult your service

- provider.
- Music
- Learn how to listen to your favorite music using the music player.
- ✧ Depending on the phone software, some file formats are not supported.
- ✧ If the file size exceeds the available storage space, an error occurs when opening the file.
- Add music**
- Transfer music files to your phone:
- ✧ Download from wireless web
 - ✧ Copy through data line
 - ✧ Transmission via Bluetooth
- Album

Learn how to view images on your memory card and play them.

- Radio
- Listen to radio programs on the radio and record your favorite while listening. Before using the FM radio, be sure to connect the supplied headphones (the headphones are used as the radio antenna).
- Recorder
- Help you quickly save your voice recordings, you can set your favorite sound quality and recording mode.
- Clock
- You can set an alarm, view world time, use timers and stopwatch functions.

Note: Support shutdown alarm.

Calculator

Learn how to perform mathematical calculations directly on your phone, like a normal handheld or desktop calculator, switching to a scientific calculator when you are in landscape orientation.

Document management

Learn to quickly and funlly open all your pictures, videos, music, documents and other kinds of files stored in your phone's storage.

note:

1. In addition to MP3, MP4 and picture files, please do not move or delete the system files;
2. It is recommended to install the APK installation package that comes with the phone storage. If you install the APK file package yourself, the phone will crash and restart, and you will not be responsible for it.

- Calendar
- You can view the date, view the lunar calendar, and set calendar events for easy use.
- e-mail
- Send or receive emails from your phone by configuring your personal or corporate email account.
- Video
- Can view, delete video files and sort videos.

Contact

- All contacts
- Learn how to create and manage a list of personal or corporate contacts stored on your phone's memory or SIM card or USIM card. Save contact's name, mobile number, home phone number, email address, and more.

- Group
- Set up a phone contact group.
- Calculator
- Learn how to perform mathematical calculations directly on your phone, like a normal handheld or desktop calculator, switching to a scientific calculator when you are in landscape orientation.

Setting

WLAN

Set WLAN status, network notification, add network, etc

Bluetooth

Set Bluetooth status, search for Bluetooth devices, and modify Bluetooth names, etc.

SIM card

SIM card management; This function can choose to close or open the SIM card; select whether the data connection and international roaming are open;

More

- Airplane mode; All language services can be disabled.
- Default SMS app; Set default SMS app
- Network and sharing and portable hotspots; WLAN hotspots, USB sharing networks, Bluetooth shared networks, network sharing and portable hotspot settings
- VPN; You can add a VPN profile.
- Mobile network; set up data connections, 4G services, preferences, etc.

display

Set functions related to mobile phone display, such as screen standby time, auto-rotate screen, interactive screen saver, screen lock notification, brightness adjustment, wireless display, etc.

Sound and notification

Set the phone mode. Default mode: standard, mute, conference, outdoor mode.

Set phone ringtones, message ringtones, volume, etc., as well as set custom profiles.

Storage

View phone and SD card storage

battery

View phone battery usage

Application

Manage applications locally and change administrative settings for installed applications.

Safety

Screen lock mode; set to none, slide, pattern, PIN, password, fingerprint recognition.

Auto lock; select auto lock time

Owner information; After editing, the information you edit will be displayed in the standby lock.

Encrypted phones; Please see their instructions for specific information.

Set the SIM card lock.

Lock the SIM card; Click to lock the SIM card, enter the PIN code and turn on the lock SIM card function.

Change SIM card PIN; Enter the original PIN code first, then enter the new PIN code twice.

Show password; Turns the display password on and off.

Device Manager; View or deactivate Device Manager.

Unknown source; Whether to allow the installation of a location-sourced app, it can be turned on and off.

Self-start management; Allow or disable the application to run automatically

App permissions; Manage app permissions for security and privacy

Mobile phone theft; remotely lock the phone or remotely destroy the data

Storage Type; Shows the type of storage.

Trusted credentials; Use certificates and credentials to ensure secure use of individual applications.

Install from phone storage; Install the encryption certificate stored in the phone storage.

Clear credentials; delete the contents of the voucher in the phone and reset the password.

Account

Add account; Change the settings of the auto sync feature or

Manage accounts to sync.

language and keyboard

Language and input method; you can choose the language, set the keyboard, select the input method.

Backup and reset

Backup and reset; Restoring the factory default settings will erase all data on the phone, please be cautious.

Date and time

Automatically determine date and time; use the network to provide time.

Automatically determine the time zone; Use the time zone provided by the network.

Set date; Set the current date manually.

Set time; Set the current time manually.

Select time zone; set local time zone.

Use 24-hour format; set to display time in 24-hour format.

Timer switch

Set the time when the phone is turned on and off.

Print

Connect the printer to print the necessary images and other files

About mobile phone

Query information about your phone, such as system upgrades, status information, legal information, phone model, version number, processor, etc.

Common problems and solutions; In order to save your time and unnecessary expenses, please do the following simple check before contacting professional after-sales service.

Unable to start phone

Check if you press and hold the [Power On/Off] key for at least 1 second.

Check if the battery is in poor contact. Please remove it and reinstall it. Try again.

Check if the battery is exhausted, please charge.

Start the phone, there is information display.

Enter the phone lock password and select the auto lock function. You must enter the phone password before using it.

Enter the PIN code and select the function to enter the PIN every time you turn it on. You must enter the PIN code.

Enter the PUK code; connect the error PIN code three times and lock the SIM card. Enter the PUK code provided by the operator.

SIM card error

The metal surface of the SIM card is dirty. Wipe the metal contact point of the SIM card with a clean cloth.

If the SIM card is not installed, install the SIM card correctly according to the instruction manual.

SIM card is damaged, contact your network service provider.

Unable to connect to network

The signal is weak. Please move to a strong signal and try again.

Exceeding the network coverage area of the network service provider.

Invalid SIM card, contact your network provider.

The number cannot be called out

Please confirm whether the dialing button is pressed after dialing.

Please confirm if the call is forbidden due to arrears.

Please confirm if the SIM card is valid.

Please confirm if the call barring function is set.

Please confirm if the fixed dialing function is set.

Poor call quality

Please check if the volume adjustment is not suitable.

Using mobile phones in poorly received areas, such as near high-rise buildings or basements, radio waves cannot be effectively communicated.

Use the phone during a call-intensive period, such as after

work hours, the line is congested and the call cannot be made.

Number cannot be called in

Please confirm that the phone is turned on and connected to the network.

Please confirm if you are prohibited from calling due to arrears.

Please confirm if the SIM card is valid.

Please confirm if the call restriction function is set.

Contacts can't hear you

Please confirm that the microphone is turned on.

Please keep the microphone in the lower part of the phone close to your mouth.

Short standby time

The standby time is related to the system settings of the network and may be in an area where reception is poor. When the signal is not received, the phone will continue to transmit to find the base station, which consumes a large amount of battery power, resulting in a shorter standby time. Please phone, move to a place with strong signal or temporarily turn off the

Need to replace the battery, please replace the battery.

Unable to charge

Poor contact, check if the plug is connected.

Dirty, wipe the phone and battery terminals with a soft, clean cloth.

When charging in an environment below 0 ° C or above 45 ° C, please change the charging environment.

The battery or charger is damaged and needs to be replaced.

If the above information does not help you solve the problem, please record your phone model and serial number, authorization or insurance policy information, and a clear description of the problem, then contact your local after-sales service provider.

Attention

Explosion hazard if you replace it with the wrong type of battery. Always dispose of the used battery as instructed!