 


真无线耳机

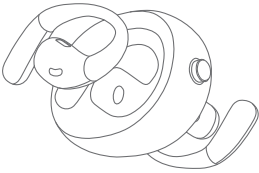

使用说明书
使用前请阅读使用说明书

产品规格

 
产品型号:A60
蓝牙版本:V5.4
有效距离:约10米
喇叭直径:φ14.2mm
阻抗:16Ω
频率响应:20Hz-20KHz
麦克风灵敏度:-42dB±1dB
耳机额定输入:5V=50mA
充电仓额定输入:5V=300mAh
充电仓额定输出:5V=100mAh
耳机电池额定容量:50mAh
充电仓电池额定容量:380mAh
使用时长:约7小时(耳机)
耳机充电时长:约1.5小时
充电仓充电时长:约1.5小时

物品清单




充电仓 *1 耳机 *1 充电线 *1 说明书 *1

欢迎使用 入耳式TWS蓝牙耳机

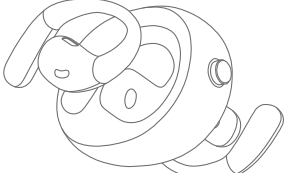


取出并配对
第一次使用时,请同时取出左右两侧的耳机。耳机白灯与冰蓝灯交替闪烁,耳机将自动配对。

 如何正确佩戴耳机

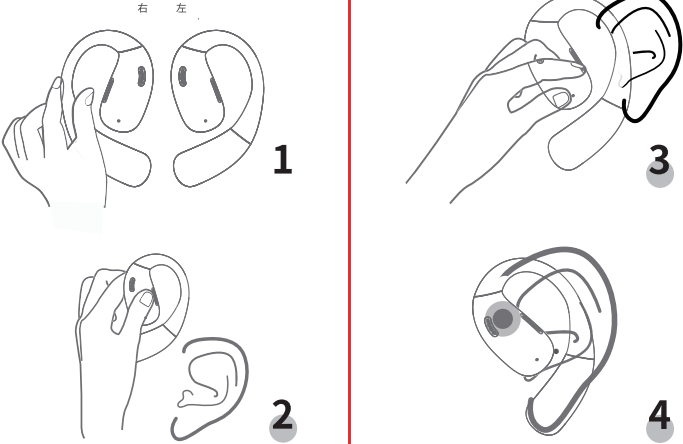

1. 取出耳机
2. 将耳机放入耳中
3. 调整耳机位置
4. 佩戴完成

 产品说明

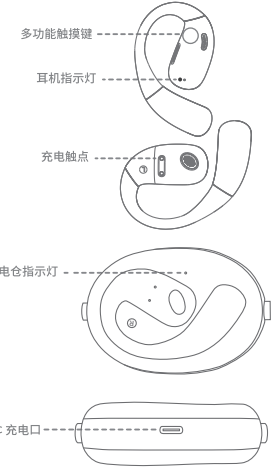

多功能触摸键
耳机指示灯
充电触点
充电仓指示灯
Type-c 充电口

触摸操作



使用蓝牙设备连接
打开准备配对的蓝牙设备的蓝牙设置选项,进入选项,找到耳机的蓝牙配对名“A60”。点击配对名称进行配对。

单击



单击
音乐模式:播放/暂停
通话模式:接听/挂断
双击:音乐模式(音量增大/减小)

三击



 
三击
音乐模式:上一曲/下一曲
长按左耳多功能键2秒:提示音“叮”二声
再次长按右耳多功能键2秒:提示音“叮”二声
*备注1:单耳使用时,无法切换游戏模式和音乐模式
*备注2:出厂设置默认为音乐模式

游戏模式与音乐模式切换



游戏模式
音乐模式
长按右耳多功能键2秒:提示音“叮”二声
再次长按右耳多功能键2秒:提示音“叮”二声
*备注1:单耳使用时,无法切换游戏模式和音乐模式
*备注2:出厂设置默认为音乐模式

清除蓝牙配对历史记录

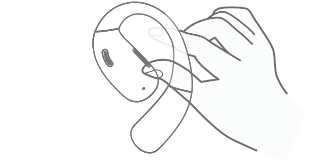

清除蓝牙配对历史记录
双耳从充电仓取出后会自动开机配对,耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下,分别对左耳机和右耳机连续五击多功能键,提示音“嘟”四声后,耳机自动关机后将双耳机放回充电仓,再将双耳机取出,双耳机会自动配对,完成后即可连接蓝牙设备使用。

产品有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	铜(Cu)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路板组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
表中标记“X”的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。
印刷电路板组件:包括印刷电路板及其零部件,电子元器件等,根据产品型号不同,您所购买的产品可能不会含有以上所有部件

产品注意事项

 
(1)除说明书有特殊标示的操作方式以外,请勿尝试拆卸或更换产品内的任何零件。
(2)本产品内置可充电电池,禁止撞击、挤压、刺破、短路电池,若出现温度过高、变形、鼓胀、漏液等异常现象,请停止使用,请勿置电池于明火、阳光暴晒、加热器、火炉等高温以及高压环境中,电池浸水后禁止使用。耳机使用后,勿将耳机放在潮湿、充满灰尘、油烟、蒸气、阳光直射等

高温高压等环境中,以免造成耳机及电池损坏。电池可充放电次数有限,最终会老化,电池使用异常时可更换新电池,但切勿自行更换电池,如果电池更换不当会有爆炸危险。只能通过售后服务商更换同等类型或者等效类型的电池使用。(3)产品使用报废后,勿将产品扔置火中,废旧处理应严格按照垃圾分类分类进行处理,请合理正确的使用此产品,以免造成一定的伤害和环境破坏。(4)在耳机使用过程中,由于近距离,中间有障碍物或者有其他无线电设备、蓝牙耳机、蓝牙耳机等一系列的干扰情况下,耳机在使用时听音乐、看视频、玩游戏等情况下,会出现偶尔的卡顿、语音不同步或者断连的情况。如出现此情况请重新连接耳机或者远离干扰物。(5)充电时充电器请使用输出电压为直流DC 5V/1A的充电设备,必须选择正规生产厂家获得CCC安全认证的充电设备,请勿使用快充充电器,以免造成电池负载太大,而产生电池损坏。连续充电时间请勿超过规定的充电时间,充电时请勿使用,以免造成损坏。

安全与有效使用指南

①电磁干扰:
电子设备:为避免电磁干扰或配置不兼容的影响,请在标有明确指示的场所中按照相关规定关闭您的蓝牙设备。
民航:登机后,请根据乘务人员的提示关闭您的蓝牙耳机。飞行中严禁使用蓝牙耳机,以免对飞机通信系统产生干扰。
②安全事项:
放置:建议您在不用蓝牙耳机时,将其放置在不受挤压的地方,挤压有可能会对产品造成损坏或人身伤害。
儿童:不要让幼儿玩耍蓝牙耳机,其中一些小部件可拆卸,有可能被吞咽而造成危险。

True Wireless Headset

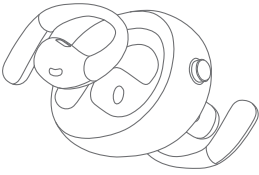


无线耳机
A60 产品手册

Specification of Product


Model of Product: A60
Version: V5.4
Effective Distance: Approx. 10m
Speaker Diameter: φ14.2mm
Impedance: 16Ω
Frequency Response: 20Hz-20KHz
Microphone Sensitivity: -42dB±1dB
Earphone Input: 5V=50mA
Charging Case Input: 5V=300mA
Charging Case Output: 5V=100mA
Earphone Battery Capacity: 50mAh
Charging Case Battery Capacity: 380mAh
Duration: Approx. 7H (Earphone)
Earphone Charging Time: Approx. 1.5H
Charging Time of the Charging Case: Approx. 1.5H

 Item list

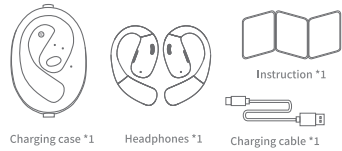


充电仓 *1 耳机 *1 充电线 *1 说明书 *1

 Welcome to the In-Ear TWS Bluetooth Headset

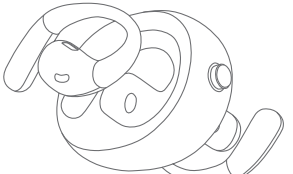


取出并配对
When using for the first time, take out the left and right earphones at the same time. When the white light and ice blue light of the earphones flash alternately, the earphones will enter the automatic pairing mode.

 How to wear headphones correctly

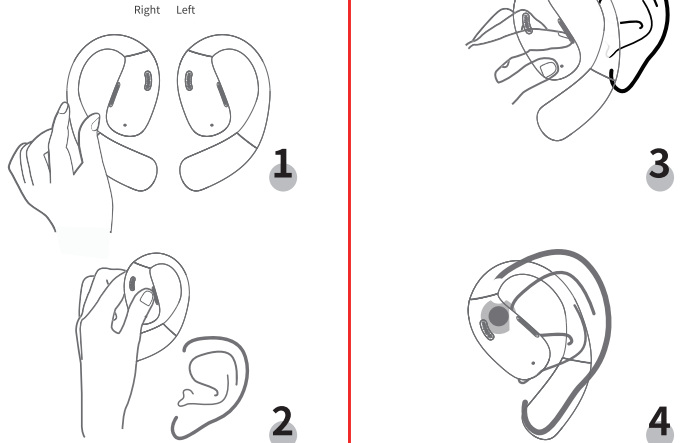


1. 取出耳机
2. 将耳机放入耳中
3. 调整耳机位置
4. 佩戴完成

 Product Description

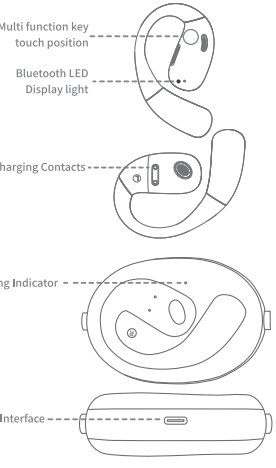


多功能触摸键
蓝牙耳机LED显示灯
充电触点
充电仓指示灯
Type-c Interface

 Touch Operation

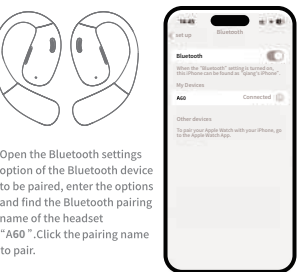


Connect with Bluetooth device
打开准备配对的蓝牙设备的蓝牙设置选项,进入选项,找到耳机的蓝牙配对名“A60”。点击配对名称进行配对。

 Indicator Light Description

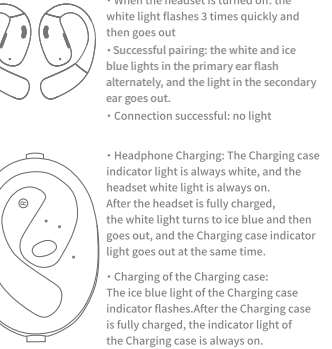


Indicator Light Description
• When the headset is turned on: the white light and the ice blue light flash alternately
• When the headset is turned off: the white light flashes 3 times quickly and then goes out
• Successful pairing: the white and ice blue lights in the primary ear flash alternately, and the light in the secondary ear goes out.
• Connection successful: no light
• Headphone Charging: The Charging case indicator light is always white, and the headset white light is always on.
After the headset is fully charged, the white light turns to ice blue and then goes out, and the Charging case indicator light goes out at the same time.
• Charging of the Charging case: The ice blue light of the Charging case indicator flashes. After the charging case is fully charged, the indicator light of the Charging case is always on.

 Once Press

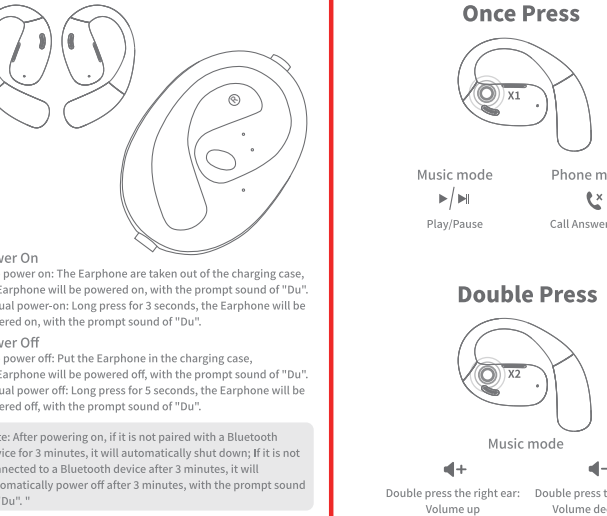


Once Press
Music mode: Play/Pause
Phone mode: Call Answer/End
Double Press: Music mode (Volume up/down)

 Long Press

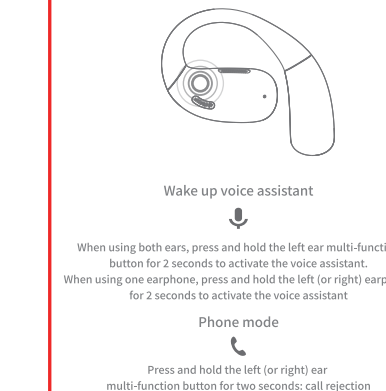


Long Press
Wake up voice assistant
When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant.
Phone mode: Press and hold the left (or right) ear multi-function button for two seconds: call rejection

 Triple Press

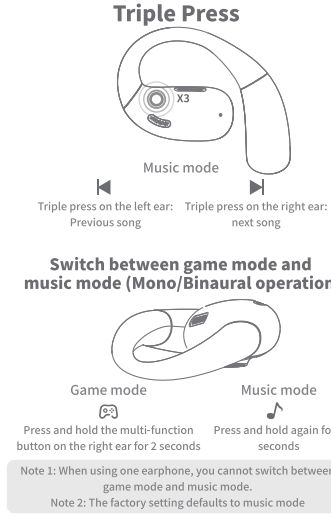


Triple Press
Music mode: Previous song/next song
Switch between game mode and music mode (Mono/Binaural operation)
Game mode: Press and hold the multi-function button on the right ear for 2 seconds
Music mode: Press and hold again for 2 seconds
Note 1: When using one earphone, you cannot switch between game mode and music mode.
Note 2: The factory setting defaults to music mode

 Clear Bluetooth pairing history

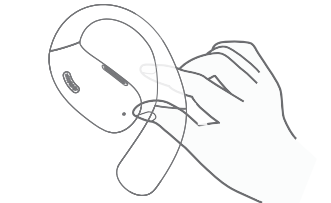

Clear Bluetooth pairing history
When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

 Wireless pairing mode

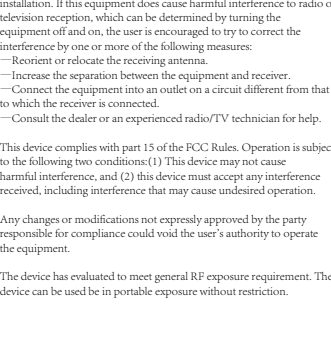

Wireless pairing mode
1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound “beep”

FOC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
The device has evaluated to meet general RF exposure requirement. The device can be used in portable exposure without restriction.