 


产品说明书
尺寸:50*75mm
材质:80g书写纸
双面印刷
风琴页
(此页不印)

真无线耳机

A82

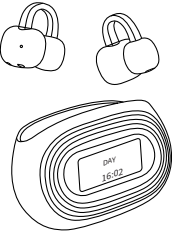

 
使用说明书 使用前请阅读使用说明书

产品规格

产品规格:A82
无线版本:V6.0
有效距离:>10m
喇叭直径:φ10mm
耳机额定输入:5V=40mA

充电仓额定输入:5V=300mA
耳机电池容量:40mAh
耳机仓电池容量:380mAh
使用时长:约6h(70%音量)
耳机充电时长:约1h
充电仓充电时长:约2h

产品清单

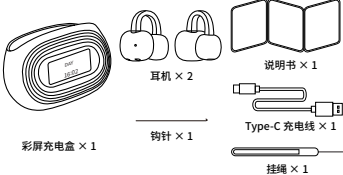

基本操作

彩屏仓
开机:取出耳机开机/手动长按3s
关机:放入充电盒关机/手动长按3s
单击按键:锁屏/解锁
双击屏幕:唤醒
左右划动:切换界面
三击按键:配对耳机与充电仓
长按5秒:重启/关机/恢复出厂设置
从屏幕左边缘向右划动,退出当前菜单页面

屏幕状态栏说明

- ✖ 红色,耳机在充电仓或耳机未与仓连接;
- ✖ 白色,耳机出仓,与充电仓连接上,耳机未与设备连接;
- ✖ 蓝色,耳机与仓连接并被设备连接上。

电量显示

- Ⓛ Ⓡ 白色,耳机在充电仓待机,显示当前电量百分比;
- Ⓛ Ⓡ 灰色,耳机出仓,显示当前电量百分比;
- 白色,正常使用中
- 蓝色,正在充电中

操作功能

功能	操作方式
播放/暂停	单击左 / 右耳
音量+	双击右 (R) 耳
音量-	双击左 (L) 耳
上一曲	三击左 (L) 耳
下一曲	三击右 (R) 耳
接听/挂断	单击左 / 右耳
拒接电话	长按左 / 右耳1.5秒
游戏模式	长按右 (R) 耳2秒
激活语音助手	长按左 (L) 耳2秒

产品说明

耳机指示灯 -----
麦克风-----
多功能触摸键-----

充电触口-----

多功能显示屏-----

Type-C充电口-----

功能键-----

连接操作



- 打开手机蓝牙设置;
- 取出耳机,自动进入配对模式(白蓝灯交替闪烁);
- 在手机中选择“A82”完成连接;
- 后续使用自动回连。



显示屏操作说明

- 音乐播放器**
连接手机后,打开音乐播放器播放音乐,彩屏仓界面可操控音乐暂停、播放、上一曲、下一曲以及歌词滚动显示。
- 音量**
在彩屏仓界面点击音量喇叭图标进入界面,点击喇叭“+”“-”图标调节音量大小,最大音量“16”最小“0”,最大音量有提示音。
- 均衡器**
音效有“标准”、“摇滚”、“流行”、“经典”、“爵士”5种音效,点击左右图标切换不同的风格。
- 模式选择**
音乐模式和游戏模式切换。
- 语音切换**
点击语言设定图标,点击左、右按钮进行语言切换,共有17国语言,默认语言为英文。
- 锁屏切换**
点击锁屏壁纸图标进入更换锁屏壁纸,点击左右三角图标可更换当前壁纸。

- 背景切换**
点击背景壁纸图标进入更换背景壁纸,点击左右三角图标可更换当前壁纸。
- 寻找耳机**
耳机和手机连接后,点击查找左耳机、右耳机,查找状态耳机会发出“滴”“滴”的警报声。
- 点赞**
耳机和手机连接后进入抖音,可在仓上控制上翻视频、下翻视频以及点赞(iOS需要打开手机辅助功能)。
- 拍照**
耳机和手机连接后手机打开相机拍照功能,在彩屏仓上点击拍照图标即可控制手机进行拍照。
- 语音助手**
耳机和手机连接后,点击语音助手图标,可激活手机语音助手。
- 设置**
进入设置菜单,可设置:
1. 屏幕亮度调整;2. 时间设定;3. 休眠时间选择;4. 系统菜单;5. 查看蓝牙版本信息。


注意事项与保养

- 请务必注意:**
 - 本产品仅支持“IPX4 防水”,请勿浸泡或冲洗;
 - 避免耳机与充电仓接触腐蚀性液体;
 - 请使用配套或认证 Type-C 数据线充电。
- 清洁保养:**
 - 每周使用棉签或软布清洁耳机与充电仓的充电触点;
 - 外壳可用轻微湿润的软布擦拭,勿使用酒精或化学清洁剂。
- 电池维护:**
 - 长时间不使用请充满电后存放,并每3个月充电一次;
 - 避免在高温或低温环境中使用或充电。

FCC ID: 2A5N2-A82

True wireless earbuds

 A82

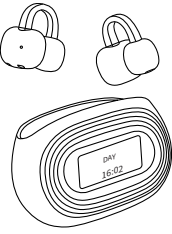


Instruction manual Read the instruction manual before use

Product Specifications

Product Specifications: A82
Wireless Version: V6.0
Effective Range: >10m
Speaker Diameter: φ10mm
Headphone Rated Input: 5V=40mA

Charging case rated input: 5V=300mA
Earbud battery capacity: 40mAh
Charging case battery capacity: 380mAh
Usage time: about 6h (70% volume)
Earbud charging time: about 1h
Charging case charging time: about 2h

 Product List

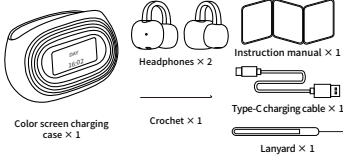

Basic Operations

Color Screen Warehouse
Power On: Take out the earphones to turn on / press and hold for 3 seconds manually
Power Off: Put the earphones into the charging case to turn off / press and hold for 3 seconds manually
Single Tap Button: Lock/Unlock screen
Double-tap the screen: Wake up
Swipe Left or Right: Switch interface
Triple Tap Button: Pair earphones with charging case
Press and Hold for 5 Seconds: Restart / Restore factory settings
Swipe from the left edge of the screen to the right: Exit the current menu page.

Screen status bar explanation

- ✖ **Red:** The earphones are in the charging case or the earphones are not connected to the case;
- ✖ **White:** The earphones are out of the case, connected to the charging case, but not connected to a device;
- ✖ **Blue:** The earphones are connected to the case and connected to a device.

Battery display

- Ⓛ Ⓡ **White:** Earphones are in the charging case standby, showing the current battery percentage;
- Ⓛ Ⓡ **Gray:** Earphones are out of the case, showing the current battery percentage;
- **White:** Normal use;
- **Blue:** Charging;

Operating function

Function	Operation Method
Play/Pause	Single click left / right ear
Increase Volume	Double click right (R) ear
Decrease Volume	Double click left (L) ear
Previous Track	Triple click left (L) ear
Next Track	Triple click right (R) ear
Answer/Hang up Call	Single click left / right ear
Reject Call	Long press left / right ear for 1.5 seconds
Game Mode	Long press right (R) ear for 2 seconds
Activate language assistant	Press and hold the left (L) ear for 2 seconds

Product Description

Headphone indicator light-----
Microphone-----
Multi-function touch button-----

Charging port-----

Multi-function display-----

 
Type-C charging port-----

Function button-----

Connection operation



- Open the Bluetooth settings on your phone;
- Take out the earphones, they will automatically enter pairing mode (white and blue lights flashing alternately);
- Select “A82” on your phone to complete the connection;
- Subsequent use will automatically reconnect.

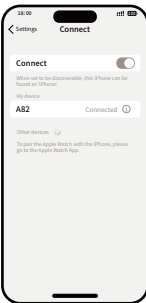

Display Screen Operating Instructions

- Music Player**
After connecting the phone, open the music player to play music. The color screen warehouse interface to enter the interface. Click the speaker “+” and “-” icons to adjust the volume. The maximum volume is “16” and the minimum is “0”. There is a prompt sound at the maximum volume.
- Volume**
There are five sound effects: 'Standard', 'Rock', 'Pop', 'Classic', and 'Jazz'. Click the left or right icons to switch between different styles.
- Equalizer**
Switch between music mode and game mode.
- Mode Selection**
Click the language settings icon, then click the left or right button to switch languages. There are 17 languages available, with English set as the default.
- Language Switch**
Click the lock screen wallpaper icon to change the lock screen wallpaper, and click the left or right triangle icons to switch the current wallpaper.
- Lock screen switch**

- Background Switch**
Click the background wallpaper icon to change the background wallpaper, and click the left and right triangle icons to switch the current wallpaper.
- Looking for headphones**
After the headset is connected to the phone, click to locate the left earphone or right earphone. The earphone will emit a 'beep beep' alert during the locating process.
- Like**
After connecting the headphones to the phone and entering Douyin, you can control video scrolling up, scrolling down, and liking on the warehouse (iOS requires enabling the phone's accessibility features).
- Take a photo**
After the earphones are connected to the phone, open the camera function on the phone. You can control the phone to take photos by clicking the camera icon on the color screen compartment.
- Voice Assistant**
After the headphones are connected to the phone, tap the voice assistant icon to activate the phone's voice assistant.
- Settings**
Enter the settings menu to configure: 1. Screen brightness adjustment; 2. Time setting; 3. Sleep time selection; 4. System menu; 5. View Bluetooth version information.

Precautions and Maintenance

- * Please take note:**
 - This product only supports “IPX4 splash-proof”, do not soak or rinse it;
 - Avoid contact of the earphones or charging case with corrosive liquids;
 - Please use the provided or certified Type-C cable for charging.
- * Cleaning and Maintenance:**
 - Clean the charging contacts of the earphones and charging case weekly with a cotton swab or soft cloth;
 - The outer case can be wiped with a slightly damp soft cloth; do not use alcohol or chemical cleaners.
- * Battery Maintenance:**
 - If not in use for a long time, fully charge before storing, and charge once every 3 months;
 - Avoid using or charging in high or low-temperature environments.

FCC Caution.

(1)§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

According to §15.247(e)(i) and §1.1307(b)(1), systems operating under the provisions of this section shall be operated in a manner that ensures that the public is not exposed to radio frequency energy level in excess of the Commission's guidelines.