


规格：70X91mm

■ INTRODUCTION FOR KEY FUNCTIONS

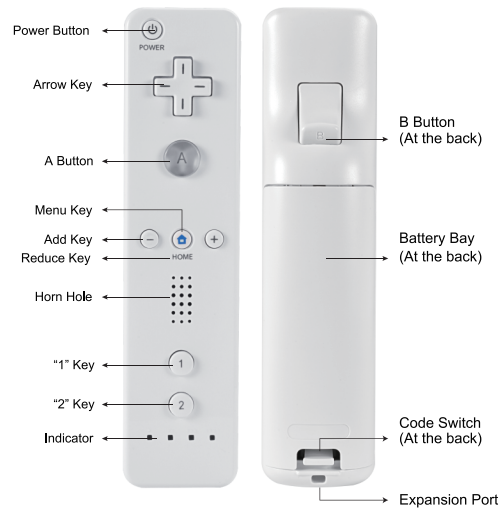

■ HOW TO PAIR WITH CONSOLE?

First Step :

Power on the console.

Second Step:

Open the back cover of remote controller, then put into two new AA batteries. You will find a small red SYNC button beside the battery slot. Press SYNC button, FOUR lights (the Player LED) on the controller will flash.

Third Step:


Open the SD slot on the console, you will find a red SYNC button next to the SD slot. Then press this SYNC button.

Fourth Step:

Wait for a few seconds, the Player LED on the controller will stop flashing and light up when pairing is complete. The Player LED indicates the player number of the controller currently in use.

NOTES:

1. Powered by 2 AA batteries (batteries are not included and you need to purchase them.)
2. This controller is designed by third party company, not made by Nintendo, perfectly fits for console.

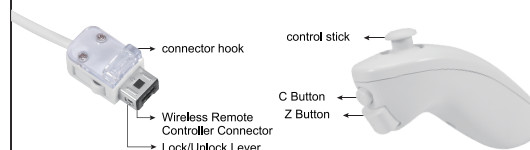

■ How to connect Wireless Remote Controller and Nunchuk?

Nunchuk can be directly connected to the Expansion Port of the Wireless Controller, then can use. (Nunchuk cannot be used alone)

Note:

Press the Lock/Unlock Lever on both sides of the Nunchuk data cable plug, and the plug can be easily unplugged from the wireless remote controller.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction