

产品使用手册



- ◆ 本节内容是为了使用者能正确使用标签打印机，请认真阅读并遵守。
- ◆ 避免直射光线、热源、灰尘、潮湿、易受震动或易被风吹倒的地方，亦不可浸水入内，勿扔放、震动机器，以免损坏机器的零部件，以免损坏机器的零部件。
- ◆ 避免频繁的插拔外部设备（如充电接口等），以免造成插口松动接触不良影响本机的正常使用。
- ◆ 禁止自行拆卸、修理、改造、重摔，以免对本机造成损坏，如本机出现故障，请及时联系客服中心进行维修。
- ◆ 切勿接触苯、稀剂等化学物品。
- ◆ 骑行、驾驶汽车及摩托车时请勿使用，以免造成危险。
- ◆ 警告：所有包装材料，如胶带、提手、塑料片、捆线纸、标签等，都不属于产品的一部分，不适用于儿童玩耍。
- ◆ 为了您孩子的安全，请妥善处理以上包装材料。废旧电池、旧电子产品，请分类妥善处理。

如果电池长期未使用或电池电量耗尽，再次充电时可能无法立即正常开机，请持续充电一段时间后再开机使用。

1. 请勿将电池浸于水中，注意防潮防腐。
2. 请勿擅自拆卸或改造电池。
3. 请勿短路电池正负电极。
4. 请勿将电池置于60℃高温中或靠近火源。
5. 电池浸水后禁止使用。
6. 内含小零件，不适宜三岁以下儿童使用！
7. 玩耍时请勿靠近火源！
8. 用旧型号电池更换会有爆炸危险，务必按照说明处置废弃的电池。
9. 注意撕纸刀锋利，请小心勿触。
10. 注意剪刀刀锋，请小心勿触。
11. 本产品不属于儿童玩具，14岁以下儿童应在成人的监护下使用，根据我可获得国家强制性产品CCC认证标准，本产品出厂均不含电源适配器，用户若使用电源适配器供电，则需购买配套使用电源CCC认证并满足标准要求的产品电源适配器。

电池容量：800mAh	打印方式：热敏/无墨打印
产品尺寸：88.88*40.63*80.50mm	清晰度：200dpi
打印纸规格：57*26mm	输入电源：DC5V --- 1A

打开手机蓝牙后，用手机
下载好的APP，在“我的设备”
标签栏连接打印机，连接成功
后即可打印纸条。
(图中型号仅供参考)

The diagram consists of two panels. The left panel shows a top-down view of a printer with a white sheet of paper being inserted into its slot. The right panel shows the same printer with a printed image of a cat on the paper, which is now partially inside the machine.

尊敬的用戶：感謝您購買本公司產品！本公司產品服務政策參照中華人民共和國頒布的《微型計算機商品修理更換退貨責任規定》的有關規定執行，三包有效期為自購買之日起一年。

1. 對於下列原因導致的產品故障、異常或損壞，我公司將不承擔三包責任，請您選擇有服務：(1) 超過三包有效期或無效三包憑證的（能够證明產品在三包有效期內的除外）；

(2) 未按產品使用說明、維護、保管而造成損壞的；

(3) 經非指定維修機構拆換的；

(4) 擅自塗改三包憑證與實際故障產品型號、序列號（若有）不符的；

(5) 意外因素或人為行為（包括誤操作、碰碰等）及因不可抗力造成損壞的。

姓 名:	产品型号:
联系电话:	购买地址:
购买日期:	备 注:
联系地址:	

This product should not be placed in wet environment for a long time, please wipe the surface stains with dry cloth. Wires, plug shells and other components must be regularly checked for damage, and damage should be stopped immediately until repaired. In order to reduce battery aging and swelling: If it is not used for a long time, it needs to be charged once every three months or so.

For first-time use, please charge the device first. Press and hold the power button for about 3 seconds to turn the device on/off.

Cover the paper bin, the machine can automatically absorb paper after normal use

1. Please use 5V charger to charge according to the specification to avoid damage to the machine;
2. Disassembly, impact, extrusion or fire are prohibited ;
3. If severe bulging occurs , do not continue to use .
4. Do not put in high temperature environment , battery after immersion is prohibited to use;
5. Replacement with the wrong type of battery can be explosive , be sure to follow the instructions to dispose of used batteries .

1. when charging , please gently insert or pull out the charging line to prevent excessive force damage to the port;
2. After charging , please unplug the charging line in time
3. In order to avoid danger , do not use or charge in high temperature ,high humidity , excessive smoke and dust environment . such as: bathroom , steam room , open fire , etc ;
4. Improper charging may lead to print head damage ;
5. Do not touch the print head to prevent overheating and scalding ;
6. Tear paper blade sharp , be careful not to touch ;
- 7.Contains small parts , not suitable for children under three years of age to use
- 8.The Guardian should be in custody while the child is playing.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.