 



YED 14+ YE311 2.4G 2.4G遥控船模操作指南




- 注意事项**
1. 船下水会自动导通电源，可直接与遥控器连接。
 2. 船没有自动翻船功能，操控时注意不要翻船或撞击障碍物导致翻船。
 3. 导航舵需手动调整方向。
 4. 船操控距离不得超过45米，否则可能会失灵。
 5. 船行驶的时间大约是20分钟，低电时遥控船灯闪，遥控器蜂鸣器报警，低电时需回到可控范围内行驶，否则会因电池没电直接停止航行而导致拿不回船。
 6. 船行驶时需避开水草等杂物，避免缠住螺旋桨。

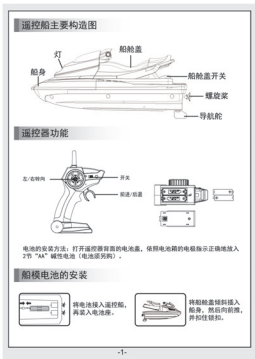

 -1-

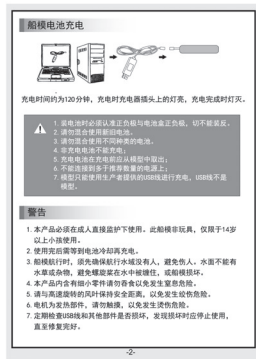


-2-

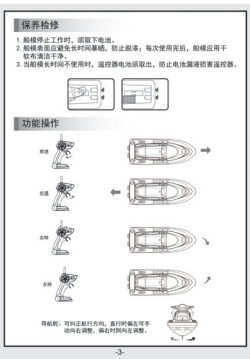 

-3-

 YED 14+ YE311 2.4G 2.4G Remote-Controlled Speedboat Operation



- Cautions**
1. The boat will automatically power on when placed on water, and connect to the remote control.
 2. The boat does not have a self-righting function, so take care not to flip it or crash into obstacles during operation.
 3. The rudder direction must be adjusted manually.
 4. Do not pilot the boat more than 45m away from the remote control, otherwise connection will be lost.
 5. The boat can be operated for approximately 20 minutes. When the battery is in low state, the boat light will flash, remote control buzzer alarm. When the battery is low, you need to return back the boat to avoid the boat stop running and can't go back.
 6. Avoid aquatic plants during operation, as these may get entangled with the propeller.

