 




User Manual

Please check that the charging pad's features, connectors and voltage will be compatible with your devices according to your devices' manuals.

 
Please read this manual carefully before using charging pad. Manufacturer is not responsible for any damage caused by incorrect or reckless operation.

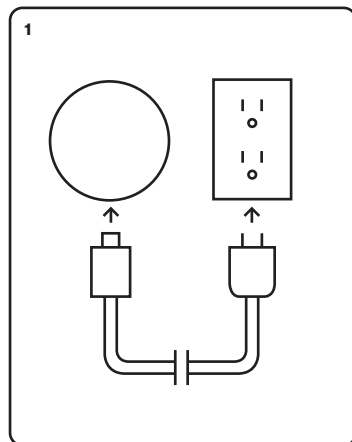

 LED light status

Flashing White On-Solid White


Powering on Charging

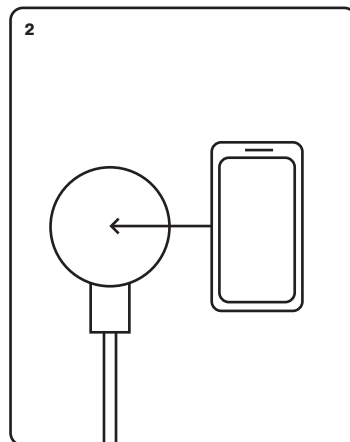

Flashing Red

Off

 Foreign object detected
or misalignment
Standby

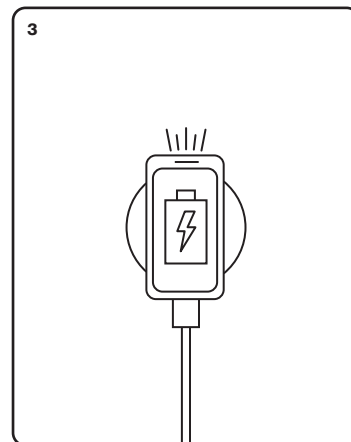

3 Check the light on the sides of the charging pad to ensure that it is charging properly.

100

Do not place other objects on top of the charging pad.



These safety guidelines are to help you operate the charging pad safely, to ensure your personal safety and to reduce the risk of fire, electric shock or injury.

- Do not store or use charging pad in high-temperature environments, including heat caused by direct sunlight or other intense forms of heat.
- Do not disassemble the charging pad. (It may cause fire or electric shock.)
- Do not attempt to repair or replace any part of the charging pad.
- Do not connect a bound cord to the power supply.
- Do not place the cord or charging pad near heating elements.
- If there is any strange sound, smoke or odor coming from the charging pad, disconnect power cable immediately.
- Do not put any sharp objects into the venting slots of the charging pad. (It may cause fire or electric shock.)
- Ensure power cable is firmly plugged in.
- Do not use a damaged charging cable. (It may cause fire or electric shock.)
- Do not block the venting slots. (It may cause the device to not function properly.)

- Do not place the charging pad on a bed, bag or inside a closet that does not have good ventilation.
- Always wipe off the charging pad with a dry, soft fabric. Do not use liquids. (Liquids may cause electric shock.)
- Ensure the power plug and the power outlet are clean. (Dirt or dust may cause a short circuit and fire.)
- Keep the charging pad out of reach of children.
- Do not unplug the power cord with a wet hand. (It may cause electric shock.)
- Unplug the power cord if you don't plan to use the charging pad for a long time. (It may cause heat, fire and electric shock.)

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2A5ZDWC15WGGLBLK-A

160354A855 Rev. A

EP+CO

ACCS-630425-15WirelessChargingPad-InstructionManual-V6.ai

Client	Verizon
Media Type	Package

None

None

Fonts Verizon NHG TX, Verizon NHG DS

Images None

Color Key ● Black, ● Dieline, ● PMS 2035 C, ● Folds

100G Wood Paper

None