

My Show T

Mobile multimedia player

Operation guide

Instructions for use before operation

1. Instructions for use before operation

1-1・Product function introduction

This product has the following functions, which are explained as follows:
KOD on-demand function: This product is a high-tech multimedia VOD player, which can record and sing video, repeat singing and singing, without frequent replacement of VOD discs, is a professional multimedia player entertainment equipment.
USB playback function: This product is not only a high-tech multimedia jukebox, but also a product with USB playback function. DVD, VCD, CD and other formats, can use this product to play high-quality audio and video effects, one machine for dual purposes.
application: It is not only a multimedia player but also a family entertainment center, which is a revolutionary breakthrough in singing Android dual-system intelligent integrated entertainment diversification.

1-2・Factory configuration

1. host
2. 1 power adapter
3. 1 AC power cord
4. 2 wireless microphones
5. 1 simple manual
6. 1 guarantee card

1-3・Safety Notice

1. Read the instruction manual carefully: Please read this instruction manual carefully before use, and use the product in accordance with its operation method.
2. Power supply: Please use the power supply of the specifications stated in this operation guide to avoid irreversible damage to the product:
Too many electrical devices are used in one row, which can easily overload the power supply and cause a fire. If you are not sure about the specifications of the power supply, please consult the power company or local distributors of this product.

3. heat source: Whether this product is in working condition or not, it should be placed in a well-ventilated place, and please keep away from other heating equipment or environments, such as heaters, electric heating equipment, gas stoves, etc., to avoid this product from not working properly, thus causing this product to be unrecoverable of destruction.

4. Moisture and dampness: Whether this product is in working condition or not, please keep the environment dry and avoid using this product in an excessively humid environment, such as a wet basement, beside a swimming pool, etc.

5. Intrusion of foreign objects: Users can remove the screws at the bottom of the machine to add new hard disks or dispose of old hard disks; other parts have no manually added or changed items for users to disassemble; so do not disassemble the casing of this product at will to avoid foreign objects intrusion, damage to product protection services and electric shock hazards.

6. Load-bearing overload: Do not place other heavy objects on this product or subject this product to heavy blows and squeezing, so as to avoid this product not working properly.

7. Lightning strike prevention: If you do not use this product for a long time, or if the weather is expected to change, there will be a risk of lightning strikes. It is recommended to remove the plug of this product, so as to prevent this product from being damaged by lightning strikes.


8. Maintenance: If the product does not work properly, do not disassemble the casing to try to repair it. Please contact the local dealer's repair station and send it for repair and maintenance through normal pipelines.

Note: The equipment should be connected to the mains outlet socket with protective earth connection and the power plug and appliance coupler should be used as disconnecting device, and the disconnecting device should be easy to operate.

1-4. Front and rear panel configuration


instructions:

1. Front panel configuration illustration diagram:

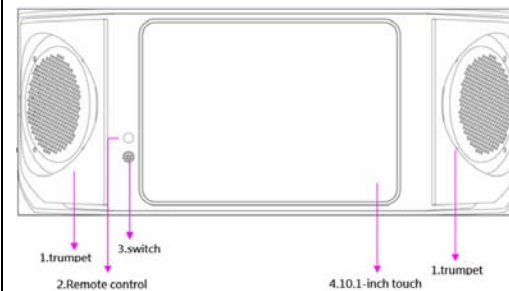

1. Speaker: The sound output position.
2. Remote control reception: Receive remote control signals.
3. Power switch: ON [press to turn on for 1 second], OFF [press to turn off for 2 seconds].
4. 10.1-inch touch screen: LCD screen and touch panel.

2. Illustration of rear panel configuration:

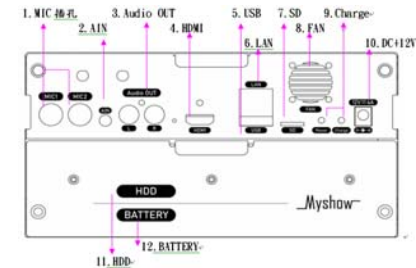

1. MIC jack: Wired microphone insertion hole.
2. AIN: External sound input hole.
3. Audio OUT: R (right channel), L (left channel) signal output.
4. HDMI: transmits digital video signals.
5. USB: Supports pen drive devices.
6. LAN: wired network interface.
7. SD: Micro SD card slot.
8. FAN: Internal hot air extraction.
9. Charge: Charging status indicator, charging (red), charging completed (green).
10. DC+12V: DC power input (+12V/4A).
11. HDD: Place a 2.5" USB3.0 hard drive.
12. BATTERY: Place the lithium battery.

TV song request diagram



This TV song order screen includes [song name order, singer order, Youtube order, dance song, golden song ranking, my favorite, category song order, Numbered Songs] option, touch the option to enter this option.



For example, in the [Song Name and Song] function option, all songs in the song list will be listed.・

Microphone EQ, sound effects



1. There are [preset, traditional, rock, jazz, classical, custom] sound effects in the sound quality adjustment, which is convenient for customers to choose directly.

2. [Custom] Sound effect function: Customers can adjust their own music sound effects to sing.



1. There are [Elementary, Amateur, Superstar, Broadcast, Custom] settings in the MIC setting, which is convenient for customers to choose directly.

2. There are a total of 5 adjustment function Bars, namely [bass, mid-bass, mid-tone, mid-treble, treble], which are selected by customers. Use a microphone suitable for your singing, and adjust different low, medium and high pitches to sound.

2 Song order description

2-1 How to order songs

Click to order the songs on demand by song title, singer, Youtube, dance song, golden song ranking, favorite, category song and number order.

top left " " You can view the currently on-demand songs in the list, and perform operations such as "priority" and "deletion".



Insertion: Tap and hold the song for 2 seconds, click on the priority to insert the song.

Add the song to the public broadcast: tap and hold the song for 2 seconds, click the first public broadcast to add the song to the public broadcast.

Favorites: Tap and hold the song for 2 seconds, tap Favorites, and then enter the code of my favorites to add the song to my favorites. [Note 1]

2-2 Song search instructions

Song name and song: You can order songs from the song name, and play songs on demand.

Singer on-demand: You can search for the singer's on-demand song from the Singer on demand.

Youtube song request: Enter the singer or song name, you can order the song on Youtube from it.

Dance music: Divided into "Rumba, Cha Cha, Prussia, Tango", etc., enter the options to play songs on demand.

Golden Song Ranking: 200 songs that have been on-demand.

Favorites: For example [Note 1] After adding a song to my favorites, enter my favorites, and then enter my favorite code to play the favorite songs.

Sorting songs on demand: Divided into "recorded songs, selected songs, popular duet", etc., enter the options to order songs.


Song on demand: Enter the song number to order the song.

3 Android

3-1 Android

Android: Click on the top right " " Then click "Android" to use the APP.

Not only a multimedia player, but also a family entertainment center, the intelligent integration of Android dual systems.

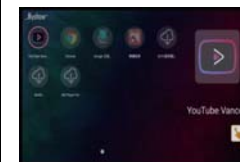


4 Function Description

4-1 USB add song

USB Add Songs: Store songs or video files in the USB, insert the USB into the USB socket on the back panel of the jukebox, and then click on the upper right " " then click on the USB icon, click to play the file you want to add, then click the down arrow icon, and then click the circle icon at the bottom left, you can add the song to the hard disk, and you can enter the number in the song number, ready to play.

Supported formats: mkv, mpg, dat, vob, wmv, avi.

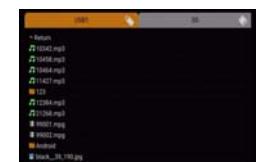


4-2 Recording

Users can transfer the songs they want to store to USB through the USB drive by recording, which is convenient for future enjoyment.

1. To play a song, click " " then click "Record" to record.

2. click " " then click the first option on the left, then click the fourth folder icon on the left, then click "recording", and then click the fifth icon below, you can transfer the recording file to USB, and you can also listen to it., delete.

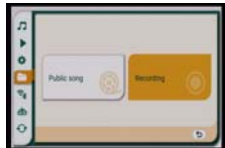

4-3 Collect

You can use this feature to collect your favorite songs for later on-demand playback.

Operation: Click the song title for 2 seconds in the song title, singer and other playlists, then click Favorites, and then enter the code of my favorites (eg: 001) to save to my favorites.

View: Click "My Favorites" to enter the My Favorites Code (eg: 001) to enter the My Favorites list for on-demand or delete or add to the public broadcast.

4-4 Language

My Show T multimedia player is built-in for users of different nationalities: Traditional Chinese, Simplified Chinese, English and other languages, users can change the system language by themselves.



4-5 Function Description

Press each function icon on the home page for 2 seconds to display the function introduction

5 System Upgrade

5-1 System Upgrade


System upgrade, fix bugs in the previous version, increase system stability, experience the latest functions, etc. .



1. Local upgrade (USB flash drive): Copy the upgrade file to the update directory in the USB, then connect the USB to the jukebox, select " " - "set up" - "System Upgrade" - Upgrade file recognized auto update and auto restart jukebox .

Online upgrade (Wifi): After entering this page, the USB cannot be detected after that, the online version will be automatically detected, if there is a newer version, the online version will be automatically upgraded, and the multimedia player will be restarted automatically after the upgrade .

5-2 system setting

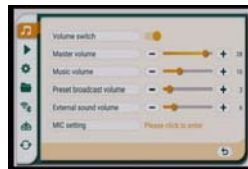

Sound settings

1. The user can set the total volume of the system, the music volume, the default public broadcast volume, and the initial value of the external sound volume. .

Microphone settings:

Auto pick-up: After this setting is enabled, when using the microphone to sing.

The original voice will be automatically muted

Volume Control: Microphone volume control switch

Anti-whizzing switch: when it is turned on, it can suppress Xiao' s cry and protect the horn

Mic total volume: adjust the total microphone volume

Wireless, wired microphone volume: adjust the microphone volume

Wireless microphone CHA, CHB: frequency band pairing

Specifications

serial number	name	illustrate
1	Microphone input interface	2
2	External sound input interface	1
3	audio interface	1 (R/L channel)
4	HDMI high-definition interface	1
5	Network RJ45 interface	1
6	USB interface	1
7	SD card interface	1
8	input power	DC 12V/4.0A
9	rated power	48 W
10	Frequency response	Stereo-LR 20Hz-20KHz(±1dB)
11	signal/noise ratio(S/N)	>90dB 1KHz sine wave
12	Host size	long476mm x width196mm x high150mm
13	Host weight	5.0KG

8 Mobile phone song instructions

8-1 Router and multimedia player connection

There are two ways to connect the router to the multimedia player: wired connection and wireless connection.

A. Wired network connection settings
The connection method of the multimedia player and the router: a standard network cable is required, and the LAN port of the multimedia player is connected to the LAN port of the router. Any port on the router LAN can be used.

B. Wireless network connection settings
Click the WIFI icon to pop up the WIFI list to search for surrounding signals, select the WIFI name of the wireless router you are currently using, and enter the WIFI password to connect successfully.

C. Web (web page) song request
Connection method by scanning the QR code: Make sure that the mobile phone/tablet and the multimedia player are connected to the Internet and can access the Internet normally., open the mobile phone Web (web page) to order songs and scan the QR code function, scan the QR code in the QR code icon displayed in the upper right corner of the jukebox, Connect to realize the song ordering function.

9 wireless microphone

Instructions:

1. Power on: Press the function key for 1 second (press down in the middle), and the display window lights up to power on.

2. Power off: Press the function key for 1 second (press down in the middle), the display window will turn off and the power will be turned off.

3. Volume adjustment (music): the function key increases the volume up and down the volume decreases. (lost music volume adjustment)

4. Volume adjustment (microphone): the function key increases the volume to the right and decreases the volume to the left. (lost microphone volume adjustment)

5. Microphone mode adjustment: Short press the function key (middle) to switch the mode. (This function is valid only when the host side setting is enabled)

Switching order: Beginner professional superstar broadcast custom

Elementary (cycle).

6. Power adjustment: Short press the BI / LO button (inside the battery tube) to switch the transmit power.

7. Channel setting: long press the BI / LO button (inside the battery tube) ≥ 3 seconds, the display window will flash, that is to enter the channel setting mode .

6 Youtube and super noise cancelling

6-1 Youtube Function

Open the corresponding Youtube in Android, select the song to play, then click the mouse in the lower right corner to expand, click the icon at the bottom right to eliminate the human voice (two modes to choose), and enjoy the experience of singing and enjoying the KTV mode.

6-2 Super noise cancelling function


Click on the icon at the bottom right of the mouse to expand the white point of the mouse to provide the convenience of singing. According to different songs, there are two modes of muting, strong and weak.



7 network illustrate

This My Show T multimedia player has a built-in WIFI network card and wired LAN interface. Users can connect to the available WIFI or wired LAN interface to connect to the Internet through the built-in WIFI network card.

7-1 How to connect to WIFI

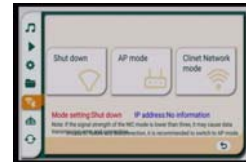

Click the WIFI icon of the interface tool, and the WIFI list will pop up to search for surrounding signals. Select the WIFI name you are currently using — enter the WIFI password — the connection is successful.

7-2 Connect to wired network

Connect the network cable connected to the Internet to the LAN interface of the jukebox and start the jukebox to take effect.

Easy Troubleshooting

When a failure occurs, please check the corresponding inspection items and adjustment methods in order to find and solve the problem. If the fault cannot be eliminated after inspection, please ask the dealer's maintenance personnel to deal with it.

fault phenomenon	Inspection method	Adjustment method
No power after plugging in	◆ Whether the power plug is connected well ◆ Whether the socket has no power supply	◆ Insert the power plug firmly into the socket ◆ Check whether other electrical appliances work on the plug again
No sound output	◆ Audio cable connection is correct	◆ Check the port and connect it correctly
Irregular sound or occasional picture disappearance	◆ Whether the HDMI cable is in poor contact ◆ Whether the HDMI cable is deformed or damaged	◆ Pull out the HDMI cable and connect it again ◆ Replace the HDMI cable
no picture	◆ Whether the plug is in the HDMI input signal port	◆ Press whether the signal source on the TV is HDMI ◆ Check the power supply connected to the TV

Warranty Regulations

Thank you very much for using the My Show T jukebox series. In order to protect your legitimate rights, please read the product instruction manual and this warranty policy carefully before use:

1. When you choose this product, please fill in the warranty card in detail, and send the "User Receipt" to our company, we will log your information into the database, and you will get the following warranty services and our other tracking service.

2. My Show T multimedia player series products provide one-year warranty and after-sales quality assurance service for replacement of defective products within three months.

3. If the product has performance failure, please go to the after-sales service station designated by our company for after-sales processing. If there is no designated after-sales service station, the local dealer is responsible for the warranty service. When submitting for inspection, the sales certificate and the warranty card must be issued at the same time, otherwise, it will be handled as follows.

4. In one of the following cases, it is not within the scope of free warranty, and can be repaired according to customer needs, but the cost of maintenance materials shall be charged:

- beyond the free warranty period
- Without "Product Maintenance Card" and valid certificate
- The content on the "Product Maintenance Card" does not match the actual product identification or is altered
- Damage caused by not using, maintaining and maintaining in accordance with the requirements of the product instruction manual (especially not to fall and other man-made damage)
- Disassembling without authorization at the customer service center and (specially appointed) repair station designated by the company, and repairing and causing damage
- Damage caused by force majeure factors such as lightning, earthquake, fire, flood, etc.
- The panel is scratched and the appearance is dirty is not covered by the warranty.

5. Product electromagnetic compatibility type label:
Excessive use of the LCD screen may damage your eyesight

Solemnly declare 1. Users please purchase hard disks and obtain songs through legal channels. Also responsible for its content. 2. This machine contains the function of adding songs, users can copy the songs to the hard disk of the machine by themselves after obtaining the songs through legal channels. 3. The company reserves the right to modify the products described in this manual without prior notice. Necessary changes are made at any time for printing errors and program changes and added to the new version of the manual. 4. The company reserves the right to upgrade the software, the final function is subject to the actual situation of the multimedia player, and the company has the final interpretation right.	Federal Communications Commission (FCC) Statement You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation of the device. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. FCC RF Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.		
--	--	--	--