

Hi

-This is Phinistec MP3 Player-
F6

English / Español / Deutsch / Française / Italiana


Thanks for selecting Phinistec F6 music player, before using this product, please read this user manual carefully in order to make sure that the best possible performance is obtained.

www.phinistec.com **support@phinistec.com**




PHINISTEC

 Activate 2-year Warranty

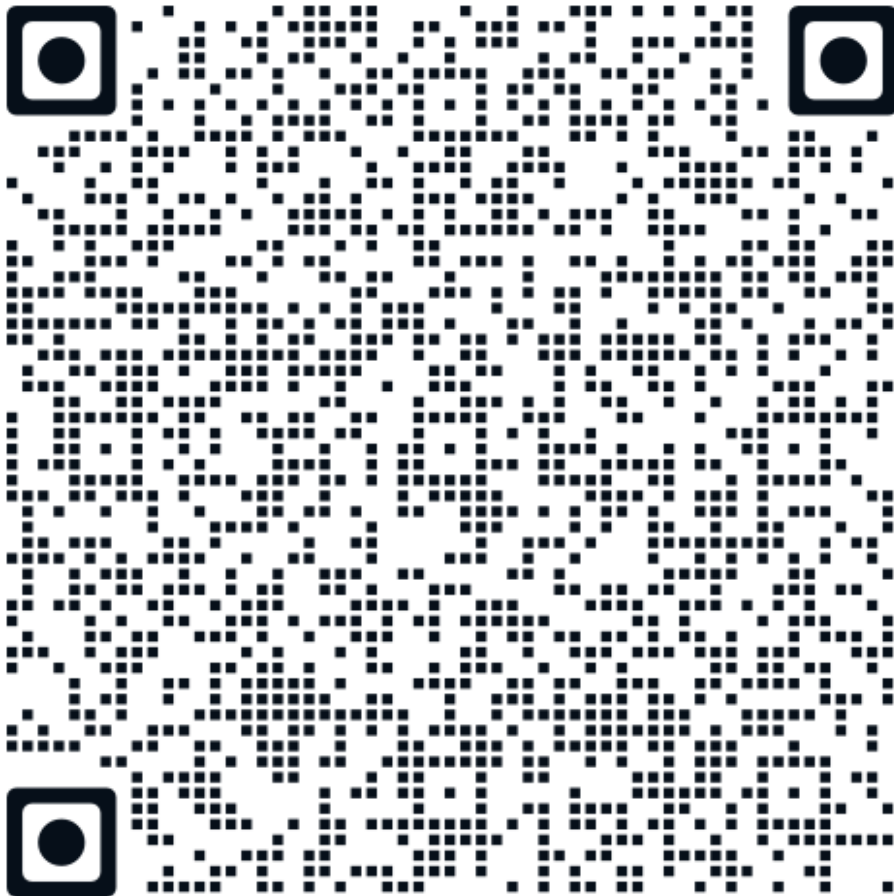

 The standard warranty period is one year, please scan the QR code above to activate 2-year warranty. after submission, you'll receive a confirmation email from our support team.

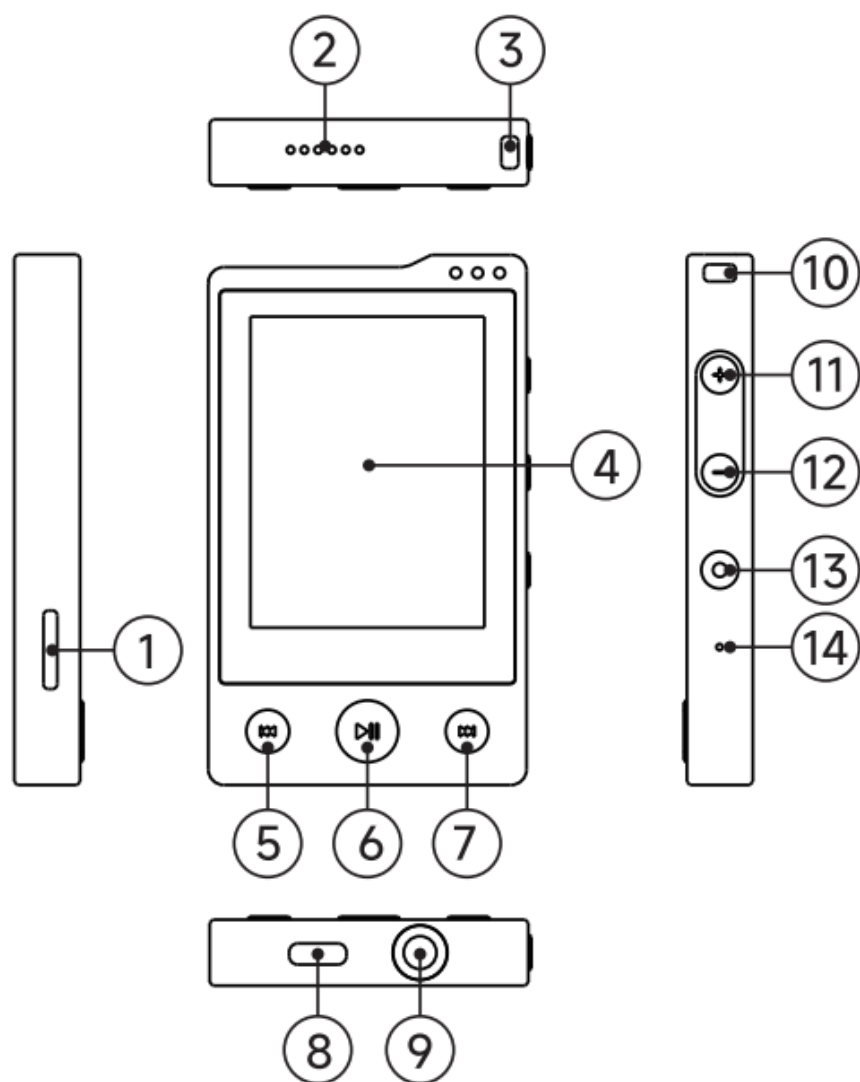

♪ Introduction

- ① TF-card Slot (FAT32 format, maximum 256GB)
- ② External Speaker (Can be disabled in setting)
- ③⑩ Hole for Lanyard
- ④ Touch screen and Display
- ⑤ Previous / Fast Backward (Can be disabled in setting)
- ⑥ Play / Pause (Can be disabled in setting)
- ⑦ Next / Fast Forward (Can be disabled in setting)

- ⑧ Charging / Data transfer Port
- ⑨ Earphone Jack 3.5mm
- ⑪ Volume Up
- ⑫ Volume Down
- ⑬ Power ON / OFF
- ⑭ Reset

♪ Main Interface




UI 1: FM Radio, Music, E-book, Bluetooth, Recorder, Setting

UI 2: Calendar, Gallery, Calculator, Clock, Equalizer, Folder

1. Click the icons on the screen to enter.
2. Click the “↶” back icon on the top left corner to previous page. or,
Swipe left to return.

 🎵 Music Interface

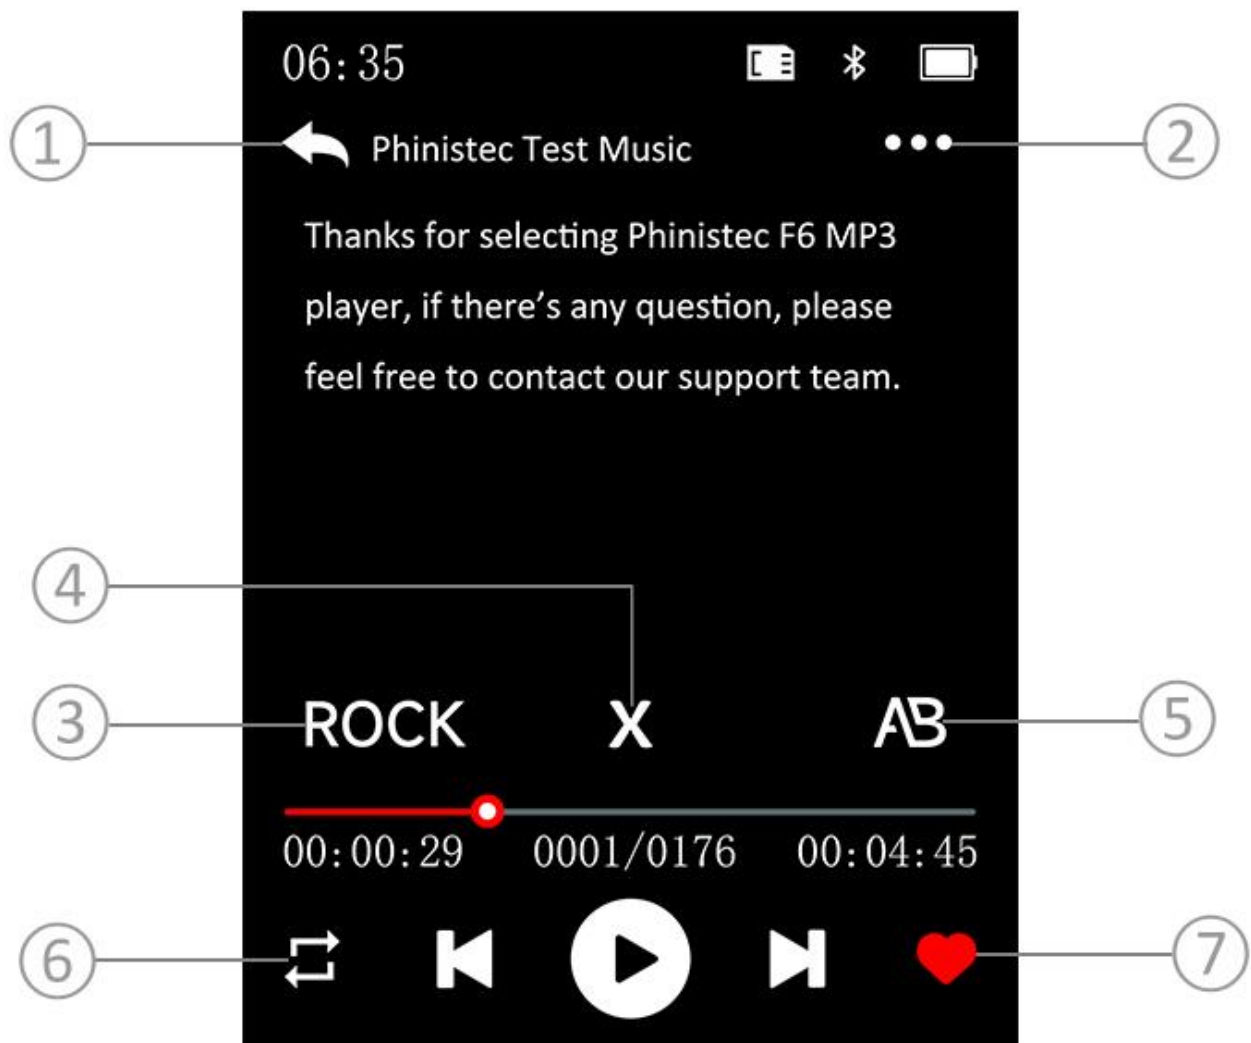

- ① Back: or **swipe left** to return.
- ② Click to choose EQ, AB repeat times, Delete.
- ③ Click to switch EQ
- ④ Click to adjust play speed
- ⑤ Click to AB repeat
- ⑥ Click to switch playing modes:
 - ⇒ play in order ✂ shuffle
 - ↺ repeat the whole playlist ⌚ repeat one song
- ⑦ Click to add songs to favorites.

Specifications

Model Name	F6
Dimension	85×50×10 mm
Weight	182.5g (package weight)
Display	2.4-Inch 240*320 IPS
Built in Memory	64GB
Audio Format	MP3, WMA, WAV, OGG, FLAC, APE, AAC
Video Format	AVI
Recording Format	MP3, WAV
Battery Capacity	500mAh / 3.7V Li-polymer
Input / Charging Power	5V/500mA USB-C
Expansion Slot	TF Card (up to 256GB)

🎵 FAQ

● Player freezes, stuck, or can't turn on ?

1. please check if the player has run out of battery.
2. please use a pin to press the reset button(refer ⑭).

If still, please contact our customer support team.

● Can't hear music when playing?

1. please check if the volume setting is too low.
2. please check if the earphone is plugged improperly or damaged.
3. please check if the bluetooth is connected or not.
4. please check if the external speaker has turned off in setting.

- Can't transfer music files from computer?

When connected to the computer, no driver is needed, please select connecting mode on the screen after connected: charging&transfer / charging&play.

1. please double check if the player is successfully connected to the computer. the internal memory will shows with the name of "F6" and micro SD card will be shown as a removable disk.
2. please check if the SD card is damaged or not.
3. please check if the USB-C cable is damaged or not.

- SD card cannot be used in the player?

1. for the first time of use, please plug the micro SD card into the player, it will help to format the SD card in setting-format.
2. please double check if the SD card is damaged or not.

- Can F6 music player handle playlists?

This F6 player does NOT support customized playlists.

we recommend users to create folders in the computer, after that, copy the folder onto the player and used as playlists.

please enter the music files through "Folder", then, the music files from the folder will be listed.

- Something more about micro SD card.

This F6 Player can support maximum 256GB memory card.

the more files put into the card, the longer time it will take to scan the files by the player.

please remove part of the files if the SD card is almost full, otherwise it may cause stuck / freez problem.

♪ **Term & Condition of Warranty**

1. Warranty scope: Limited to the product host without accessories.
2. Standard warranty period: Within one year from the date of purchase.
3. Within 1 year after purchase, failure or damage caused by product quality problems can be replaced or refunded.
4. Accessories are not included in the warranty, such as USB cable, earphones, case, etc., but if quality problems occur within 7 days after purchase, they can be replaced as well.

♪ **The following conditions are not covered by the warranty**

1. Out of the warranty period.
2. It has been disassembled or repaired privately.
3. Man-made damage, accidental damage, or deformation.
4. Failure caused by installation and use in abnormal environments such as high temperature, high pressure, and humidity.

Español

♪ Introducción

- ① Ranura para tarjeta TF (formato FAT32, máximo 256 GB)
- ② Altavoz externo (desactivable en la configuración)
- ③ ⑩ Orificio para cordón
- ④ Pantalla táctil
- ⑤ Anterior / Retroceso rápido
- ⑥ Reproducir / Pausa
- ⑦ Siguiente / Avance rápido
- ⑧ Puerto de carga / transferencia de datos
- ⑨ Conector para auriculares de 3,5 mm
- ⑪ Subir volumen
- ⑫ Bajar volumen
- ⑬ Encendido / Apagado
- ⑭ Reiniciar

♪ Interfaz principal

La pantalla táctil cuenta con dos páginas:

Página 1:

Radio FM, Música, E-book, Bluetooth, Note de Voz, Ajuste

Página 2:

Calendario, Galería, Calculadora, Reloj, Ecualizador, Archivo

Deutsch

♪ Einführung

- ① TF-Kartensteckplatz (FAT32-Format, maximal 256 GB)
- ② Externer Lautsprecher (kann in den Einstellungen deaktiviert werden)
- ③ ⑩ Öffnung für Trageschlaufe
- ④ Touchscreen und Display
- ⑤ Zurück / Schnellerücklauf
- ⑥ Wiedergabe / Pause
- ⑦ Weiter / Schnellvorlauf
- ⑧ Lade- / Datenübertragungsanschluss
- ⑨ Kopfhöreranschluss 3,5 mm
- ⑪ Lautstärke erhöhen
- ⑫ Lautstärke verringern
- ⑬ Ein- / Ausschalten
- ⑭ Zurücksetzen

♪ Hauptbildschirm

Der Touchscreen verfügt über zwei Hauptbildschirmseiten:

Seite 1:

FM-Radio, Musik, E-book, Bluetooth, Sprachmemos, Einstellungen

Seite 2:

Kalender, Galerie, Rechner, Uhr, Equalizer, Datei

Française

♪ Introduction

- ① Emplacement pour carte TF (format FAT32, 256 Go maximum)
- ② Haut-parleur externe (désactivable dans les paramètres)
- ③ ⑩ Trou pour cordon
- ④ Écran tactile et affichage
- ⑤ Précédent / Retour rapide
- ⑥ Lecture / Pause
- ⑦ Suivant / Avance rapide
- ⑧ Port de charge / transfert de données
- ⑨ Prise jack 3,5 mm
- ⑪ Volume +
- ⑫ Volume -
- ⑬ Marche / Arrêt
- ⑭ Réinitialisation

♪ Interface principale

L'écran tactile comporte deux pages principales :

Page 1 :

Radio FM, Musique, E-book, Bluetooth, Dictaphone, Paramètres

Page 2 :

Calendrier, Galerie, Calculatrice, Horloge, Égaliseur, Fichier

Italiana

♪ Introduzione

- ① Slot per scheda TF (formato FAT32, massimo 256 GB)
- ② Altoparlante esterno (disattivabile nelle impostazioni)
- ③ ⑩ Foro per cordino
- ④ Touchscreen e display
- ⑤ Precedente / Indietro veloce
- ⑥ Riproduzione / Pausa
- ⑦ Successivo / Avanti veloce
- ⑧ Porta di ricarica / trasferimento dati
- ⑨ Jack per cuffie da 3,5 mm
- ⑪ Aumento del volume
- ⑫ Riduzione del volume
- ⑬ Accensione / Spegnimento
- ⑭ Ripristino

♪ Interfaccia principale

Sul touchscreen, l'interfaccia principale è composta da due pagine:

Pagina 1:

Radio FM, Musica, E-book, Bluetooth, Memo Vocali, Impostazione

Pagina 2:

 
Calendario, Galleria, Calcolatrice, Orologio, Equalizzatore, File

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

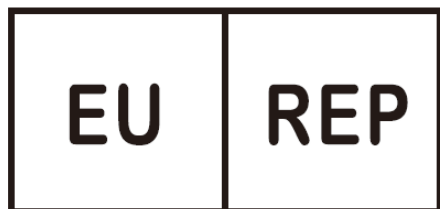

EUBRIDGE ADVISORY GMBH

Virginia Str. 2, Butzbach, Germany 35510

eubridge@outlook.com

support@phinistec.com (for after-sale/OEM&ODM)



Warning: this product is built with rechargeable battery inside.

1.Dropping, crashing, disassembling are forbidden.

2.Keep it away from fire, liquid.

3.To prevent hearing damage, donot use high volume for long time.

