

JMMO

User Manual

Active Noise Cancelling
True Wireless Earbuds

Model: T205




Thank you for purchasing the T205 Active Noise Cancelling True Wireless Earbuds. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number.

Package Contents

True Wireless Earbuds
Charging Case
The other two pairs of the three pairs of ear-tips (S/L)
The other three pairs of the four pairs of ear-Wings (XS/S/L)
USB-A to C Cable
User Manual

Product Diagram

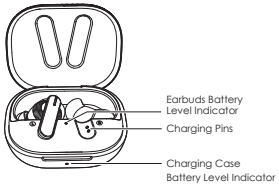

Specifications

Earbuds	
Model	T205
Bluetooth Version	V5.1
Technology	HSP, HFP, A2DP, AVRCP
Driver (each channel)	10mm Driver Speaker
Sensitivity	105dB ±3dB (at IEC711 1kHz -10dBFS)
Frequency Range	20Hz ~ 20kHz
Impedance	16ohm ±15%
Microphone Type	MEMS (microphone chip)
Microphone Sensitivity	-22±3.0dB/10mV 74dB@MRP
Microphone Frequency Range	100Hz ~ 7kHz
Charging Time	About 2 Hours
Battery Life	About 5.5 Hours
Battery Type	Li-polymer Battery
Operating Range	10m / 33ft
IP Rating	IP54
Weight	12g

Charging Case

Charging Input	DC 5.0 +/- 0.25V
USB Type-C Charging	About 3.5 Hours
Charging Time	Wireless Charging About 5 Hours
Battery Type	Li-polymer (600mAh)
Number of Earbuds Recharges	4 times
Weight	60g

Getting Started

Note: Remove the protective film from the earbuds when using for the first time.

Charging

Fully charge the charging case before the first use. To charge, connect the charging case to a USB charger or charging port with the included USB-A to C cable or use a wireless charger to charge the charging case. When the LED Charging indicator on the outside of the charging case turns on white, the case is fully charged. Charging takes about 3.5 hours, offering an additional 5 charges to the earbuds. The earbuds should be stored in the case when not in use.

Turn On / Off

Turn On	Open the lid of the charging case or hold on the touch-sensitive panels on both earbuds for 2 seconds when they are turned off
Turn Off	Return both earbuds to the charging case and close the lid or hold on the touch-sensitive panels on both earbuds for 6 seconds when they are turned on

Pairing

Starting with the earbuds in the case:
1. Open the lid of the charging case
2. Turn on the pairing function on the device you want to pair with the earbuds
3. From the list of available devices find and select "JMMO T205"

Regular Use After Pairing

Once the earbuds are successfully paired with your device, they can be switched on and off as follows:
• Open the lid of the charging case, then both earbuds will turn on and connect with your device automatically
• To turn off, put the earbuds back in the charging case and close the lid, they will begin charging


Using the Left/Right Earbud Only

Starting with the earbuds in the case:
1. Take the left/right earbud out
2. Turn on the pairing function on the device you want to pair with the earbud
3. From the list of available devices, find and select "JMMO T205"



Reset the earbuds

Starting with the earbuds in the case:
1. Open the charging case and take earbuds out of charging case
2. Touch and hold on the touch-sensitive panels on both earbuds for 6 seconds to turn off earbuds
3. Touch and hold on the touch-sensitive panels on both earbuds for 10 seconds to clear the pairing, then put the earbuds in the charging case and close the charging case
4. Open the lid again, take earbuds out of charging case, both earbuds will turn on and enter pairing mode

Note: Remove the protective film from the earbuds when using for the first time.

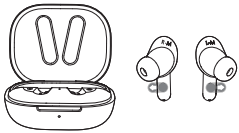


 CHARGE THE EARBUDS AND CHARGING CASE BEFORE USE

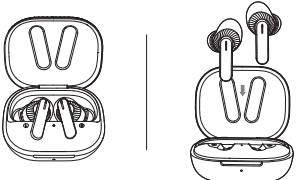


FIND YOUR FIT

Choose the size of silicone ear-tips and ear-wings that provide a secure and comfortable fit for you.

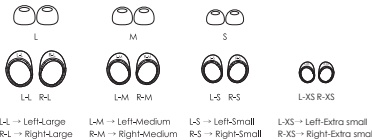

PAIRING


1. Open the lid of the charging case, both earbuds will then turn on and enter pairing mode

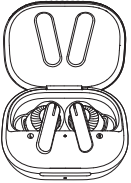

2. Turn on BT on your device



 3. Select JMMO T205



Notes

- When you turn on the earbuds, they will be automatically reconnected to the previously paired device or enter pairing mode if no paired device is found
- Either left or right earbud can be used individually once connected to your device, if you keep the other one inside the charging case
- If a single earbud exceeds the connection range for 7 minutes, the earbud will turn off; if both earbuds exceed the connection range for 2 minutes, they will enter the pairing mode and turn off after 5 minutes.

Controls & LED Indicators

Streaming Audio

Once paired, you can wirelessly stream audio on your device via the earbuds. Music will automatically get paused when you receive an incoming phone call and will be resumed once the call ends.

Play or Pause Music	Tap the touch-sensitive panel on either earbud once
Skip to Previous Track	Double-tap the touch-sensitive panel on the left earbud
Skip to Next Track	Double-tap the touch-sensitive panel on the right earbud
Transparency/ANC	Touch and hold the touch-sensitive panel on either earbud for 2 seconds

Taking Calls

Activate Siri or other Voice Assistants	Triple-tap the touch-sensitive panel on the left earbud
Answer the Call	Double-tap the touch-sensitive panel on either earbud
Reject an Incoming Call	Long press the touch-sensitive panel on either earbud
End the Call	When you are on a call, double-tap the touch-sensitive panel on either earbud
Increase Call Volume	When you are on a call, tap the touch-sensitive panel on the right earbud once
Decrease Call Volume	When you are on a call, tap the touch-sensitive panel on the left earbud once

Earbuds Battery Level Indicator	Status
The Indicator Light Flashes Red for 3 Times, then A Red Solid Light	Earbuds charging
The White Light is on for 1 Minute and then Turns Off	Earbuds fully charged

LED Battery Level Indicator	Status
The Light Flashes White 3 Times Quickly, Stays on for 10 Seconds and Then Off	≥30% battery remaining
The Light Flashes Red 3 Times Quickly, Stays On for 10 Seconds and then Turns Off	<30% battery remaining
Red Light On	Charging case charging
White Light On	Charging case fully charged

FAQ

The earbuds are on, but not connecting to my device

For the earbuds and your device to establish a connection, you need to put them both in pairing mode. Please follow the instructions in the "Pairing" section of this manual.

I've connected the earbuds with my smartphone but can't hear any sound
Double-check the volume level on your smartphone and the earbuds. Some smartphones require you to set up the earbuds as an audio output device before the audio can be transmitted. If you're using a music player or other device, please make sure it supports the A2DP profile.

The sound isn't very clear or the caller can't hear my voice clearly
Adjust the volume on your smartphone and the earbuds. Try moving closer to your smartphone to rule out the possibility of interference or wireless range-related issues. The maximum range is 10m (33ft). However, the actual range depends on environmental factors. For optimal performance, keep your device connected within a range of roughly 4m to 8m and make sure that there are no major obstacles (like reinforced steel walls) between the earbuds and your device.

The earbuds won't turn on
Try charging the earbuds for a while. If the earbuds still won't power on, please contact our support team at the email address given in Warranty & Customer Support.

I put the earbuds back in the charging case, but the earbuds are still connected. The charging case is probably out of power. To recharging it.

Product Care & Use

- Keep away from liquids and extreme heat
- Don't use the earbuds at high volume for extended periods, as this may cause permanent hearing damage or loss

CE Statement

Max RF power level:
BT classic (2402-2480MHz): 4dBm
RF exposure assessment has been performed to prove that this unit will not generate the harmful EM emission above the reference level as specified in EC Council Recommendation (1999/519/EC).

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Excessive sound pressure from earphones and headphones can cause hearing loss.



These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Notice: This device may be used in each member state of the EU.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

