 





EN: User Manual
ZH: 用户手册
DE: Benutzerhandbuch
ES: Manual de usuario

IT: Manuale d'uso
FR: Manuel de l'utilisateur
JP: ユーザーマニュアル
KO: 사용자 매뉴얼


 EN:In the box ZH:包裝內容
DE:in der Box ES:En la caja
IT:Nella scatola Prodotto FR:Dans la caja
JP:箱の中に KO:상자에

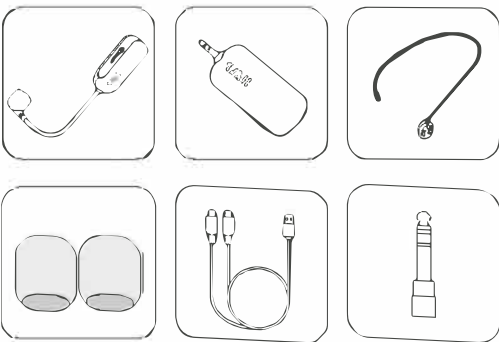

 EN:Product overview ZH:产品概述
DE:Produktübersicht ES:Descripción del producto
IT:Panoramica del Prodotto FR:Présentation du produit
JP:製品の概要 KO:제품 개요

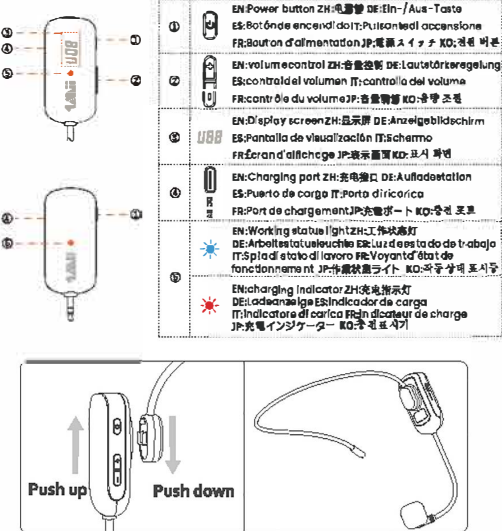

 EN:Connection Diagram ZH:连接图
DE:Schaltplan ES:Diagrama de conexión
IT:Schema di collegamento FR:Diagramme de connexion
JP:接続図 KO:연결 다이어그램

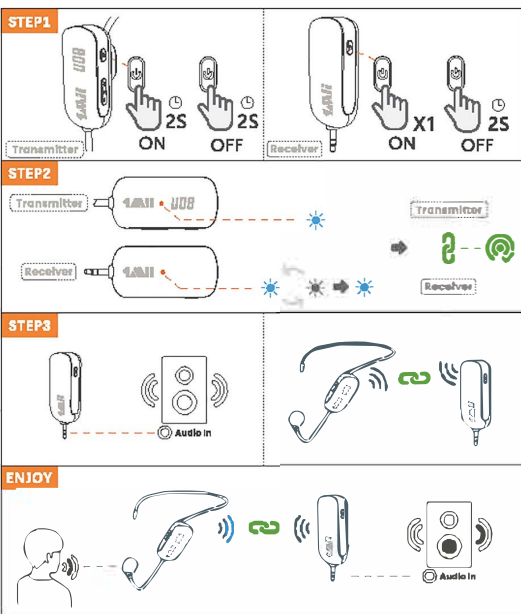

 EN:Control function ZH:功能操作
DE:Steuerfunktionen ES:Función de control
IT:Funzione di controllo FR:Fonction de contrôle fonction
JP:制御機能 KO:어기능

EN: Short press the power button to turn on/long press the power button for 2S to turn off

ZH: 短按电源键开机/长按电源键2S关机

DE: Drücken Sie kurz die Power-Taste zum Einschalten/drücken Sie die Power-Taste lange, um 2S auszuschalten

ES: Presione brevemente el botón de encendido para encender/mantenga presionado el botón de encendido para que 2S se apague

IT: Premere brevemente il pulsante di accensione per accendere/premere a lungo il pulsante di accensione per spegnere 2S

FR: Appuyez brièvement sur le bouton d'alimentation pour allumer/ appuyez longuement sur le bouton d'alimentation pendant 2S pour éteindre
JP: 電源ボタンを短く押してオンにし、電源ボタンを長押しして2Sをオフにします
KO: 전원 버튼을 짧게 눌러 켜고/길게 눌러 2s 전원 버튼을 끕니다.

 EN:Control function ZH:功能操作
DE:Steuernfunktionen ES:Función de control
IT:Funzione di controllo FR:Fonction de contrôle fonction
JP:制御機能 KO:어기능

STEP2

EN:The Indicator light flashes blue after the receiver is turned on. Once paired successfully, light keeps blue.

ZH:接收端开机后指示灯呈蓝色闪烁。配对成功后，变成蓝色常亮。

DE:Nach dem Einschalten des Empfängers blinkt die Kontrollleuchte blau. Nach erfolgreicher Kopplung bleibt das Licht blau.

ES:la luz indicadora parpadea en azul después de que se enciende el receptor. Una vez emparejado correctamente, la luz se mantiene azul.

IT:l'indicatore luminoso lampeggia in blu dopo l'accensione del ricevitore. Una volta accoppiato con successo, la luce rimane blu.

FR:Le voyant lumineux clignote en bleu après la mise sous tension du récepteur. Une fois l'appairage réussi, la lumière reste bleue.

JP:レシーバーの電源を入れると、インジケータライトが青色に点滅します。ペアリングに成功すると、ライトは青色のままになります。

Q:수신기를 켜면 표시등이 파란색으로 깜박입니다. 성공적으로 페어링되면 표시등이 파란색으로 유지됩니다.

STEP 3


EN: Connect the receiver to audio input port of your speakers

ZH: 将接收器连接到扬声器的音频输入端口

DE: Connect the receiver to audio Input port of your speakers

ES: Conecte el receptor al puerto de entrada de audio de sus altavoces

	EN: Frequency displayZH: 频率显示 DE: FrequenzanzeigeES: Pantalla de frecuencia IT: Visualizzazione della frequenza FR: Affichage de la fréquence JP: 周波数表示 KO: 주파수 표시
	EN: Volume displayZH: 音量显示 DE: Volume displayES: Pantalla de volumen IT: Visualizzazione del volumeFR: Affichage du volume JP: ボリューム表示 KO: 볼륨 표시
	EN: Searching modeZH: 搜索模式 DE: SuchmodusES: Modo de búsqueda IT: Modalità di ricercaFR: Mode de recherche JP: 検索モード KO: 검색 모드

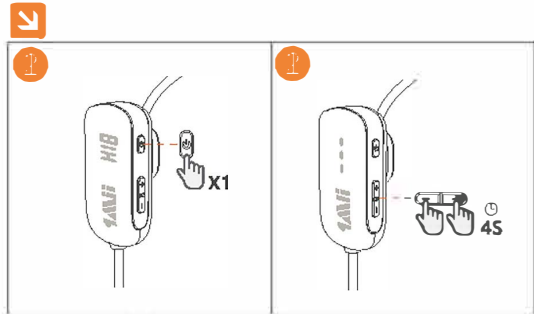 

EN:

- When the transmitter is powered on, short press the power button is to **H** mode. Use the **[←]** or **[→]** button to select channel.
- Once the channel is selected, long press **[↵]** button together 4s to enter searching mode. Turn the receiver on, its indicator flashes blue. When light stays blue, it means channel changed successfully.

ZH:

- 发射机开机后，短按电源键进入 **H** 模式。使用 **[←]** 或 **[→]** 按钮选择频道。
- 选定频道后，同时长按 **[↵]** 键4s进入搜索模式，打开接收器，其指示灯呈蓝色闪烁。当蓝光常亮时，表示频道转换成功。

DE:

- Wenn der Sender eingeschaltet ist, drücken Sie kurz die Ein-/Aus-Taste in den **H**-Modus. Verwenden Sie die Taste **[←]** oder **[→]**, um den Kanal auszuwählen.
- Sobald der Kanal ausgewählt ist, drücken Sie die Tasten **[↵]** 4 Sekunden lang gleichzeitig, um in den Suchmodus zu gelangen. Schalten Sie den Empfänger ein, seine Anzeige blinkt blau. Wenn das Licht blau bleibt, bedeutet dies, dass der Kanal erfolgreich geändert wurde.

ES:

● Cuando el transmisor esté encendido, presione brevemente el botón de encendido si el modo **H**. Use el botón  para seleccionar el canal.

● Una vez seleccionado el canal, mantenga presionados los botones  juntos durante 4 segundos para ingresar al modo de búsqueda. Encienda el receptor, su indicador parpadea en azul. Cuando la luz permanece azul, significa que el canal se cambió correctamente.

IT:
 Quando il trasmettitore è acceso, premere brevemente il pulsante di accensione per il secondo in modalità **H**. Utilizzare il pulsante  per selezionare il canale.
 Quando la voce seleziona il canale, premere a lungo i pulsanti  e  insieme per il secondo per accedere alla modalità di ricerca. Accendere il ricevitore, il suo indicatore lampeggia in blu. Quando la luce rimane blu, significa che il canale è cambiato con successo.

FR:

- Lorsque l'émetteur est allumé, appuyez brièvement sur le bouton d'alimentation en mode H. Utilisez le bouton  ou  pour sélectionner la chaîne.
- Une fois le canal sélectionné, appuyez longuement sur les boutons  ensemble 4s pour entrer en mode de recherche. Allumez le récepteur, son voyant clignote en bleu. Lorsque la lumière reste bleue, cela signifie que le canal a changé avec succès.

JP:

- 送信機の電源がオンになったら、電源ボタン1sを **H** モードに短く押します。または  ボタンを使用してチャンネルを選択します。
- チャンネルを選択したら、 ボタンを4秒間長押しして、検索モードに入ります。レシーバーの電源を入れると、インジケータが青色に点滅します。ライトが青色のままの場合は、チャンネルが正常に変更されたことを意味します。

KO:

- 수신기의 전원이 켜지면 전원 버튼 1초를 **H** 모드로 짧게 누릅니다.  또는  버튼을 사용하여 채널을 선택합니다.
- 채널이 선택되면  버튼을 4초 동안 길게 눌러 검색 모드로 들어갑니다. 수신기를 켜면 표시등이 파란색으로 깜박입니다. 표시등이 파란색으로 유지되면 채널이 성공적으로 변경되었음을 의미합니다.

 **EN:**Reset **ZH:**重置 **DE:**Zurücksetzen **ES:**Reiniciar
IT:Ripristina **FR:**Réinitialiser
JP:リセット **KO:** 초기화

EN: Switch to channel select mode, then long press   buttons together 4s to reset transmitter.

ZH:切换到频道选择模式，然后同时长按  键4s复位。

DE: Wechseln Sie in den Kanalauswahlmodus und drücken Sie dann die Tasten   4 Sekunden lang zusammen, um den Sender zurückzusetzen.

ES: Cambie al modo de selección de canal, luego mantenga presionados los botones   juntos durante 4 segundos para restablecer el transmisor.

IT: Passare alla modalità di selezione del canale, quindi premere a lungo i pulsanti   insieme per 4 secondi per ripristinare il trasmettitore.

FR: Passez en mode de sélection de canal, puis appuyez longuement sur les boutons   ensemble pendant 4 secondes pour réinitialiser l'émetteur.

JP: チャンネル選択モードに切り替えてから、  ボタンを4秒間長押しして、送信機をリセットします。

KO: 채널선택모드로 전환한 다음   버튼을 함께 4초 동안 길게 눌러 송신기를 재설정 합니다.

FCC:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference. Changes or modifications not expressly approved by IMI Ltd. will void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an electrical outlet on a different circuit to that which the receiver is connected.
- Consult the manufacturer or an experienced radio/TV technician for help.

This product, like other radio devices, emits radio frequency electromagnetic energy and operates within the guidelines found in radio frequency safety standards and recommendations. These standards and recommendations reflect the consensus of the scientific community and result from deliberations of panels and committees of scientists who continually review and interpret the extensive research literature.

CE
IMii Ltd. hereby declares that this product is in compliance with
the essential requirements and other relevant provisions of
Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.lmii.com

In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.

ShenZhen IMii Technologies Limited
Baoan District, Shenzhen 518100 China

EU Importer:
eVatmaster Consulting GmbH
Bettinastr. 30, 60325 Frankfurt am Main, Germany

Warranty
Warranty service is limited to normal use. Any man-made damages such as from connecting to an unsuitable power source using an unsuitable device, or not following the instructions, as well as damages that did not occur during shipping, repairs and adjustments not approved by the company, damages from misuse, inattention, or improper installation may cause the warranty to be ineffective immediately. This warranty does not include shipping fees.

Disposal
Always dispose of the used appliance at a recycling centre.
Do not dispose the used appliance together with household waste.



Manufacturer: ShenZhen Ankit Electronics Limited
Address: Runtai Industrial Park, No.4197 Baoan Blvd., Xixiang St., Baoan Dist.,
Shenzhen, China
Operator: ShenZhen 1Mll Technologies Limited
Address: Qianhai Complex A201, Qianwan Road 1, Qianhai Shenzhen-Hong
Kong Cooperation Zone, Shenzhen, China

We hope you never have the need, but if you do,
our service is friendly and hassle-free.

 support@1mll.com  www.1mll.com

FGC ID:2A6ET-RT5301



MADE IN CHINA

说明书专色折页105g铜板纸
说明书装订后成品尺寸:100*75mm 专色: Pantone 1505C

项目名称	RT5301	备注	
物料名称	RT5301说明书	版本	VER: 1.2
物料编号	06530102000	制作	柳旭晖
物料尺寸	100*75mm	日期	2021-11-17