 


60mm

Smart Tracker



80mm

Specification	
Model	AT2631-68T152
Size	36x36x7.8mm/1.4x1.4x0.31 inch
Weight	71g/0.25oz
Battery	CR2032 (Replaceable)
Voltage	DC 3V
Current	<3uA(standby) / <12mA(Max)
Wireless	BLE 5.3
Wireless range	>40m (Line of sight)
Beacon	Built-in >75dB (on 1MHz)
Temperature range	-5~+45℃ (-23~+113°F)
Humidity range	<95% (Non-condensing)

Quick instructions

- 1. Turn on the device and pair**
Press the function button once to turn it on. It should a ringing chime indicating it is powered on.



2. Pair the device

- Open the Find My app.
- Hold the device close to your iPhone, iPad, tap the items tab, tap and then Add Other Items.
- Tap Confirm.
- Tap a name for your device, select an emoji.
- Tap Agree to acknowledge that this item will be linked to your Apple ID.
- Tap Finish.

3. Enable Lost Mode

- Open the Find My app, tap the items tab, then tap your item.
- Under Lost Mode, tap Enable.
- Enter the instructions, the Contact and enter a phone number or email address.
- Confirm the information, customize the lost message, and tap Activate to complete the setup.

4. Remove the device

- Open the Find My app, tap the items tab, then tap your item.
- Tap Remove item and then tap Remove to complete the operation.

Note: After removing the device to the app, if you want to pair it, you can open the Find My app and do it in 10 minutes. If there is no pairing within 10 minutes, the device will leave the pairing state, and the device and app cannot be paired at this time. If you need to pair the device, you need to press the device button for 3 seconds and the device will beep. At this point, the device enters the pairing state and can be re-paired with the app.

Main Functions

1. Locate your item

- If your iteming item with nearby, the Find My app can still help you track it down using the Find My network - hundreds of millions of iPhones, iPads, and Macs devices around the world. Nearby devices assume your location of your missing items to iCloud, then you can see where it is in the Find My app. It's all anonymous and accepted to protect everyone's privacy.

2. Play Sound

- Open the Find My app, tap the items tab, then tap your item.
- Click Play Sound, and the device will beep, so you can find the item easily.

3. Enable Lost Mode

- Open the Find My app, tap the items tab, then tap your item.
- Under Lost Mode, tap Enable.
- Enter the instructions, the Contact and enter a phone number or email address.
- Confirm the information, customize the lost message, and tap Activate to complete the setup.

Instructions for device button

1. Pairing state

- After installing the battery, long press the button for 3 seconds, the device will beep, the light will flash three times, and the device will enter the pairing state.

2. Re-pairing the device

- After receiving the device in the app, it will not shut down and will be in the pairing state. If there is no re-pairing within 10 minutes, the device will leave the pairing state. If you want to pair a device at this time, you need to press and hold the button for 3 seconds, the device will beep and enter the pairing state. At this time, the device enters the pairing state and can be re-paired with the app again.

3. Factory Reset

- If the smart tag needs to be paired with a new account, or if the original account removes the smart tag from the Find My app, and the smart tag is not near the original account, the smart tag needs to be restored to factory settings. To do so, after removing the device from the Find My app, press the function button four times, then press and hold the button for the fifth time until you hear a ringtone, then release the button and the factory settings will be restored.

4. Shutdown

- Press and hold the function button for at least three seconds. You will hear two beeps to indicate it is off.

5. Allowing others to look up the contact information of the device owner

- Press the function button twice quickly and you will hear a confirmation sound.

6. Disable the Apple Find My network

- Open the Find My app, tap the items tab, then tap your item.
- Under Lost Mode, tap Disable.
- Confirm the information, customize the lost message, and tap Activate to complete the setup.

FAQ:

1. When can the device be located?

- When an item is registered then it can be located for a period of time. It can be found by other Apple devices that are part of the Find My network, and the owner can start to get the location of the device.

2. How is the device designed to discourage unwanted tracking?

- If you Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

- If you have an iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or macOS 14.5 or later.

- If you don't have an iOS device or a smart phone, a Find My network accessory that isn't with its owner for a period of time will send a sound when it's moved. These features were created specially to discourage people from trying to track you without your knowledge.

3. How is my privacy protected?

- Only you can see where your item is. Your location data and history are never shared on the Find My network. However, Find My uses the location of your item also, this information, and that location data is encrypted every step of the way. So not even Apple knows the location of your device at the identity of the device and location history.

4. How to replace the battery:

- It is necessary to gently pry off the upper cover with the opening blade in the product accessories. To take out the battery.
- The battery life is generally one year.
- Reinstall the device.



5. What is the Find My network? And how does it work?

- The Apple Find My network provides an easy, secure way to locate completely anonymous items on a map using the Find My app on your iPhone, iPad, Mac, or the Find My app on Apple Watch.

- Simply pair your compatible product with the Apple Find My app to use it. It will intelligently use Apple devices. If your item ever goes missing, you can just go to your Apple ID to display a message and contact information to anyone who might find it. The Find My network is anonymous and anonymous, so no one else, not even Apple, can see its location.

Important tips:

- When pairing a device with Find My app, the phone will link to the Apple network. Things may feel because of network problems. The following actions are recommended:
- Change the phone's network, such as switching between WiFi and mobile network.
- Factory Reset for the device.
- Re-pairing with Find My app.

Regulatory Safety Information

WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN

- Batteries may heat to serious injury or as little as 3 hours or death, due to chemical burns and potential perforation of the esophagus. If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poison Information Center for fast expert advice. Please call 911.

KEEP BATTERIES OUT OF REACH OF CHILDREN

- Keep in original packaging until ready to use.
- Cook food poison control center for treatment information.
- Do not use if the compartment is not secure.
- Recharge or use battery between promptly and safety. That batteries can still be dangerous.
- Avoid the fire and burns.
- Do not recharge, disassemble, heat (>20°C / +70°F) or incinerate.

FC Regulations:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- The device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against radio interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio communications, you may be required to take one or more of the following measures: Reorient or relocate the receiving antenna.

Safety Statement

- Article 12: Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the combined lower power frequency electric machinery.

- The application of low power frequency electric machinery shall not affect the negative safety nor interfere a legal communication. If an interference is found, the service will be suspended until improvement is made and the interference no longer exists. The foregoing legal communication refers to the wireless telecommunication operated according to the telecommunications laws and regulations.

The low power frequency electric machinery should be able to tolerate the interference of the electric wave radiation electric machinery and equipment for legal communications in industrial and scientific applications.

WARNING:

- CAUTION: Do not ingest battery. Chemical Burn Hazard: This product contains a coin button cell battery. If the coin button cell battery is swallowed, it can cause serious internal injury or death if it is not found and removed quickly. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Risk of explosion if the battery is replaced by an incorrect type.

FC Regulations:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- The device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against radio interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio communications, you may be required to take one or more of the following measures: Reorient or relocate the receiving antenna.

Safety Statement

- Article 12: Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the combined lower power frequency electric machinery.

- The application of low power frequency electric machinery shall not affect the negative safety nor interfere a legal communication. If an interference is found, the service will be suspended until improvement is made and the interference no longer exists. The foregoing legal communication refers to the wireless telecommunication operated according to the telecommunications laws and regulations.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions: Charger or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable operation condition without restriction.

This product must not be disposed of as normal household waste, in accordance with EU directive for waste electrical and electronic equipment (WEEE, 2012/19/EU). Instead, it should be disposed of by returning it to the point of sale, or to a municipal recycling collection point.

Made in China
Manufacturer: Shenzhen Ningbo Technology Co., Ltd.
Address: 2/F, Building E1, Qiangdong Industrial zone, Qianlong Road, No. 722, Jiaolong Avenue, Shenzhen, China.

Credit line

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPod, Mac, macOS and watchOS are trademarks of Apple Inc. (US) is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Compatibility statement

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended.

 
 
 
 
How to replace the battery ?

1. Product Up
2. Take out the insulating sheet
3. Push the battery covers and pry it off with a tool
4. Schematic diagram of prying off the cover
5. Remove the battery
6. The direction is the position and negative electrode of the battery and press the battery directly against the battery



How to connect products ?

1. Pull out the insulating sheet and the device will enter the pairing state
2. Open FindMy app
3. Add New Item
4. Add other supported items
5. Search product smart tag
6. Connection naming

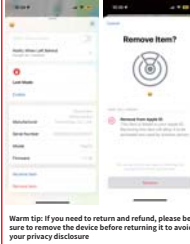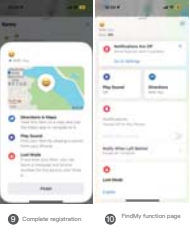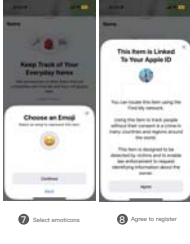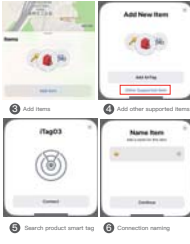

Can't connect? Troubleshooting

1. In Findmy, you can only add other items You cannot choose to add Ap Tag.
2. Check whether the insulating sheet has been pulled out.
3. The equipment pulls out the insulating sheet for the first time and enters the distribution network state for three minutes. During this period, there will be no sound feedback from the single button. Double-click the button and it will shut down with a click. At this time, you need to restore the factory settings if you want to enter the distribution network state again.
4. Restore the factory settings: press the fast button four times, then press and hold it for 10 seconds until the device automatically enters the distribution network state when the beep is heard.
5. Update mobile network, such as switching between WiFi and cellular network.
6. Determine whether to remove the equipment.
7. Restart the phone and try again.

Warm tip: If you need to return and refund, please be sure to remove the device before returning it to avoid your privacy disclosure