

Cyber-C Pocket

User Manual

Table of Contents

1. Getting Started

1.1 Components	1
1.2 Folding & Unfolding	2
1.3 App Download & Connection	3

2. Controls & I/O

2.1 Controls	4
2.2 I/O Ports	5

3. Basic Use

3.1 Power On/Off & Volume Adjustment	6
3.2 Power & Charging	7
3.3 External Connections	8

4. Playing Modes

4.1 Mode Introduction	9
4.2 Sing & Play Mode	10
4.2.1 Switch Rhythm	11
4.2.2 Chord Pads (Sing & Play Mode)	12
4.2.3 Reconfigure Chord Pads	13
4.3 Solo Mode	14
4.3.1 Chord Pads (Solo Mode)	15
4.3.2 Reconfigure Solo Note Range	16
4.3.3 Change Solo Instrument Sounds	17
4.4 Preset & General Settings	18

5. Performance Features

5.1 Transpose	19
5.1.1 Transpose (Light—Key Map)	20
5.2 Tempo	21
5.3 Smart Backing (Drum & Bass)	22
5.3.1 Smart Backing APP Settings	23
5.4 String Scratch Sound	24
5.5 Mixer	25
5.6 Bluetooth Audio	26

6. Miscellaneous

 
6.1 Safety & Care	27
6.2 Specifications	28

1. Getting Started

1.1 Components



Strap



Main Body



 
Type-C Charging Cable



Portable Protective Case




Wrist Strap




Quick Start Guide

1.2 Folding & Unfolding

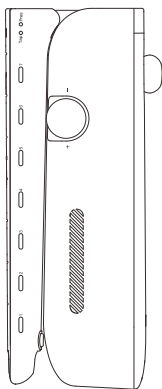

(Folded)

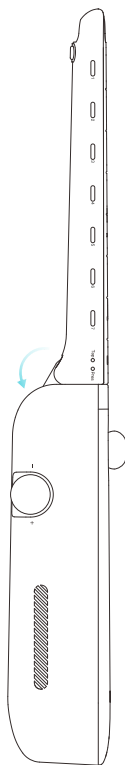

(Unfolded)

1.3 Enya Music App: Download & Connection

Download the Enya Music App and connect your Cyber-G Pocket to unlock more features and settings. Search for “Enya Music” in your app store or scan the QR code below to download.



For more assistance, please contact support_cyberg@enyausicglobal.com.



Enya Music APP

To connect your Cyber-G Pocket, open the app and select your instrument from the device list.


The app will scan for nearby Enya smart devices. Find “Cyber-G Pocket” in the list. You can Tap the edit icon  to rename the device. Tap the device card to connect and open the control homepage.

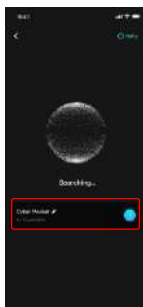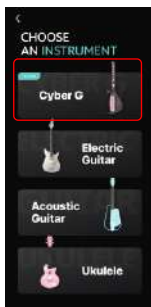

You can also connect via the instrument page in the app.


2.Controls & I/O

2.1 Controls

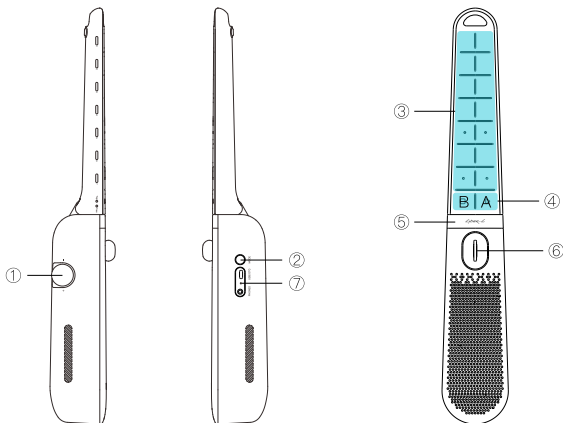

①	FUNC Button	Power ON/OFF; Short press to switch presets; Rotate to adjust volume; Rotate while pressing the touchboard to transpose.
②	MODE Button	Press to switch playing modes.
③	Chord Pads	Press to play chords or notes in coordination with the Pick.
④	Multi-function Control Pad	This area includes Pad A and Pad B (see figure above). Pad A: Tap for tempo; Use together with Pick to start Drum Machine; Triggers drum fill. Pad B: Long press to check battery level; short press to mute or stop the drum accompaniment.
⑤	Multi-function Touchboard	Switch rhythms in Sing & Play mode; Long press with FUNC to transpose; Long press with Pick to switch sounds in Solo mode.
⑥	Pick	Strum to perform or control.
⑦	RESTART	If the device freezes, insert a small tool into the hole to trigger a reset.

2.2 I/O Ports

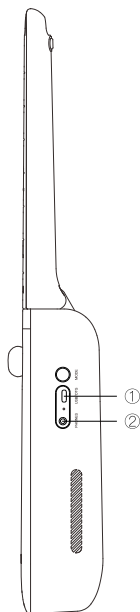

① USB Port: Type-C port for charging and digital audio data transfer.

Note: Some mobile devices may require manual OTG activation.

Please use a fast charger (DC12V==1.5A). 5V/9V adapters are not supported.


② 3.5 mm TRS Headphone Jack: Used to connect headphones or external devices. Ensure volume is at a safe level before use to prevent hearing damage.

3.Basic Use

3.1 Power On/Off & Volume Adjustment


Power: Long press the FUNC button to turn the device ON/OFF.

A prompt sound indicates that power-on is complete.

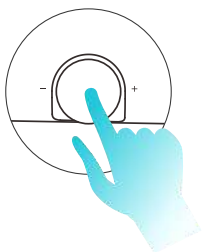

Volume: Rotate the FUNC button clockwise to increase and counter-clockwise to decrease.

To adjust individual part volumes, please connect to the App. **See 5.5 Mixer for details.**

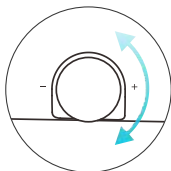

3.2 Power & Charging


Cyber-G Pocket features a built-in high-performance rechargeable battery. Please ensure the battery is fully charged before performances or outdoor use.

Charging Guide

Use a USB Type-C cable to connect the guitar's USB port to a power adapter to charge the device.


Side lights and the pick light will pulse while charging.

All lights will turn solid green when fully charged.

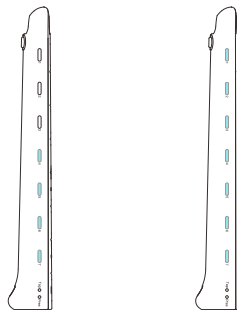

□ Charging □ □ Fully Charged □

Check Battery: Long press Pad B while the device is powered on. The number of lit side lights indicates the remaining battery level.

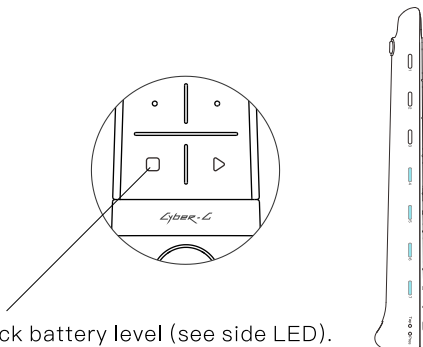

Long press to check battery level (see side LED).

3.3 External Connections

To ensure proper audio performance and protect the device, please follow standard safety guidelines when connecting external devices.

Connecting Headphones:

Before connecting headphones, adjust the volume to a low or moderate level. Then, adjust the volume after connection to avoid sudden loud sound.

Connecting Speakers or Audio Equipment:

Power on the Cyber-G Pocket and connect the cable first, then turn on the external device or raise its volume. To disconnect, lower the volume or turn off the external device before unplugging the cable.

Type-C Digital Audio Connection

You can connect to a phone or computer via Type-C for digital audio transfer. Some phones may need OTG enabled before use.


Note: Power on the device before plugging in the USB cable, or it may not be recognized. Bluetooth audio is automatically disabled during USB audio transfer.

4. Playing Modes

4.1 Mode Introduction

Cyber-G Pocket has two playing modes to choose from: Sing & Play Mode and Solo Mode.

To Switch:

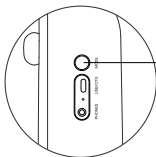

Short press the
MODE button.

Side lights (not yellow):
Sing & Play Mode.

Side lights (yellow):
Solo Mode.




You can also switch modes in the “Playing Mode” in Enya Music APP.



4.2 Sing & Play Mode

1. Press the MODE button until the side lights are NOT yellow to enter Sing & Play Mode.

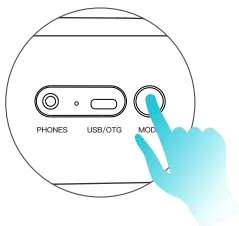

2. Long press a Chord Pad to select a chord. **See 4.2.2 Chord Pad (Sing & Play Mode) for details.**

3. Use the Pick to play chord rhythm patterns.


Strum down: Plays a rhythmic pattern. One strum plays the first half of the measure; a second completes it.

Strum up: Plays a chord arpeggio.

For 4/4 and 6/8 time: Two strums complete one measure.

For 2/4 and 3/4 time: One strum completes one measure.

Strum down to play rhythms.

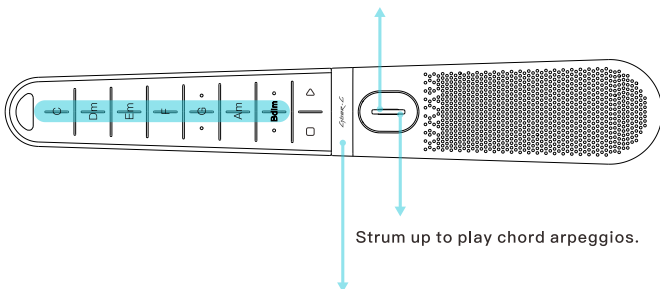


4. Tap the Multi-function Touchboard to toggle between Rhythm 1 and 2.

4.2.1 Switch Rhythm (Sing & Play Mode)


In the Sing & Play mode, you can tap the Multi-function Touchboard to switch to a different rhythm style.

Purple Light: Rhythm 1 ; Blue Light: Rhythm 2.


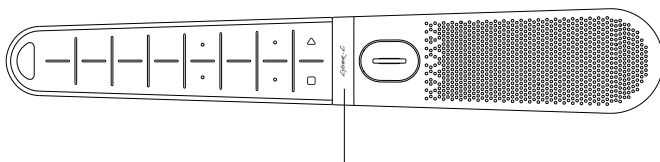


Tap to switch between Rhythm 1 & 2


You can also switch rhythms in the Enya Music APP.

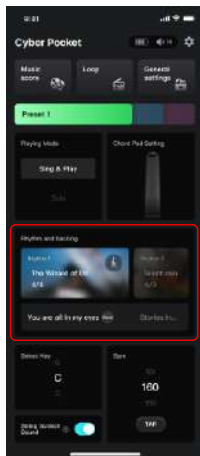

Tap a selected rhythm to switch to a different style.

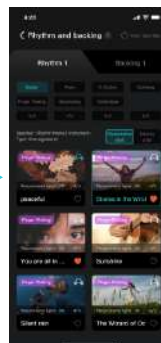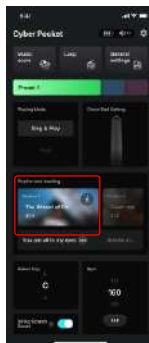

4.2.2 Chord Pads (Sing & Play Mode)

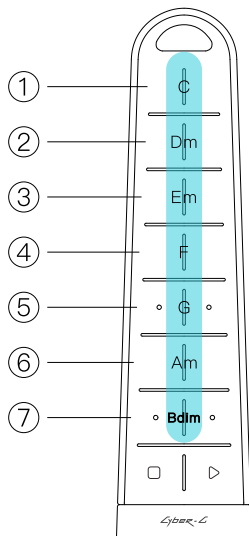

In Sing & Play Mode, the Cyber-G Pocket features 7 chord sections arranged vertically. Each section contains a Left and Right pad, giving you 14 playable pads in total.


You can customize the chords in the app.

By default, pads are mapped to the 1st through 7th chords (triads) of a major key. For example, in the key of C, the pads represent C, Dm, Em, F, G, Am, and Bdim.

You can configure additional chords through the App.


4.2.3 Reconfigure Chord Pads

In Sing & Play Mode, you can modify all 14 chords via the “Chord Pad Settings” in the App.

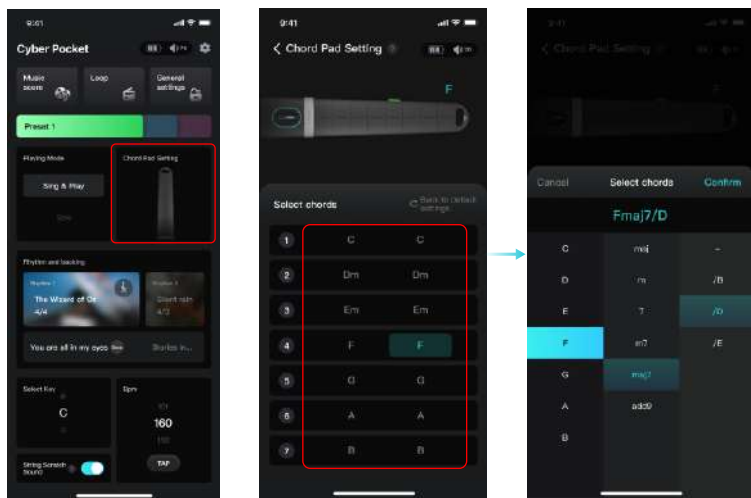

4.3 Solo Mode


1. Press the MODE button until the side lights turn yellow to enter Solo Mode.

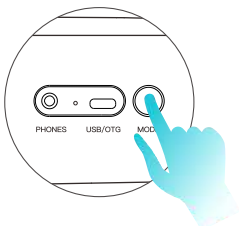

2. Long press a Chord Pad to select a specific note. **See 4.3.1 Chord Pad (Solo Mode) for details.**

3. Strum the pick to play individual solo notes.

Hold a Chord Pad while strumming up and down with the pick to play.

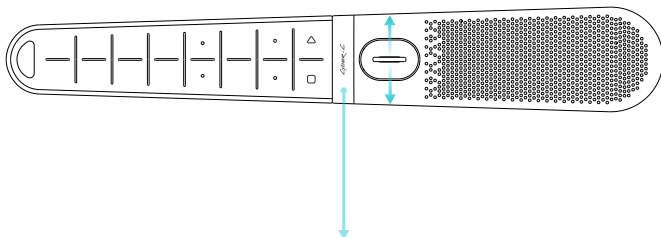

See 4.3.3 Change Solo Instrument Sounds for details.