

Enya INSPIRE PRO Smart Electric Guitar

Quick Start Guide

Table of Contents

1. Product Overview
 2. Charging & Power
 3. Output & Connectivity
 4. Presets & Effects
 5. ENYA MUSIC App
 6. Tuner Function
 7. Battery Replacement
 8. Safety Instructions
 9. Specifications
 10. FCC Statement
-

1. Product Overview

Guitar Controls

1. Master Volume
2. Tone Control

3. Pickup Selector
4. Preset Button
5. Bluetooth Button
6. USB-C Charging Port
7. 6.35mm Output Jack
8. Built-in Speaker

Package Contents

- INSPIRE PRO Smart Electric Guitar ×1
 - USB-C Charging Cable ×1
 - User Guide ×1
-

2. Charging & Power

Charging Instructions

- Please use a PD charger rated at 23W or above.
- Charge the guitar through the USB-C port.
- Charging time may vary depending on the power adapter.
- When the battery is extremely low, the guitar may not power on immediately.
- Please charge for approximately 15 minutes before use.

Power On / Off

- Press and hold the Power Button for 2 seconds to turn on the guitar.
- Press and hold again to power off.

Low Battery Reminder

When the battery level is low, please recharge the device as soon as possible to ensure stable performance.

3. Output & Connectivity

Wired Connection

Connect the guitar to:

- Guitar Amplifier
- Audio Interface
- Headphones
- Computer
- Mobile Device

using a 6.35mm cable or USB-C connection.

Bluetooth Audio

The INSPIRE PRO supports Bluetooth audio playback for backing tracks and practice sessions.

USB Recording

The guitar supports USB audio recording and can be connected directly to compatible computers and mobile devices.

4. Presets & Effects

Built-in Presets

The guitar includes multiple built-in presets:

- Clean
- Crunch
- Overdrive
- Lead
- Ambient

Users can customize presets through the ENYA MUSIC App.

Built-in Effects

- Reverb
- Delay
- Chorus
- Noise Gate
- EQ
- Compressor

Preset Switching

Use the Preset Button or the ENYA MUSIC App to switch between presets.

5. ENYA MUSIC App

App Features

- Preset Editing
- AMP Simulation
- Cabinet Simulation
- EQ Adjustment
- Noise Gate
- Firmware Upgrade
- Preset Sharing
- Bluetooth Connection

Connection Steps

1. Download the ENYA MUSIC App.
2. Enable Bluetooth on your mobile device.
3. Power on the guitar.
4. Open the App and connect the device.

Firmware Upgrade

Please keep the device connected and sufficiently charged during firmware updates.

6. Tuner Function

The built-in tuner supports standard guitar tuning:

- E
- A
- D
- G
- B
- E

When the note indicator turns green, tuning is accurate.

7. Battery Replacement

- Please use compatible rechargeable batteries only.
 - Do not expose batteries to heat, fire, or water.
 - If battery replacement is required, follow official instructions carefully.
 - Improper battery replacement may damage the device.
-

8. Safety Instructions

- Do not disassemble the product.
 - Avoid exposure to extreme temperatures or moisture.
 - Use only recommended charging accessories.
 - Keep away from liquids and direct sunlight.
 - Do not use damaged charging cables.
 - Keep the product out of reach of children.
-

9. Specifications

Item	Specification
Product Name	INSPIRE PRO
Battery Capacity	3250mAh

Item	Specification
Charging Port	USB-C
Audio Output	6.35mm Jack
Wireless Connectivity	Bluetooth
Built-in Speaker	Yes
App Support	ENYA MUSIC App

10. FCC Statement

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.