


正面

USER GUIDE

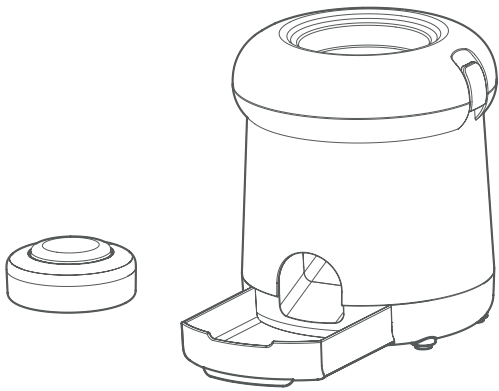

Smart Dog Puzzle Toy

- Sound Recording
- Dog IQ Training
- Interactive puzzle feeders
- Rechargeable

SPECIFICATION

Product NameSmart Dog Puzzle Toy

MaterialABS + PP

Size6.4" x6.4" x7.9"

Power SourceUSB Chargeable (USB A-C)

HOW THE PRODUCT WORKS

Main Unit

On/OFF Button

Reset Button

Kibble Dispensing Adjustment Panel

Kibble Container Lock/Unlock

1

Turn the lid counter clockwise, press the On/OFF button till the blue light flashes.

2

Press and hold until the blue light flashes, then use the remote control's function buttons to establish a wireless connection.

HOW THE PRODUCT WORKS

Remote

Indicator light

Switch

Sound Toggle

Suction Cup Securing slot

Switch

1

Slide the switch to the right. A single ding-dong sound will play, the white light will illuminate for 2 seconds, and a power-on prompt will sound once.

2

Press the top remote button, the indicator light will flash white with a "ring" sound. The main unit dispenses food.

3

Flip the switch left, the power light goes out, signifying shutdown.

4

When the remote control needs charging, a red light will illuminate during each operation to indicate this.

SOUND SWITCHING & RECORDING

1

5 sounds: 4 presets + 1user recording.

2

Switch between sounds: short press the Sound Toggle. (It remembers the last choice when turned on again).

3

Recording: press and hold the Sound Toggle and you hear "di" with a blue light to start recording; Release and you hear "didi" to signal the end of recording (recording duration limited to 1-10seconds).

Tip: To achieve a silent sound effect, record in anoise-free environment.

HOW TO SECURE THE REMOTE

1

Place on the holding tray.(Recommended for the protection of the remote)

2

Attach to smooth surfaces with a suction cup. (Insert suction cup in the slot, slide to lock it in)

HOW TO PUT IN DOG KIBBLES

1

Turn the lid counterclockwise.

2

Adjust the Kibble Dispensing Adjustment Panel and scoop in the dog kibbles.

HOW TO PUT IN DOG KIBBLES

1

Adjust the Kibble Dispensing Adjustment Panel properly.

2

Turn the lid clockwise.

13cm

40cm

反面

HOW TO DISPENSE DOG KIBBLES

1

Pull the kibble tray to the position where you hear the "Click" sound to secure it in place.

2

Press the top remote button and the main unit will dispense kibbles.

Tip: To prevent frequent dispensing, the main unit is designed to be triggered only once within a 5-second interval, even if the remote is pressed multiple times.

USB CHARGING

1

Charging: Red indicator light stays on.

2

Fully charged: The white light stays on when fully charged.

3

The device can be turned on while the remote control is charging.

4

The product charges with QC adapters (USB A-C) and won't charge with PD adapters (USB C-C).

5

The host unit's red indicator flashes once every 3 seconds to indicate low battery: During charging, the red light pulses slowly. Once fully charged, the blue light remains steady.

Type-C Charging Socket

Indicator light

Type-C Charging Socket

Indicator light

Tip: The main unit fully charges in about 3.5 hours. The remote fully charges in about 2 hours.

MAINTENANCE

1

Unlock and take out the kibble container.

2

Remove tray. Be confident to use more force to separate it after you hear "Click" sound.

3

Rinse and dry the kibble container and tray before putting them back in the main unit.

Tip: Clean the kibble container and tray regularly. Do not wash the main unit and remote.

FCC WARNING MESSAGE

This device has been tested and meets the Class B digital device limits specified in Part 15 of the FCC rules. These limits are intended to provide reasonable protection for residential installations against harmful interference. This device generates, uses, and may emit radio frequency energy. If installed and used not in accordance with the instructions, it may cause harmful interference to radio communications. However, it cannot be guaranteed that interference will not occur in a specific installation environment. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), the user is advised to take one or more of the following measures to eliminate the interference:

- Adjust the direction or position of the receiving antenna
- Increase the distance between the device and the receiver.
- Connect the device to a power outlet that is on a different circuit from the receiver.

This device complies with Part 15 of the FCC rules and its operation must meet the following two conditions: (1) This equipment must not cause harmful interference; (2) This equipment must tolerate any interference received, including interference that may cause abnormal operation.

Any alterations or modifications without the explicit approval of the responsible party for compliance may result in the user losing the authority to operate the equipment.