 


Digital Camera Easy Guide

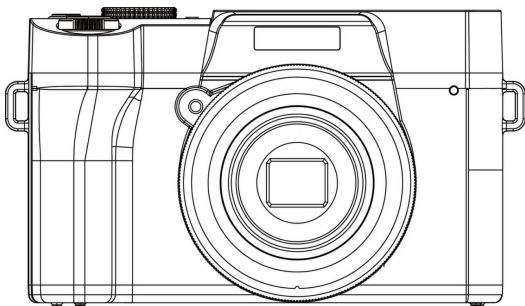

content

Warning.....	1
Precautions.....	1
About the camera.....	2
System Requirements.....	2
Camera components.....	2
Charge the camera.....	5
Turn the camera on/off.....	6
Set up the camera.....	6
Insert and format the memory card.....	8
Format memory card.....	8
Using a camera.....	9
Focusing function.....	11
Fully automatic focus.....	11
Manual focus.....	11
Macro mode.....	11
Fill light.....	11
Media replay.....	12
Connect to computer.....	13
Charging mode.....	13
Mass Storage Mode.....	13
PC Camera.....	13
WiFi App User Guide.....	14
Camera Cleaning and Maintenance.....	14
Troubleshooting.....	14
Supplementary Notes.....	15

Warning

To reduce the risk of fire or electric shock,

1. Do not expose the device to rain or damp environments.
2. Do not place objects containing liquids (such as vases) on the device.
3. Do not expose the batteries to direct sunlight, fire, or other excessively hot environments.
4. Do not swallow the batteries to avoid chemical burns.
5. Keep new and used batteries out of reach of children. If the battery compartment is not securely closed, discontinue use of this product and keep it out of reach of children.
6. If you believe the batteries may be swallowed or placed in any part of your body, seek immediate medical attention.

Precautions

If the battery pack is mishandled, it may explode, causing fire or even chemical burns.

Please observe the following precautions.

1. Do not disassemble.
2. Do not crush the battery pack or subject it to any impact or external force, such as hammering, dropping, or stepping on it.
3. Do not short-circuit the battery pack, and do not allow metal objects to come into contact with the battery terminals.
4. Do not expose to temperatures exceeding 60°C (140°F), such as in direct sunlight or in a car parked in the sun.
5. Do not incinerate or dispose of in fire.
6. Do not dispose of damaged or leaking lithium-ion batteries.
7. Keep the battery pack out of the reach of children.
8. Keep the surface of the battery pack dry.
9. Replace only with the specified type of battery. Failure to do so may result in explosion, fire, or injury.
10. Dispose of used batteries according to the instructions.
11. When using the AC adapter/battery charger, use a nearby wall outlet. If any malfunction occurs, unplug the battery pack from the wall outlet. If you are using a product with a charging light, please note that even if the light turns off, the product will not be disconnected from the power source.
12. Do not use the AC adapter/battery charger in confined spaces, such as between walls and furniture.
13. If static electricity or electromagnetic interference causes data transmission to be interrupted midway, restart the app or disconnect and reconnect the communication cable (USB, etc.).

About the camera

 
System Requirements

Users can transfer videos and photos to computers with the following configurations: Intel Pentium 2.0GHz or higher / Microsoft Windows XP or higher operating system, 2GB RAM, 40GB or more available disk memory / standard USB interface / 1GB GPU or higher, 1920x1080 pixels or higher resolution.

Camera Parts


Rear view

Front view

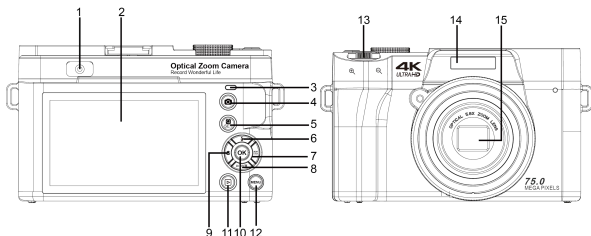


- | | |
|--|--------------------------------|
| 1. Front-facing camera | 11. Playback button |
| 2. Display screen | 12. Menu button |
| 3. Charging indicator/Work indicator light | 13: Optical zoom toggle button |
| 4. Front/rear camera switch button | 14: Fill light |
| 5. Q button (quick parameter adjustment) | 15: Rear camera |
| 6. Up button/Fire flash shortcut/Long press to turn on Wi-Fi | |
| 7. Right button/AE/AF LOCK button | |
| 8. Down button/DISP button/Delete button | |
| 9. Left button/Macro mode | |
| 10. OK button | |

 Top view

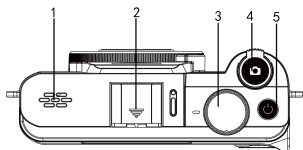


Bottom view

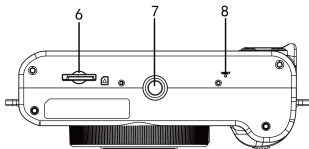 

- 1: Speaker
- 2: Hot shoe
- 3: Mode dial
- 4: Camera button
- 5: Power button

- 6: Memory card slot
- 7: Tripod mount
- 8: Reset hole

 Left side view

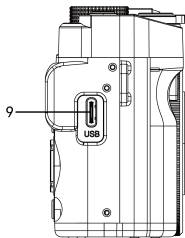


- 9: TYPE-C USB interface

Button/Indicator	Function
Power button	Power on/off
	Short press to pause video during recording
Photo button	Take a photo/half-press to focus
	Start recording / End recording
Mode Turntable	Switch shooting modes
Hot shoe seat	Install external microphone and fill light connector
indicator lights	Red charging indicator light / Blue working indicator light
	Optical zoom magnification/volume+
	Optical zoom reduction/volume -
Front and rear camera switch button	Short press to switch between front and rear cameras
Q button	Quick parameter adjustment
Up button	Select Up
	Short press to turn the fill light on/off
	Long press to turn Wi-Fi on/off
Right button	Select to the right
	Short press to lock auto exposure/focus
Down button	Select down
	A single short press clears the screen
	Delete photos/videos
Left button	Choose to the left
	Short press to turn macro mode on/off
OK button	Confirm
Playback button	Open/Exit Media Playback
Menu button	Open/close menu settings
USB	USB charging
	Connect the computer using a USB cable

Charge the camera

 1. You can use the provided USB cable to charge your camera via the adapter (5V/1A~5V/2A).

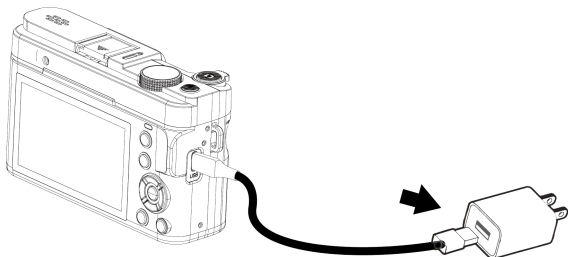

* The charging indicator light will illuminate red while the camera is charging.

 
* The charging indicator light will automatically turn off when the camera is fully charged.

A full charge typically takes approximately 3 hours.

After a full charge, the recording time is approximately 150 minutes.

Turn the camera on/off

Press the power button and the camera will turn on automatically.

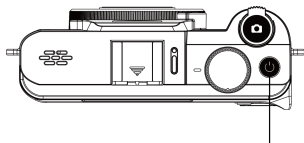

Power button

To turn off the camera, press and hold the power button for 3 seconds.

 
Note: To turn on the camera for the first time, you need to press and hold the power button for an extended period.

Set up the camera


You can customize the camera settings.

After turning on the camera, press the menu button to open the mode menu and enter the system settings.

Menu settings

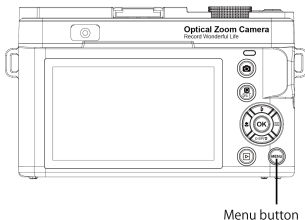

Menu button

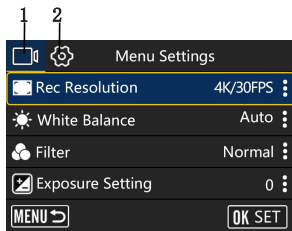 


- 1: Current Mode Submenu
- 2: System Settings

Submenu	Menu content
Macro mode	Turn On/Turn Off
AE-L+AF-L	AE-L/AF-L/AE-L+AF-L
Icon display	Turn On/Turn Off
Wi-Fi	Turn On/Turn Off
APP User Guide	Scan the QR code to view the tutorial
Light source frequency	Auto/50Hz/60Hz
LED indicator	Turn On/Turn Off
AF Assist Lamp	Turn On/Turn Off
Auto screen saver	Turn Off/ 30 seconds / 1 minute / 2 minutes
Auto Power Off	Turn Off/ 3 minutes / 5 minutes / 10 minutes
Display brightness	0%~100%
Button Prompt	High/Medium/Low/Turn Off
Startup Music	Turn On/Turn Off
Language	Simplified Chinese / Traditional Chinese / English / Japanese / Korean / Russian / German / French / Italian / Spanish / Portuguese / Thai / Dutch / Polish / Swedish / Romanian / Indonesian / Turkish/Greek
Time format	YYYY/MM/DD MM/DD/YYYY DD/MM/YYYY
Time set	Hour/Minute/Second
Date set	Year/Month/Day
Format	Format/Cancel
Device Info	Product Model and Version
Factory Reset	Confirm/Cancel

Insert and format the memory card

For proper use, a Class 10 or higher speed memory card is recommended.

 1. Insert the memory card until you hear a "click" sound.

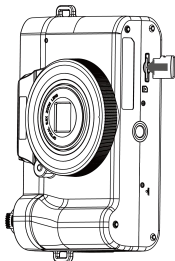

Insert the card as shown in the diagram, paying attention to the edges and corners

2. To remove the memory card, please push it in; it will eject automatically.

 
 
Format memory card

It is recommended to format the memory card before first use.

To format the memory card, press the menu button to open the system menu.

Then press the left or right button to switch to system settings. Press the up or down button to find "Format," and then press the OK button to enter the submenu.

Select "Confirm" to format the memory card.

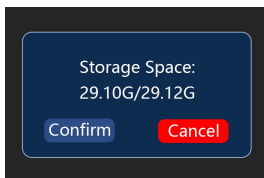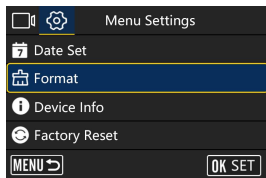

Note: If the file system on the memory card is not supported, a prompt will appear: "File system not supported, format now?". Please follow the steps above to format the memory card.

Formatting the memory card will erase all data stored on it, and the data will be unrecoverable. Please save important data to your PC before formatting.

Using a camera

After turning on the camera, rotate the mode dial to select the desired mode.




Icon	Mode	Description
	Normal Photo	Take single photos normally
	Auto Photo	Automatically cycle shooting after specified seconds
	Timer Photo	Take a single photo after specified seconds
	Continuous Photo	Continuously shoot a specified number of photos
	Normal Video	Record video in normal mode
	Slow Motion	Record video in slow motion mode
	Time-Lapse Video	Record video in compressed time mode
	Loop Recording	Record video in infinite loop mode
	Video + Photo	During video recording, press to capture single photos at set interval times

The camera supports setting corresponding mode menus for different modes. After selecting the desired mode, press the menu button to open the menu and select the desired settings.

Press the shutter button to take a photo; the photo will be automatically saved to the memory card.

 Press the shutter button to start recording, and press it again to stop recording. You can also press the power button to pause/resume recording during the process.

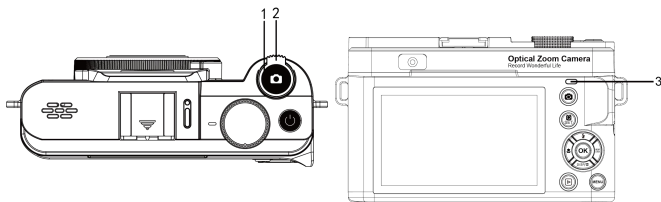

1. Photo button (recording start/stop button)

2. Optical zoom toggle button

⊕ Optical zoom magnification/ ⊖ optical zoom reduction

3. Indicator light

The indicator light flashes during recording.

Focusing function

This feature includes two focus modes: fully automatic focus and manual focus. Press the menu button to open the menu, then press the left/right keys to switch to mode settings, press the up/down keys to find "Focus Mode," press the OK button to enter focus mode, and select the mode you need.

Fully automatic focus

In this mode, simply keep the camera steady while taking a photo or video, and it will automatically focus. Once finished, press the shutter button.

Manual focus

In this mode, a manual focus bar will appear at the bottom of the photo or video recording interface. Use the zoom toggle button to manually adjust the focus until it is sharp. Then press the shutter button to take the clearest picture or press the record button to start recording with the clearest image.

Macro mode

In this mode, point the camera at the subject (5cm or more). When the subject is clearly displayed on the camera screen, hold the camera steadily and press the shutter button to take a photo and record video.

Fill light

In video mode, pressing the up button quickly turns the flash on or off.

In photo mode, the flash has three flash modes; pressing the up button allows you to quickly switch between them.



	No flash
	Auto flash
	Mandatory flash

Note: When the fill light is in automatic flash mode, it will only flash when taking photos in low-light conditions. When switched to forced flash mode, the flash will always be on.

Media replay

Press the playback button to open the media library.

  Select the video or photo file you want to view, and then press the OK button to enter the corresponding file to view the videos and images stored on the camera's memory card.

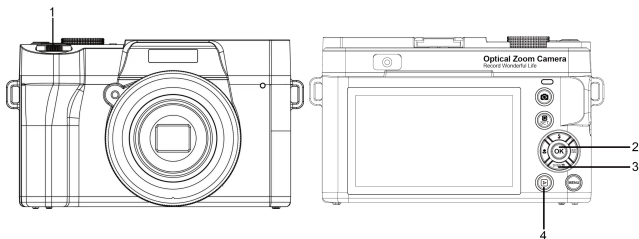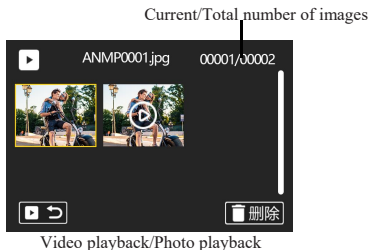

1: To view detailed information of the captured photos, turn the  .

Note: After zooming in, you can press up/down/left/right to move and see more details.

2: Press the OK button to play/pause the video.

 
3: Press the Delete button to delete the photo/video.

Note: Once deleted, it cannot be recovered.


4: Press the playback button to exit video/photo playback.

Connect to computer

1. Connect the camera's Type-C USB port to the computer's USB port using the provided USB cable.

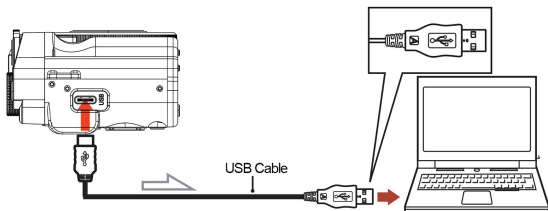

 2. With the camera powered on, the screen will display available options. Press the Up/Down button, then press the OK button to confirm the settings.

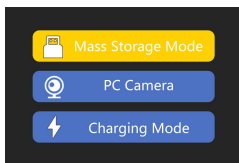

Charging mode

Selecting the charging mode allows the camera to continue recording normal video.

Turning the camera off will charge it faster than leaving it on.

Mass Storage Mode

Select "Mass Storage Mode," and your computer will display the camera's memory card. You can then transfer files from the memory card to your computer.

PC Camera

Select "Webcam" mode to use the camera as a webcam, for live streaming, etc.

Note: When the camera is used as a webcam, only the optical zoom switch on the camera can be operated; other functions are unavailable.

WiFi App User Guide

Press the MENU button to enter the menu, press the left/right keys to enter system settings, then press the up/down keys to find the "APP User Guide" submenu, and finally press OK to scan and view the tutorial. You can scan the QR code on the right below to download the WIFI APP.



WIFI APP User Guide QR Code



QR code for downloading the WiFi app

Camera cleaning and maintenance

- (1) To extend battery life, if the camera is not used for an extended period, please charge it at least once a month and store it in a dust-free, dry environment with a temperature not exceeding 30°C.
- (2) If there is dust or dirt on the lens or screen, please gently wipe it with a clean, soft lens cleaning cloth.
- (3) As this is a precision instrument, please do not drop it or subject it to strong impacts or vibrations.

Troubleshooting

If you encounter camera problems, please refer to this section.

1. The camera cannot be turned on

- (1) The battery is low. Please charge the camera.

2. Camera not charging

- (1) If the charging indicator light is not on, the charger is not plugged in properly. Please check if the charger is connected correctly.
- (2) An ambient temperature below 10°C may cause slow charging or failure to charge.

3. Camera freezes

If the camera freezes unexpectedly, use a pin to poke the reset hole on the camera to reset it.

Note: Do not press the shutter button quickly while the camera is recording video or taking photos. Normally, the camera will display a waiting icon.

4. Memory card not recognized:

- (1) Please check if the memory card conforms to the SD card (Class 10) standard, with a maximum size of 256GB.
- (2) Please check if the memory card is inserted backwards.
- (3) When using a memory card on a camera for the first time, it is recommended to format it first.

Supplementary Notes

- (1) Do not insert any object into the slot except the memory card.
- (2) After powering on, the camera may display an unstable image for a few seconds; this is not a malfunction.
- (3) Due to the optical characteristics of the lens, chromatic aberration (chromatic aberration magnification) may occur at the image edges. This is not a camera malfunction.
- (4) It is normal for the memory card to heat up after prolonged use.
- (5) It is normal for the camera screen to heat up after prolonged use.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction