

# Digital Camera

## User manual



|                                                |    |
|------------------------------------------------|----|
| <b>WARNING</b> .....                           | 1  |
| <b>CAUTION</b> .....                           | 1  |
| <b>About the camera</b> .....                  | 2  |
| System requirements .....                      | 2  |
| Parts and controls.....                        | 2  |
| Charging the battery.....                      | 5  |
| <b>Power on/off the camera</b> .....           | 6  |
| <b>Set the camera</b> .....                    | 6  |
| <b>Insert and format the memory card</b> ..... | 8  |
| Format the memory card.....                    | 8  |
| <b>Using the camera</b> .....                  | 9  |
| Focus function.....                            | 11 |
| Fully automatic focus.....                     | 11 |
| Manual focus.....                              | 11 |
| Fixed focus .....                              | 11 |
| Fill light.....                                | 11 |
| <b>Playback</b> .....                          | 12 |
| <b>Connect to computer</b> .....               | 13 |
| Charging mode .....                            | 13 |
| Mass Storage mode.....                         | 13 |
| PC camera .....                                | 14 |
| WIFI APP User Guide .....                      | 14 |
| Camera cleaning and maintenance.....           | 15 |
| Troubleshooting .....                          | 16 |
| Additional notes .....                         | 16 |

To reduce the risk of fire or electric shock:

1. Do not expose the unit to rain or moisture.
2. Do not place objects filled with liquids, such as vases, on the apparatus.
3. Do not expose the batteries to excessive heat, such as sunshine, fire or the like.
4. Do not ingest batteries, chemical burn hazard.
5. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
6. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

If the battery is mishandled, the battery pack can burst, causing a fire or even chemical burns. Observe the following cautions:

Do not disassemble.

Do not crush and do not expose the battery pack to any shock or force such as hammering, dropped or stepping on it.

Do not short circuit and do not allow metal objects to come into contact with the battery terminals.

Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.

Do not incinerate or dispose of in fire.

Do not handle damaged or leaking lithium ion batteries.

Keep the battery pack out of the reach of small children.

Keep the battery pack dry.

Replace the battery with the specified type only. Otherwise, bursting, fire or injury may result.

Dispose of used batteries according to the instructions.

Use a nearby wall outlet (wall socket) when using the AC Adapter/Battery charger.

If any malfunction occurs, disconnect the plug from the wall outlet immediately to disconnect from the power source. If you use the product with a charge lamp, note that the product is not disconnected from the power source even if the lamp turns off.

Do not use the AC adapter/Battery charger placing in a narrow space, such as between a wall and furniture.

If static electricity or electromagnetism cause data transfer to discontinue midway (fail), restart the application or disconnect and reconnect the communication cable (USB, etc.) again.

# About the camera

---

 
## System requirement

Users can transfer videos and photos to computers with the following configurations:

Intel Pentium 2.0GHz or higher/ Microsoft Windows XP or higher operating system 2GB RAM 40GB or more available disk memory/ Standard USB interface / 1GB GPU or higher 1920x1080 pixels or higher resolution.


## Parts and controls

**Rear view**

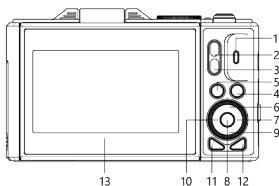


- 1: Charging/working indicator light
- 2: Digital zoom in
- 3: Digital zoom out
- 4: Delete button
- 5: Playback button
- 6: Up button/shortcut button for fill light
- 7: Right button
- 8: OK button

**Front view**

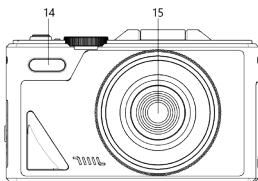 


- 9: Down button
- 10: Left button
- 11: DISP button
- 12: Menu button
- 13: Display screen
- 14: Fill light
- 15: Lens

**Top side view**

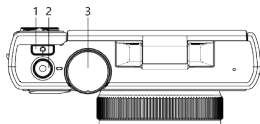 


- 1: POWER button
- 2: Photo button

**Bottom side view**

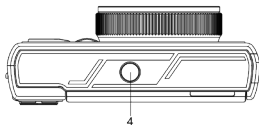 


- 3: Mode Dial
- 4: Tripod hole

**Left side view**

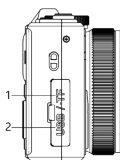 

- 1: Memory card slot
- 2: Type-C USB interface
- 3: Battery compartment


**Right side view**

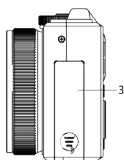 


|                 |                                     |
|-----------------|-------------------------------------|
|                 |                                     |
| POWER           | Power on / off                      |
| PHOTO           | Take photo                          |
|                 | Pause of recording                  |
| Mode dial       | Switch shooting mode                |
| T               | digital zoom in                     |
| W               | Digital zoom out                    |
| Indicator light | Working / Charging indicator light  |
| Playback button | Open/Exit Media Playback            |
| Up              | Upward                              |
|                 | Turn on/off the fill light          |
| Right           | Rightward                           |
| Down            | Downward                            |
|                 | Delete photo/video                  |
| Left            | Leftward                            |
| OK              | Confirm                             |
| DISP            | Turn on/off the display             |
| MENU            | Open / Close menu settings          |
| USB             | USB cable charging                  |
|                 | Connect the computer with USB cable |

## Charging the battery

 1. Power off your camera, open the battery cover, and insert the battery in the direction shown in the following picture, then close the battery cover.

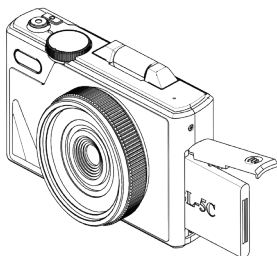

 2. You can use supplied USB cable to charge your camera via an adapter (5V/1A~5V/2A).

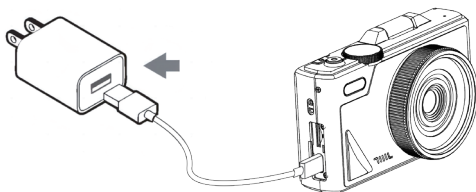

\* The charging indicator will be turned on in red when the battery is in charging.

\* The charging indicator will be turned off automatically when the battery is fully charged.


Normally it takes around 2 hours to full charging of the battery.

When the battery is fully charged, the battery life is around 60 minutes for recording.

# Power on/off the camera

 ---

Press the power button, the camera will turn on automatically.



To turn off the camera, press and hold the power button for 3 seconds.

Note: When you turn on the camera for the first time, you need to press and hold the power button to turn it on.


When there is no battery in the battery compartment, you need to press and hold the power button to turn on the camera after you put the battery in.

## Set the camera

 
---

You can make custom settings of the camera.

After the camera is turned on, press the menu button to open the menu settings.

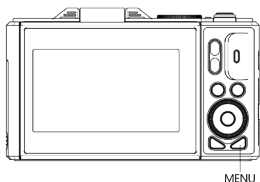

### Menu Settings

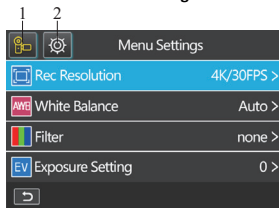 

1 :Sub-menu for current mode

2 :System settings


| Sub-menu               | Menu content                                                                                                            |
|------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Image Rotation         | Turn On/Turn Off                                                                                                        |
| Icon Display           | Turn On/Turn Off                                                                                                        |
| Video Focus Mode       | Auto focus/Manual focus/Fixed focus                                                                                     |
| Wi-Fi                  | Turn On/Turn Off                                                                                                        |
| APP Usage Guide        | Scan the QR code to view the tutorial                                                                                   |
| Light Source Frequency | Auto/50Hz/60Hz                                                                                                          |
| LED Indicator          | Turn On/Turn Off                                                                                                        |
| Auto Screen Saver      | Turn Off/30s/1Minute/2Minute                                                                                            |
| Auto Power Off         | Turn Off/3Minute /5Minute /10Minute                                                                                     |
| Display Brightness     | High/Middle/Low                                                                                                         |
| Button Prompt          | High/Middle/Low/Turn Off                                                                                                |
| Startup Music          | Turn On/Turn Off                                                                                                        |
| Language               | Simplified Chinese/Traditional Chinese/English/ Japanese/Korean/ Russian/German/French/Italian/ Spanish/Portuguese/Thai |
| Time Format            | YYYY/MM/DD MM/DD/YYYY DD/MM/YYYY                                                                                        |
| Time Set               | hour minute second                                                                                                      |
| Date Set               | year month day                                                                                                          |
| Format                 | (Micro SD Card)Format/Cancel                                                                                            |
| Device Info            | Product model and version number                                                                                        |
| Factory Reset          | Confirm/Cancel                                                                                                          |

# Insert and format the memory card

 ---

A class 10 or higher speed memory card is recommended to normal use.

1.Insert the memory card into the memory card slot until you hear a "click".

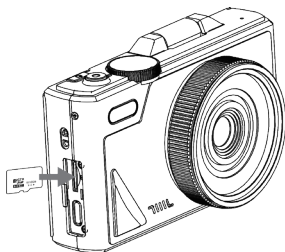

Insert the memory card in the direction shown in the diagram, paying attention to the edges and corners.



2.To remove the memory card:Push the memory card in and it will automatically pop out.

## Format the memory card

  ---

It is recommended to format the memory card before the first use.

To format the memory card, press the menu button to open the menu system.Then press the left or right button to switch to system settings. Press Up or Down to find "Format" and press OK to get the sub-menu. Select "Format" to format the memory card.

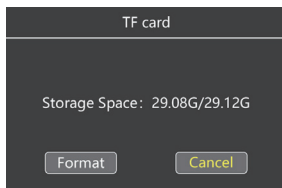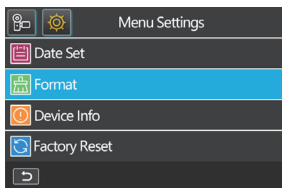

Note:If the memory card is not native format, the screen will pop-up a prompt: "Unsupported file system,do you want to format?" please format the memory card as above operation.

Formatting the memory card will erase all the data stored on it and the data will be irrecoverable. Save your important data on PC before formatting.

# Using the camera

After the camera is turned on, it defaults to video shooting mode.



 
Rotate the mode dial to select the desired mode

| icon                                                                                | Mode        | illustrate                                                                                     |
|-------------------------------------------------------------------------------------|-------------|------------------------------------------------------------------------------------------------|
|    | Photo       | Take a single photo normally                                                                   |
|    | Auto        | Automatically cycle take photos after a specified number of seconds                            |
|    | Timed       | Take a single photo after a specified number of seconds                                        |
|    | Burst       | Take a specified number of photos in succession                                                |
|    | Video       | Normal recording mode                                                                          |
|   | Slowly      | Slow motion shooting                                                                           |
|  | Lapse       | Compress time to record video                                                                  |
|  | Loop        | Recording infinite loop                                                                        |
|  | Video+Photo | During the recording video, you can capture according to the set capture interval single photo |

Note: The camera supports setting the corresponding mode menu in different modes. After selecting the desired mode, press the menu button to open the menu and select the desired setting if desired.

Press the photo button to take a photo, and the photo will be automatically saved to the memory card.

In video recording mode, press the photo button to start recording, and then press to end recording. You can also press the power button to pause/continue recording while recording.

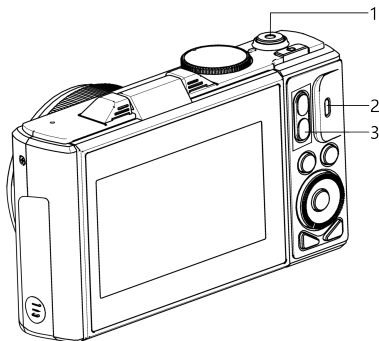

1: Photo button (video start/end button)

Press to start recording, then press to end recording

2: Indicator light

The working indicator light flashes when recording

3: Digital zoom button

T button digital zoom zoom in/W button digital zoom zoom out

## Focus function

This function includes 3 focus modes: automatic focus/manual focus mode/fixed focus. Press menu button Open the menu, then press the left/right button to switch to system settings, press the up/down button to find "Video Focus Mode", press OK button to enter focus mode. Select the mode you need.

### Fully automatic focus

In this mode, you only need to keep the camera steady when taking pictures or videos, and the camera will automatically focus. Once done, press the capture button.

### Manual focus

In this mode, when taking a photo or recording a video, half-press the photo button and the focus frame will appear on the display until the camera focuses clearly. Then press the photo button all the way down to take the clearest photo or start recording with the clearest image.

### Fixed focus

In this mode, you need to press the shooting button halfway to focus when taking pictures or videos, and the screen will clearly show the image of the object being shot, and then press the shooting button to the end. If you release the capture button to take pictures or record videos, the pictures and videos will not be clear.

## Fill light

In video mode, pressing the up button can quickly turn on or off the fill light. In photo mode, the fill light has three flash modes and pressing the up button can quickly switch between the three modes.

|                                                                                     |                 |
|-------------------------------------------------------------------------------------|-----------------|
|  | No flash        |
|  | Auto flash      |
|  | Mandatory flash |

Note: When the fill light is in automatic flash mode, it will only flash when taking photos in a relatively dark environment. When switched to forced flash mode, the fill light will always be on.

# Playback

Press the playback button to enter the media library. Select the video or photo file you want to view, then press the OK button to enter the corresponding file to view the video and image stored in the camera memory card.

**Current/total number of images**

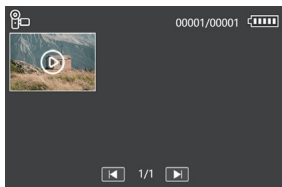 


Figure 1: Video playback


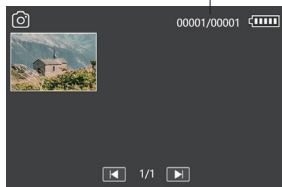 


Figure 2: Photo playback

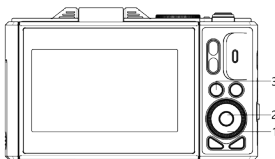 

1: Press the down button to delete a photo/video.

Note: Once deleted, it cannot be recovered.


2: Press the OK button to play/pause the video

3: Press the playback button to exit video/photo playback

# Connect to computer

 
---

1. Connect the Type-C USB port of the camera and the USB port of the computer with supplied USB cable.

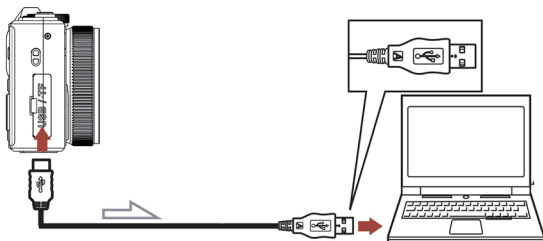

2. The camera will turn on automatically and the screen will display the available options.

 Press the Up/Down button to select the desired option, then press the OK button to confirm the option.

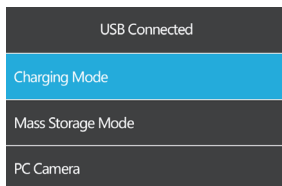

## Charging Mode

Select the charging mode, the camera supports the function of recording normally. Power off the camera would be fully charged faster then keep powering on.

## Mass Storage Mode

Select "Mass Storage Mode" and the computer will display the camera's memory card drive. You can transfer files from the storage to the computer on the computer.

## PC Camera

Select the “PC Camera” mode, the camera can be used as a webcam, live streaming, etc.

Note: When the camera is used as a webcam, only the digital zoom button can be operated on the camera and other functions cannot be used.

## WIFI APP User Guide

Press the MENU button to enter the menu, press the left/right button to enter the system settings, then press the up/down button to find the "APP Usage Guide" submenu bar, and finally press OK to scan and view the tutorial. To download WiFi, you can scan the QR code on the right below.



WIFI APP User Guide QR Code



WIFI APP Download QR Code

## **Camera cleaning and maintenance**

- (1) If you do not use the camera for a long time, take out the camera battery and place it in a dust-free, dry environment with a temperature no higher than 30 °C .
- (2) In order to extend the service life of the battery, please discharge it completely before storage.
- (3) Please fully discharge the battery at least once every 3 months after it has been fully charged.
- (4) If there is dust or dirt on the lens or screen, gently wipe it with a clean, soft lens cleaning cloth.
- (5) As this machine is a precision instrument, please do not drop it or suffer from strong impact or vibration.

## **Troubleshooting:**

If you encounter problems with the camera, please refer to this section.

### **1. The camera cannot be turned on after installing the battery**

- (1) The battery power is insufficient, please replace the battery with a new one or charge the battery.
- (2) The battery is installed in reverse, please confirm that the battery is installed in the correct way.
- (3) The battery insulating paper is not removed.

### **2. The battery is not charging**

- (1) If the red light of the charging indicator flashes, the battery is not in place or the contact is poor. Please re-install the battery until the indicator light is on (the indicator light goes out when the battery is fully charged)
- (2) The charging indicator light is off and the charger is not plugged in properly. Please check whether the charger is connected normally.
- (3) The ambient temperature is lower than 10°C, which may lead to slow charging or failure to charge.

### **3. Camera crashes**

Quickly pressing each button of the camera may cause the camera to freeze. After it crashes, unplug the battery and reboot.

Tip: When the camera is recording or taking pictures, do not quickly press the camera button. Under normal circumstances, the camera will display a waiting icon.

### **4. The memory card cannot be recognized:**

- (1) Please check whether the memory card complies with Micro SD card (class10),
- (2) Please check whether the memory card is inserted backwards.
- (3) When the memory card is used on the camera for the first time, it is recommended to format it first.

### **Additional notes**

- (1) Do not insert any object into the slot except the memory card.
- (2) After the power is turned on, the camera may show an unstable image about for a few seconds, but this is not a fault.
- (3) Due to the optical properties of the lens, there may be color dispersion (magnification of chromatic aberration) at the edges of the image. This is not a camera fault.
- (4) It is normal for the memory card to get hot after a long period of use.
- (5) It is normal for the camera's screen to heat up after a long period of use.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications.

However, there is no

guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on,

the user is encouraged to try to correct the

interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

or

connected.

-- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure

condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference;

(2) This device must accept any interference received, including interference that may cause undesired operation.