

正面

ITEM FINDER Never Lost Things 1. Power on the Card Pro. 2. Open the "Find My", tap"+". 3. Tap "Add Other Item" 4. Tap "Connect" 5. Follow the on-screen instructions to complete the Connection. Works with Apple Find My Works with Android Find Hub 	Each product can only be paired with one device. Quick Start IOS: 1. Power on the Card Pro. 2. Open the "Find My", tap"+". 3. Tap "Add Other Item" 4. Tap "Connect" 5. Follow the on-screen instructions to complete the Connection.	Locate Your Item 03 1. Find Item Locator when it is Nearby Open Find My app and select the "Items" tab . Tap on your Item Locator from the list . Tap "Play Sound" to make your Item Locator beep. Tap "Stop Sound" to stop the beeps once you find your item . 2. Find Item Locators Last Known Location Open Find My app and select the "Items" tab . Tap on your Item Locator from the list . Your Item Locator's last known location will appear on the map as the emoji you chose during set up . To navigate to that last known location, tap Directions to open the Maps app Find Item When Out of Range 04 1. Enabling "Notify when Left Behind" Open Find My app and select the Items" tab. Tap on your Item Locator from the list . Under "Notifications", enable the "Notify when Left Behind" toggle. You will receive a notification when you leave your Item Locator behind and it's no longer in range of your device . 2. Enabling "Notify when Found" Under "Notifications", enable the "Notify When Found" toggle . When your Item Locator is seen by another Find My enabled device, you will receive a notification of its updated location . Note: "Notify when Found" can only be activated when your Item Locator is out of range . When Your Item is Lost 05 1. Enabling "Lost Mode" Open Find My app and select the Items" tab . Tap on your Item Locator from the list .	Under Lost Mode", tap Enable . A screen detailing Lost Mode will pop up, tap Continue . Enter your phone number or email address and tap "Next". Resetting Your Item Locator 06 1. Remove the Item Locator from Find My app Open Find My app and select the Items" tab. Tap on your Item Locator from the list . Please ensure "Lost Mode" is disabled . Scroll to the bottom of the screen and tap Remove Item . A summary will open, tap "Remove" to confirm . 2. Factory Reset Your Item Locator: After successfully removing the Item Locator from Find My app, press the Item Locator's function button four times rapidly, you will hear a beep each time you press it and then hold it a fifth time until you hear a ringing chime . The Item Locator is now reset and ready to be paired to a new device . But Wait... There's More 07 1. Unwanted Tracking Detection: If your iPhone detects that an unknown Item Locator is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it. These alerts are only activated when an Item Locator is not connected to its owners phone, so your partner's Item Locator will not trigger a sound if they are with you.	The Fine Print This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Recent or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected . -- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction .
ITEM FINDER Never Lost Things 1. Power on the Card Pro. Wait for the pop-up to show Card Pro. If miss the pop-up. 2. Open Settings, To "Google", Click on "All services" 3. In the "Connected Devices & Sharing" menu, select "Devices". 4. Enable "Scan for Nearby Devices". 5. Card Pro will appear in the list of available nearby devices. 6 Click on it and follow the on-screen instructions to complete the connection. Works with Apple Find My Works with Android Find Hub 	Quick Start Android: 1. Power on the Card Pro. Wait for the pop-up to show Card Pro. If miss the pop-up. 2. Open Settings, To "Google", Click on "All services" 3. In the "Connected Devices & Sharing" menu, select "Devices". 4. Enable "Scan for Nearby Devices". 5. Card Pro will appear in the list of available nearby devices. 6 Click on it and follow the on-screen instructions to complete the connection. Find Nearby In the "Google Find Hub" app, select your Card Pro and tap "Play Sound" to locate your device. Once found, tap Stop Sound to silence the device. Find Far Away In the "Google Find Hub" app, select your Card Pro, tap the device to view its location. To navigate to the location, tap "Get Directions" to open map navigation	Reset: 1. Open the "Google Find Hub" app, select your Card Pro, tap the Settings button, then tap "Remove from Find Hub" and confirm. 2. When the device is turned on, press five times continuously. At the fifth long press don't release your hand until heard the prompt tone Note: Please power on the Card Pro and remove the device from the "Google Find Hub" app before resetting. Fast Pair Instruction Add Card Pro 1. Make sure your phone's Bluetooth and network are turned on. 2. Press the button once to turn on Card Pro (a beep will sound). 3. Bring Card Pro close to your Android device and wait for the pop-up to show Card Pro. (Remark: If no pop-up appears, please restart your phone and try again). 4. Tap "Connect", read and accept the prompts to complete the pairing. 5. In the "Google Find Hub" app, select "Card Pro" to customize the device name and category.	Enable Lost Mode In the "Google Find Hub" app, select your Card Pro and tap "Mark as Lost". Add your contact information and you will get a notified if the Find Hub Device network locates it. Card Pro Location Sharing In the "Google Find Hub" app, select your Card Pro, then tap "Share Device". Connect to another phone After complete the reset process, then connect to another Android phone. Charge Use regular wireless charging equipment to charge the product wirelessly, during charging, the red light is constantly on, and the green light is constantly on when fully charged.	

反面

物品定位器 快速入门指南 1. 打开Card Pro. 2. 打开“查找我的”，点击“+”. 3. 点击“添加其他物品” 4. 点击“连接” 5. 按照屏幕上的指示完成连接。 Works with Apple Find My Works with Android Find Hub 	每件产品只能与一台设备配对 快速入门 IOS系统： 1. 打开Card Pro. 2. 打开“查找我的”，点击“+”. 3. 点击“添加其他物品” 4. 点击“连接” 5. 按照屏幕上的指示完成连接。	查找项目 03 1. 查找物品定位器 打开查找Find My 应用程序，选择“项目”选项卡。 点击列表中的项目定位器。 轻按“播放声音”使物品定位器发出蜂鸣声。 找到物品后，轻按“停止声音”停止蜂鸣声。 2. 查找物品定位器最后已知位置 打开“查找我的 app”，选择“物品”选项卡 从列表点击物品定位器。 您的物品定位器的最后已知位置将已在您设置时选择的表情符号显示在地面上。 要导航到最后一个已知位置，请轻点“方向”打开“地图”应用。 超出范围时查找项目 04 1. 启用“遗留在通知” 打开查找 Find My 应用程序，选择“项目”选项卡。 点击列表中的项目定位器。 在“通知”下，启用“遗留在通知”切换。 当您将物品定位器遗落在设备范围之外时，您将收到通知。 2. 启用“找到时通知” 在“通知”下，启用“找到时通知”切换。 当您的物品定位器被其他启用了“查找我的设备”功能的设备看到时，您将收到物品最新位置的通知。 注意：找到后通知“只能在物品定位器超出范围时激活。 重置物品定位器 06 1. 从“Find My”应用程序中移除物品定位器 打开“查找我的时候”，选择“项目”选项卡。 点击列表中的项目定位器。 请确保已禁用“丢失模式”。 滑动到屏幕底部并轻触删除项目。 将打开一个摘要，点击“删除”确认。 2. 出厂重置物品定位器： 成功将物品定位器从“查找我的应用”中移除后，按下物品定位器的功能按钮5次不松手。听到铃声后松开。 物品定位器现已重置，可以与新设备配对。	当您物品丢失时 05 1. 启用“丢失模式” 打开 FindMy应用程序，然后选择“项目”选项卡。 点击列表中的物品定位器。 在“丢失模式”下，点击启用。 此时会弹出一个详细说明“丢失模式”的屏幕，点击“继续”。 输入电话号码或电子邮件地址，然后点击“下一步”。 您可以输入一条信息，与找到您物品的人共享。 点“激活”启用“丢失模式”。 注：启用“丢失模式”后，会自动启用“找到后通知”。找到时通知会自动启用。 注意：启用“丢失模式”后，物品定位器将被锁定，无法与新设备配对。 重置物品定位器 06 1. 从“Find My”应用程序中移除物品定位器 打开“查找我的时候”，选择“项目”选项卡。 点击列表中的项目定位器。 请确保已禁用“丢失模式”。 滑动到屏幕底部并轻触删除项目。 将打开一个摘要，点击“删除”确认。 2. 出厂重置物品定位器： 成功将物品定位器从“查找我的应用”中移除后，按下物品定位器的功能按钮5次不松手。听到铃声后松开。 物品定位器现已重置，可以与新设备配对。	但是等等...还有更多07 1. 意外设备检测 如果 iPhone 检测到未知物品定位器与您同行，它会向您发送通知。通知会发出声音，这样你就能找到它了。只有当物品定位器没有连接到主人的手机时，这些警报才会被激活，因此如果您的伙伴和你在一起，他们的物品定位器也不会触发声音。 详细说明 该设备符合CISPR 15部分，其运行需满足以下两个条件： (1) 该设备不得造成有害干扰； (2) 该设备必须接受接收器的任何干扰信号，包括可能引起非预期操作的干扰信号。 任何未经负责合规的一方明确批准的变化或修改，都可能会使用户操作该设备的权限失效。 注：该设备已经过测试，符合CISPR 15部分规定的非数字设备的限制要求。这些限制旨在避免有害干扰，防止在住宅安装环境中受到有害干扰。该设备产生、使用并可能辐射射频能量，如果未按照使用说明进行安装和使用，可能会对无线电通信造成有害干扰。然而，无法保证特定安装环境中不会发生干扰。这可以通过关闭和重新开启设备来确定。鼓励用户尝试通过以下一种或多种措施来防止干扰。 -- 重新定向或重新定位接收天线。 -- 增加设备和接收器之间的隔离距离。 -- 将设备连接到接收源连接的电路不同的插座上。 -- 咨询维修商或经验丰富的无线电/电视技术人员寻求帮助。 该设备已经过评估，符合一般的射频暴露要求。该设备可以在便携的条件下使用，不受任何限制
物品定位器 快速入门指南 1. 打开Card Pro的电源。等待弹出窗口显示Card Pro。如果错过了弹出窗口 2. 打开“设置”，前往“谷歌”。点击“所有服务” 3. 在“已连接设备与共享”菜单中，选择“设备”。 4. 应用“扫描附近设备”。 5. Card Pro将出现在附近可用设备列表中。 6 点击它，并按照屏幕上的指示完成连接。 Works with Apple Find My Works with Android Find Hub 	快速入门 安卓： 1. 打开Card Pro的电源。等待弹出窗口显示Card Pro。如果错过了弹出窗口 2. 打开“设置”，前往“谷歌”。点击“所有服务” 3. 在“已连接设备与共享”菜单中，选择“设备”。 4. 应用“扫描附近设备”。 5. Card Pro将出现在附近可用设备列表中。 6 点击它，并按照屏幕上的指示完成连接。 查找附近 在“Google Find Hub”应用中，选择您的Card Pro并点击“播放声音”以定位您的设备。一旦找到设备，点击“停止声音”即可使设备静音。 寻找远方 在“Google Find Hub”应用中，选择您的Card Pro，轻触设备即可查看其位置。 要导航到该位置，请点击“获取路线”以打开地图导航	重置： 1：打开“Google Find Hub”应用程序，选择您的Card Pro，点击“设置”按钮，然后点击“从Find Hub中移除”并确认。 2：设备开机后，连续五次长按时，听到提示音后再松手。 注意：请在重置前打开Card Pro的电源，并将设备从“Google Find Hub”应用中移除。 快速配对指令 添加Card Pro 1. 确保您的手机蓝牙和网络已开启。 2 按下按钮一次以开启Card Pro（主机会发出蜂鸣声）。 3 将Card Pro靠近您的Android设备，等待弹出窗口显示Card Pro（备注：如未出现弹出窗口，请重启手机后重试）。 4. 点击“连接”，阅读并接受提示以完成配对。 5. 在“Google Find Hub”应用程序中，选择“Card Pro”以自定义设备名称和类别。	启用丢失模式 在“谷歌查找中心”应用程序中，选择您的在线旅行社，然后点击“标记为丢失”。 添加您的联系信息，如果查找集线器设备网络找到它，您将收到通知。 Card Pro位置共享 在“谷歌查找中心”应用程序中，选择您的在线旅行社，然后点击“共享设备”。 连接到另一部手机 完成重置过程后，请连接到另一部Android手机。 充电 使用常规无线充电设备对产品进行无线充电，充电时红灯亮，充满绿灯常亮	