 


82mm

71.5mm

Smart Card
项目定位器
快速入门指南



产品概述

智能卡是一种智能跟踪设备，它使用谷歌的“查找我的设备”服务，与安卓设备上的“谷歌查找我的装置”应用程序配对，在谷歌地图上快速安全地定位您的个人物品。所有位置信息都是私人的，甚至谷歌也无法访问它。

开始之前

智能卡仅支持“谷歌查找我的设备”应用程序。请确保在使用前从“Play商店”下载并安装此应用程序。

该设备仅与运行Android 9或更高版本的Android设备兼容。智能卡不支持华为设备。

一旦智能卡与设备配对，它将被锁定，无法与其他设备配对。

按钮和声音说明

开机：按下按钮一次（会发出蜂鸣声）。

关闭电源：按住按钮3秒（将发出两声短促的蜂鸣声）。

重置：

1：打开“谷歌查找我的设备”应用程序，选择您的智能卡，点击“设置”按钮，然后点击“从搜索我的设备中删除”并确认。

2：取出后，快速按下智能卡按钮5次，当听到长嘟嘟声时，设备将重置。

注意：重置前，请打开智能卡电源并从“谷歌查找我的设备”应用程序中删除设备。

快速配对

添加智能卡

1. 确保手机的蓝牙和网络已打开。

2. 按一下按钮打开智能卡（会发出嘟嘟声）。

3. 将智能卡插入您的Android设备，等待弹出窗口显示智能卡，（备注：如果没有弹出窗口，请重新启动手机并重试）。

4. 点击“连接”，阅读并接受提示以完成配对。

5. 在“谷歌查找我的设备”应用程序中，选择“智能卡”以自定义设备名称和分类。

手动设置导入（如果错过弹出窗口）

1. 打开设置。

2. 去“谷歌”。

3. 点击“所有服务”

4. 在“已连接设备和共享”菜单中，选择“设备”。

5. 启用“扫描附近设备”。

6. 智能卡将出现在附近可用设备的列表中。

7. 单击它并按照屏幕上的说明完成连接。

查找附近

在“谷歌查找我的设备”应用程序中，选择您的智能卡并点击“播放声音”以定位您的设备。找到后，点击“停止声音”使设备静音。

寻找远方

在“谷歌查找我的设备”应用程序中，选择您的智能卡，点击设备以查看其位置。

要导航到该位置，请点击“获取路线”打开地图导航

启用丢失模式

在“谷歌查找我的设备”应用程序中，选择您的智能卡并点击“标记为丢失”。

添加您的联系信息，如果“查找我的设备”网络找到它，您将收到通知。

智能卡位置共享

在“谷歌查找我的设备”应用程序中，选择您的智能卡，然后点击“共享设备”

连接到另一部手机

完成重置过程后，连接到另一部Android手机。

充电

使用常规无线充电设备对产品进行无线充电，红色充电时灯始终亮着，充满电时灯熄灭。

详细说明

本设备符合 FCC 规则第 15 部分的规定：

运行须满足以下两个条件：

(1)本设备不会造成有害干扰。

(2) 本设备必须接受任何接收到的干扰，包括可能导致意外运行的干扰。

注意：对于未经授权对本设备进行的修改或变更所造成的任何无线电或电视干扰，制造商概不负责。未经合规责任方明确批准的此类修改或变更可能导致用户无权操作本设备。本设备经评估符合一般射频暴露要求，可在便携式暴露条件下使用，不受限制 联邦通信委员会 (FCC) 辐射暴露声明 功率很低，无需计算射频暴露。

本设备已经过测试，符合 FCC 规则第 15 部分规定的 b 类数字设备限制。这些限制旨在提供合理的保护，防止在住宅安装中产生有害干扰。本设备会产生和辐射

射频能量，如果不按照说明安装和使用，可能会对无线电通信造成有害干扰。但是，不能保证在特定安装环境中不会产生干扰。如果本设备确实对无线电或电视接收造成有害干扰，可通过关闭和打开设备来确定，建议用户尝试采取以下一项或多项措施来消除干扰 调整接收天线的方向或位置。增加设备与接收器之间的距离 将设备连接到与接收器连接的电路不同的插座上。

Smart Card
Item Locator
Quick Start Guide



Product Overview

smart card is a smart tracker device that uses Google's Find My Device service, paired with the "Google Find My Device" app on Android devices, to quickly and securely locate your personal items on Google Maps. All location information remains private, and even Google cannot access it.

Before You Start

smart card only supports the "Google Find My Device" app. Please make sure to download and install this app from the "Play Store" before use.

The device is compatible only with Android devices running Android 9 or higher. smart card does not support Huawei devices.

Once smart card is paired with a device, it will be locked and cannot be paired with another device.

Button and Sound instructions

Power On: Press the button once (a beep will sound).

Power Off: Press and hold the button for 3 seconds(two short beeps will sound).

Reset:

1: Open the "Google Find My Device" app, select your smart card, tap the Settings button, then tap "Remove from Find My Device" and confirm.

2: After removing it, press the smart card button 5 times rapidly, and when you hear a long beep, the device will be reset.

Note: Please power on the smart card and remove the device from the "Google Find My Device" app before resetting.

Fast Pair Instrction

Add smart card

1. Make sure your phone's Bluetooth and network are turned on.

2. Press the button once to turn on smart card (a beep will sound).

3. Bring smart card close to your Android device and wait for the pop-up to show smart card.(Remark: If no pop-up appears, please restart your phone and try again).

4. Tap "Connect", read and accept the prompts to complete the pairing.

5. In the "Google Find My Device" app, select "smart card" to customize the device name and Category.

Manual Set Up Instrction (If you miss the pop-up)

1. Open Settings.

2. To "Google".

3. Click on "All Services"

4. In the "Connected Devices & Sharing" menu, select "Devices".

5. Enable "Scan for Nearby Devices".

6. smart card will appear in the list of available nearby devices.

7. Click on it and follow the on-screen instructions to complete the connection.

Find Nearby

In the "Google Find My Device" app, select your smart card and tap "Play Sound" to locate your device. Once found, tap Stop Sound to silence the device.

Find Far Away

In the "Google Find My Device" app, select your smart card, tap the device to view its location.

To navigate to the location, tap "Get Directions" to open map navigation

Enable Lost Mode

In the "Google Find My Device" app, select your smart card and tap "Mark as Lost".

Add your contact information and you will get a notified if the Find My Device network locates it.

smart card Location Sharing

in the "Google Find My Device" app, select your smart card, then tap "Share Device"

Connect to another phone

After completing the reset process, then connect to another Android phone.

charge

Use regular wireless charging equipment to charge the product wirelessly, the red light is always on when charging, and the light is off when fully charged.

The Fine Print

This device complies with part 15 of the FCC Rules:

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device. The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction Federal Communication commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation this equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

IC Caution:

English:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

French:

Cet appareil est conforme aux normes RSS exempt é es de licence d' innovation, sciences et d é veloppement é conomique Canada.

L'exploitationestautoris é e aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l' utilisateur de l'appareildoit accepter tout brouillageradio é lectriquesubi, m ê mesi le brouillageest susceptible d'encompromettre le fonctionnement.

Le mat é riel a é t é é valu é pour r é pondre aux exigences g é n é rales

d' exposition aux radiofr é quences. Le dispositif peut ê tre utilis é dans des conditions

d' exposition portables illimit é es.