



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Imported by Osiris Inc. L6T 4M6 / Osiris America Inc. 14020
SKU # 41638 | Input: 5V/1A | Made in China


HY-IMPACT™ DISCO RAVE

Wireless HD Stereo Headphones
Cool RGB Lights



Instruction Manual

Read instruction manual carefully before first use.
Retain the instruction manual for future reference.

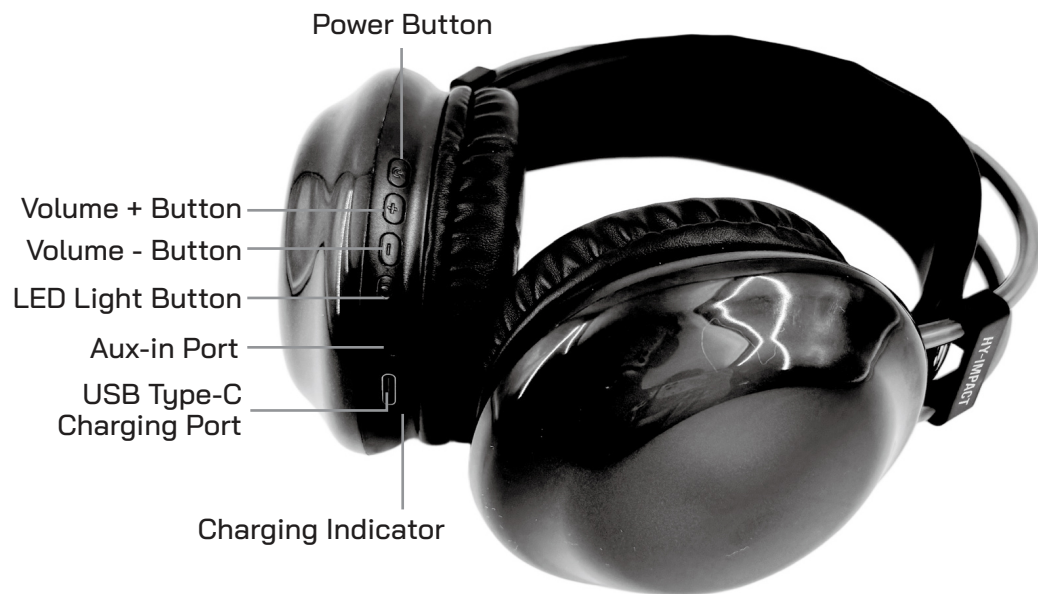

Charging Instructions:

- Connect the Type-C end of the charging cable (included) to the Charging Port of the headphones, and the USB end of the cable to a suitable power source (5V 1A).
- Charging indicator turns red while charging, and turns off when fully charged.

Pairing Instructions:

1. Long Press the Power Button to turn on the headphone. Bluetooth mode will be activated automatically.
2. Enable bluetooth function on your device. Search the bluetooth device named "RAVE". Tap to connect.
3. You will hear a chime when pairing is successful.
4. You can stream music from your mobile device wirelessly now.

Operating Instructions:

Turn On/Off	Long press the Power Button to turn on or turn off the headphone. Short press the Power Button to pause/play music.
Answering Call	Short press the Power Button to answer and press again to end the calls. Press Power Button twice to redial.
Volume Increase or Decrease	Long press the Volume + Button to increase the volume. Long press the Volume - Button to decrease the volume.
Next/Previous Song	Short press the Volume + Button to skip to the next song. Short press the Volume - Button to skip to the previous song.
Voice Assistance	Press the Volume + Button twice to activate voice assistance. <i>Note: Voice Assistance is subject to your mobile device settings.</i>
LED Light	LED function will automatically turn on when the headphone is On. Press the LED Light Button to switch the LED Light mode. Press the LED Light Button twice to turn off the LED Light.
FM Mode	Turn on the headphones. Press Power button 3 times to activate FM mode. Press Power button to switch channel. <i>Note: FM connectivity is largely subject to available frequencies and ambient conditions in your vicinity.</i>
AUX Mode	Connect the Aux cable directly with headphone and media device. The bluetooth mode will turn off when in Aux mode. <i>Note: In Aux mode: All functions can be controlled from the mobile device.</i>

Specification

Bluetooth Version: 5.4
Work distance: Up to 10m (33 Feet)
Battery: 200mAh Rechargeable
Charging Port: USB-C
Input: 5V/1A
Output: 3.7V/0.15A
Function: Bluetooth and AUX Input

Package Includes:

Disco Rave Wireless Headphones x 1
USB Type-C Charging Cable x 1
Aux Cable x 1
Instruction Manual x 1