

运动蓝牙耳机



· 提示

- 1、使用本产品前请仔细阅读说明书，并保留本说明书。
- 2、首次使用，请先将本产品充满电。
- 3、如果产品长期（超过两周）不充电，使用前请对其充电。

· 警告

- 1、请勿以任何理由拆除或维修改装本产品，否则可能会导致起火，电子击穿甚至彻底损坏本产品。
- 2、请勿将设备置于温度过低或过高（0℃以下或45℃以上）环境下。
- 3、请勿将产品接触液体甚至浸泡在液体里。
- 4、不能将眼镜放在阳光下长时间曝曬，否则容易变形、老化、折断。
- 5、请勿将充电线磁吸端靠近金属物体，防止磁吸金属物体后引起的短路危险。

· 重要安全信息

- 1、在使用本产品前，请先阅读所有安全信息以确保正确和安全使用。
- 2、使用未经原制造商认可的电源，充电器或电池，可能引发火灾、爆炸或其他危险。
- 3、请使用本制造商认可且与此型号设备配套的配件。

· 声明

首先对您使用本公司的产品表示感谢！在使用之前请先详细阅读此说明书。正确使用此产品。为了更好的服务，本用户手册的内容可能变更。因为产品的性能和功能而发生的变更，将不做另行通知。

· 产品简介

运动耳机采用蓝牙5.0芯片，兼容主流品牌手机和平板电脑等蓝牙设备，支持aptX音频解码技术，达到CD级高品质音质，持久续航，左右双喇叭，开放式定向发音，无碍接收外界声音，可时刻获取周围环境信息，安全、智能、健康、便捷。

· 包装清单

运动耳机、充电线、使用说明书。

· 产品参数

连接 线：记忆钛合金TPE
蓝牙协议：5.0
充电时间：1.5H
使用时间：8H
待机时间：180H（蓝牙连接状态）
电池容量：190mAh
声 道：双喇叭、立体声
充电电压和电流：DC5V
最大充电电流达160mAh



16、连接其他设备时，请参考用户手册的连接方法，不要随意连接不配套的设备。

⚠ 为避免听力受损，请勿长时间使用高音量。

⚠ 警告

请遵循相关法律法规，不要在一下环境使用。

- 如加油站，油库，化学仓库附近等存储有易燃易爆油气或化学品的环境，严禁使用设备。
- 请勿在医院手术室、急诊室、深切治疗部等场所使用此设备；为避免干扰医疗仪器工作，使用此设备时请远离心脏起搏器、助听器、植入耳蜗等医用设备，请保持此设备和起搏器之间超过15厘米的距离。
- 若要在个人医疗设备附近使用此设备，请咨询医师和设备制造商。
- 请遵守有关驾车时使用此设备的所有安全警告和规定。
- 雷雨天气时，为避免累计事故，请勿在室外使用。
- 充电时，请勿边充电边通话。
- 请勿在浴室等高湿度的地方使用充电器，否则会导致触电，人身伤害，起火和充电器损坏。
- 请遵守在任何环境里明确禁止使用的相关法律规定。

· 使用说明

（一）开关机

- 1、开机：轻按2秒开机
- 2、关机：轻按3秒关机

（二）播放歌曲

- 1、单击一次暂停
- 2、双击触摸开关下一曲
- 3、三击触摸开关上一曲

（三）通话

- 1、来电时单击一次接听电话
- 2、来电时长按触摸开关拒接电话
- 3、通话中单击一次挂断电话
- 4、通话中第三方呼入时单击触摸开关切换到第三方呼入电话，并保留当前通话
- 5、非通话和音乐播放暂停状态，三击触摸开关重拨最后一个通话记录的电话号码

产品保修凭证

产品保修期内出现非人为损坏的性能故障可以享受下列三包服务：

- 自收货之日起7日内，产品出现非人为损坏的性能故障，用户可选择一次性退换货款、更换同型号同规格的产品。
- 自收货之日起15日内，产品出现非人为损坏的性能故障，用户可选择更换同型号同规格的产品。
- 自收货之日起一年内，产品出非人为算坏的性能故障，用户可寄商家维修。

属于下列情况（但不限于下列情况）不在“三包”服务范围之内：

- 未经授权 的维修、误用、碰撞、疏忽、滥用、进液、事故、改动；或撕毁、涂改产品标贴、封条。
- 超过“三包”服务有效期的。
- 因火灾、水灾、雷击等不可抗力造成的损坏。
- 因人为原因导致的产品性能故障。
- 未按产品说明书要求使用而造成损坏的。

（四）智能语音

- 1、没有播放音乐时，双击触摸开关唤醒语音助手，再次单击则关闭语音助手。
- 2、在播放音乐中唤醒语音助手，需单击触摸开关暂停音乐播放，再双击触摸开关唤醒语音助手。

· 温馨提示

充电时间：1.5-2小时

长期不使用时，每2个月对电池至少充电一次。

保修卡

尊敬的用户，本保修卡是您将来申请保修的凭证，请您配合销售商填写并妥善保管备用。

用户信息	用户姓名	联系电话	
	通讯地址		
	电子邮箱	邮政编码	
产品信息	产品名称	产品条码	
	产品型号		
销售商信息	名 称		
	地 址		
	联系电话	邮政编码	
	销售日期	发票号码	
备注			

Bluetooth Sports Headset



- Play the last song: triple click the key continuously;
- Pause playback: click the button.
- 3. Switch between playing music and making phone calls
- When you need to make a phone call in the process of listening to music, click the button to pause the music first, and then double click the button to make a phone call when you hear the prompt tone.
- 4. Navigation,
- Open navigation: double-click the button, say "help me navigate to ** place" after hearing the prompt tone, and then conduct voice operation according to the prompt tone of glasses;
- Turn off navigation: Double click the button and say "exit navigation" when you hear the prompt tone.
- 5. Offline camera function, etc
- When the camera is turned on, click the button to take a picture.

· Tips

1. Please read the instructions carefully before using this product and keep this manual.
2. For the first time, please fully charge this glasses.
3. If the glasses does not charge for a long period of time (more than two weeks),charge it before use.

· Warning


1. Do not dismantle or repair this product for any reason , as this may result in fire . Electronic breakdown or even complete damage to the product.
2. Do not place the device in an environment where the temperature is too low or too high(below 0℃ or above 45℃).
3. Do not get the product wet with liquid or immerse in liquid .
4. Do not expose the glasses to the sun for a long time , otherwise it will be easily deformed, broken and broken

· Important Safety Information

- Please read all safety information before using this equipment to ensure correct and safe use.

· Product Parameters

Connecting Wire:Memory titanium alloy TPE
Bluetooth Protocol: 5.0
Charging Time: 1.5H
Use Time: 8H
Standby Time: 180H (Bluetooth connection)
Battery Capacity: 190mAh
Sound Channel: Double speakers, stereo sound
Charging Voltage And Current: DC5V
The maximum charging current is 180mAh

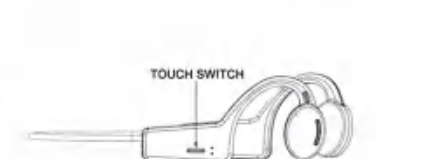

- Use of a power source , charger or battery that is not approved by this manufacturer may cause fire, explosion or other hazards.
- Use accessories approved by this manufacturer and compatible with this model . Please use the device within the temperature range of 0℃-35℃,and store the device and its accessories within the temperature range of -20℃-55℃.When the ambient temperature is too high or too low , it may cause equipment failure.
- If the device uses a non-removable internal battery , do not replace the battery yourself to avoid damaging the battery or device . The battery can only be replaced by an authorized service center.
- Please charge according to the charger specified by the manufacturer .Using a charger with other voltages may cause leakage , fire or damage to the device and charger.
- If charging is complete ,disconnect the charger from the device the unplug the charger from the power outlet .Do not charge more than 12 hours.
- Please do not throw the old battery into your household waste for disposal .If the battery is improperly handled ,it may cause the battery to catch fire and explode .Please dispose of this device , battery and other accessories in accordance with local regulations.

· Directions For Use

(1) Switch machine

- 1.Power on : Tap for 2 seconds to power on
- 2.Power off : Tap for 3 seconds to power off

(2) Play songs

- 1.Click once to pause
- 2.Double click the touch switch for the next tune
3. Three-click the touch switch on a tune

(3) Call

1. Click once to answer an incoming call
2. Hold down the touch switch to reject incoming calls
3. Click once during a call to hang up
4. During a call click to switch to a third-party call and keep the current call
- 5.Non-call and music playback pause state,three-click the touch switch to redial the last recorded call phone number

(4) Intelligent voice

1. When no music is playing ,double click to wake up the voice assistant . Click again to close the voice assistant .
2. To wake up the voice assistant while playing music, click to pause the music and double-click to wake up the voice assistant.

· Warm Prompt

Charging time: 1.5-2 hours

When not in use for a long time, charge the battery at least once every 2 months.

2. For example, gas stations, oil depots, chemical warehouses, etc. ,where flammable or explosive oil or chemicals are stored. it is strictly forbidden to use equipment. Do not use this equipment in hospital operating rooms, emergency rooms, intensive care units, etc.; to avoid interference with medical equipment, please keep away from cardiac pacemakers, hearing aids, implanted cochlea and other medical equipment when using this equipment. Please keep this equipment. More than 15cm between the pacemaker and the pacemaker.
3. To use this device near personal medical devices, consult your physician and device manufacturer.
4. Please observe all safety warnings and regulations regarding the use of this device while driving,
5. To avoid lightning strikes during thunderstorms, do not use outdoors.
6. Do not call while charging.
7. Do not use the charger in a place with high humidity such as a bathroom, as this may result in electric shock, personal injury, fire and damage to the charger.
8. Please comply with the relevant legal provisions that are expressly prohibited in any environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction