 


Instructions for use

 
1. Before use, please rinse with clean water or shower gel, then wipe dry immediately;
2. Apply the lubricant evenly to the product and the part to be inserted to avoid dryness pain;
3. After using the product, please rinse the product with clean water or shower gel, then wipe immediately , dry and store in a cool place.

Key Instructions

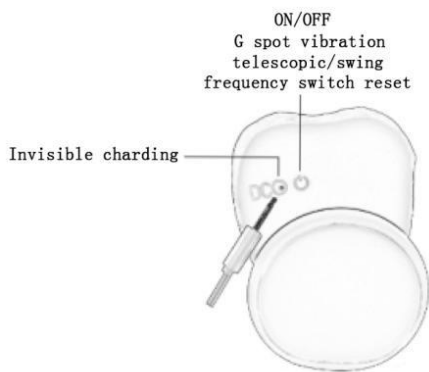

1. Press the button for 2 seconds to turn on / turn off, the light will be on after started;
2. In the power-on state, double-click the power-on button quickly, the red light is on and enter the heating state, press again to exit the heating mode;(If there is no heating function, please ignore this operation)
3. In the power-on state, press the button to enter G point vibration + telescopic (or swing) mode , press the button to switch the frequency;
4. Reset : The product is turned off. If the stick is in the extended state, press the shutdown button to reset.

Remote controller Instructions

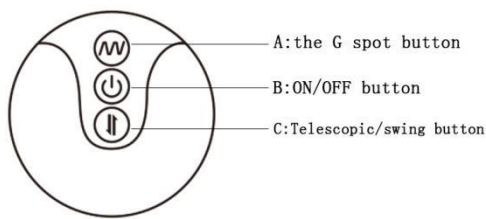

B: ON/OFF Button

1. In the power-on state, Long press the ON/OFF button, the blue light is on, and the remote control is turned on.
2. Long press the button again, the blue light goes out, and the remote control is turned off
3. Open the heat function: short press the key, red light, start the heat function, short press the key again, close the heat.

A: G Point Vibration Button

 
1. In the power-on state, the blue light is on, press to turn on the G point vibration
2. Press the G spot button to switch 7 frequencies
3. Press the button for 2 seconds to close (open) telescopic swing function

C: Clitoral Vibration Button

4. In the boot state, press the clitoral vibration button, flashing blue light, turn on the clitoral vibration function
5. Press the clitoral vibration button to switch 7 frequencies
6. Press the button for 2 seconds to close(open) telescopic swing function

Swing Function Instructions

1. In the shutdown state, hold down the vibration part of point G for about 5 cm, gently shake it, remember to gently, the angle should not exceed 45 degrees, let go, the product will have an angle tilt, as shown ;
2. Turn on the telescopic function of the product, the product will enter the swing rotation mode;
3. Press the telescopic button to enter the cycle switch, a total of 5 frequencies;
4. Turn off the machine and gently straighten the product by hand to turn off the swing rotation function.

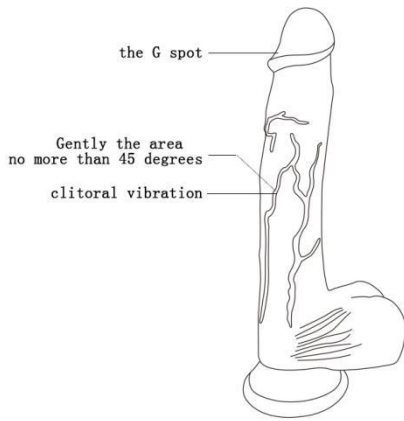

Instructions

1. Clean before use;
2. Turn on the product switch and enjoy.

Charging instructions

Use the included USB cable to connect the product's charging port to charge.

1. Use a USB cable to connect directly to the computer for charging or use a mobile phone USB interface charging head to charge on the socket

Electricity;

2. The indicator light breathes while charging;
3. Charging voltage 5V, current does not exceed 600mA;
4. The indicator light will stay on after being fully charged, and it will be fully charged in about 2 hours. Do not overcharge for a long time;
5. Unable to turn on when charging, please unplug the power supply after use.

Features

This product is a flirting product for women. It stimulates sensitive parts through strong vibration and telescopic swing to let the body enjoy the pleasure.

Maintenance

1. After use, wash with normal temperature water and shower gel;
2. Wipe dry with a towel after washing and store in a ventilated, cool and dry place;
3. Do not clean the button, prohibit any liquid from entering the button to avoid short circuit;
4. Store at full power at room temperature, away from high temperature and dirt, please do not put it in direct sunlight;
5. Don't use it for a long time, please keep it charged for at least three months to prevent the battery from aging.

Fault description

1. When the machine can not be turned on, check whether there is no power, recharge it before use;
2. After charging, it cannot be turned on, check whether the charging indicator is normal, and whether the charging cable is damaged;
3. When the sense of vibration and swing rotation is weak, please recharge it before use;
4. When the program fails, please shut down and restart.

Precautions

[Warning] Failure to follow these safety instructions may result in fire, electric shock, injury or damage to the product or Other property. Before using, please read all the safety information below.

1. This product is only suitable for adults, minors are prohibited;
2. If you feel uncomfortable during use, please stop using;
3. Periodically check whether the product is damaged, please stop using if it is damaged;
4. Operation This product contains sensitive electronic components. If the battery is dropped, burned, punctured or squeezed

Pressure, it may be damaged. If you suspect that the product or battery is damaged, stop using it because it may Causing overheating or injury;

5. Do not try to replace the battery yourself. The lithium ion battery of the product should be replaced by Leten or an authorized service provider

change. Improper replacement or repair may damage the battery, resulting in overheating or injury. Before the product is discarded The battery needs to be removed, and the power must be cut off before removing the battery, and the battery needs to be disposed of safely; the battery must be separated from the family Separately recycle or dispose of garbage. Do not incinerate the battery;

6. If you want to charge the product, please use the attached cable in compliance with applicable country regulations or

The following one or more standard power adapters: EN301489-34, IEC62684, YD / T

1591-2009, CNS 15285, ITEL1000 or other applicable mobile

phone power adapters

Usability standards. Use only those that comply with applicable international and regional safety standards (including IEC60950)

Adapter charging; using damaged cables or chargers, or charging in a humid environment can cause fire

Disaster, electric shock, injury or damage to products or other property. Before plugging the adapter into a power outlet, please

Make sure the USB cable is fully inserted into the power adapter;

7. The product meets applicable surface heat standards and restrictions. However, even within these limits, long

Continuous contact with hot surfaces for time may also cause discomfort or injury if your body appears to affect the body

Be aware of the condition of the ability to sense heat; please be careful when using it for people who are not sensitive to heat.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction