

 
210.00 mm

165.00 mm


WILL

Vinyl Record Player

USER MANUAL

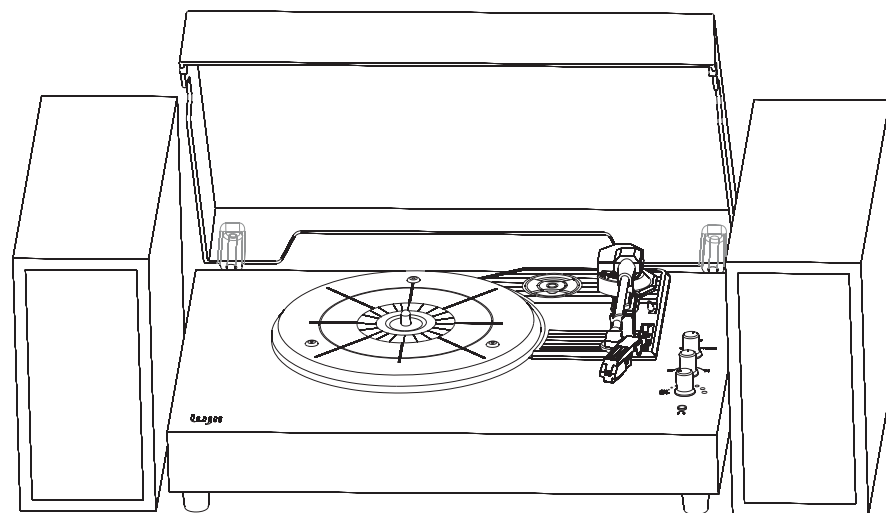

Model: JQ-001

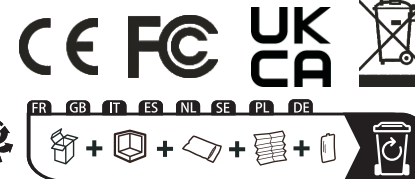 

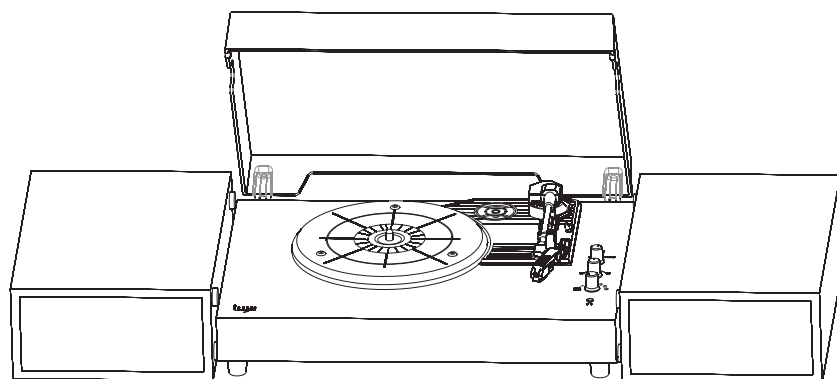 
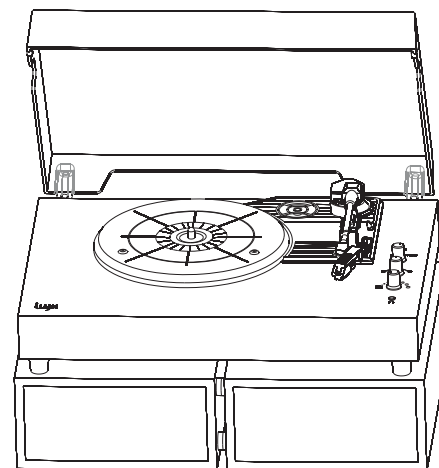 
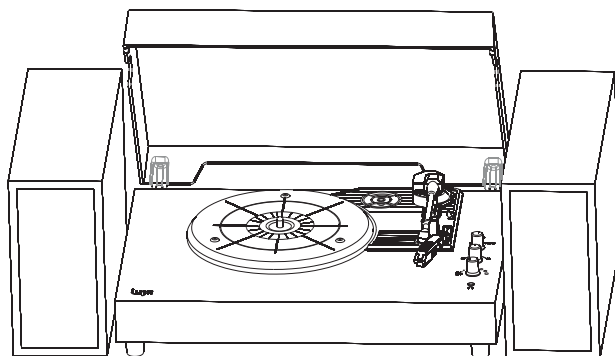 


Table of Contents


Inhaltsverzeichnis / Table des matières

Sommario / Tabla de contenido

What's Included	4
Part Names	5-7
First Time Setup	8
Installing the Speakers	8
Connecting the Power	9
Turn on/Adjust the Volume	10
Select Mode	10
Press to Play/Pause	10
Rotate to Play Last/Next Song	10
Connecting Headphones	11
Connecting to an Amplifier	11
Playing a Vinyl Record	12-14
Pausing a Record	15
Playing from a Bluetooth Device	16
Playing from USB	17
Replacing the Stylus	18
Specifications	19
How to Contact Us	20


What's Included

 Was ist inbegriffen / Ce qui est inclu / Cosa è incluso / Qué está incluido

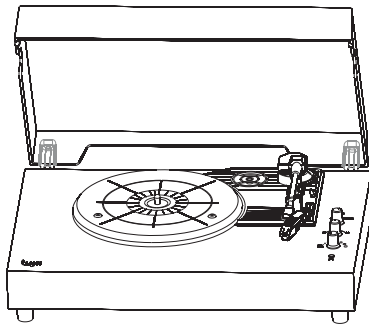


Vinyl Turntable

 Plattenspieler / Platine Vinyle
Giradischi Vinile / Toca discos de vinilo

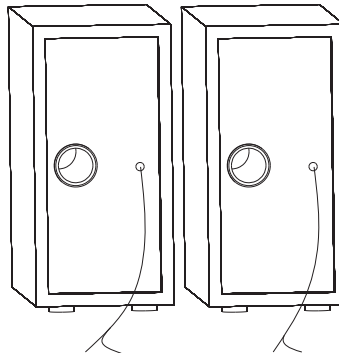


Speakers

 Lautsprecher / Conférencier
Oratore / Altavoz

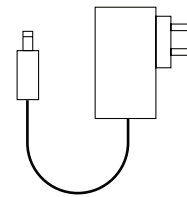

Power Adapter

 Netzteil / Adaptateur secteur
Adattatore di alimentazione
Adaptador de corriente

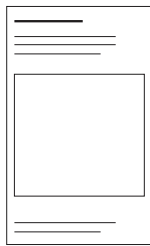


User Manual

Handbuch / Manuel
Manuale / Manual



Lifetime Customer Support

 Lebenslanger Kundensupport
Assistance client à vie
Assistenza clienti a vita
Atención al cliente de por vida

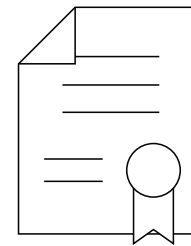

1 Year Warranty

1 Jahr Garantie
1 an de garantie
1 anno di garanzia
1 año de garantía

Part Names

Teilenamen / Noms des Pièces / Nomi delle Parti / Nombres de las Piezas

1. Dust Cover

Staubschutzhaube
Housse de Protection
Copertura antipolvere
Guardapolvo

2. Platter

Teller / Plat
Piatto / Plato

3. Wooden Box

Holzbox / Boite en bois
Scatola di legno
Caja de madera

4. Isolation Feet

Isolationsfüße / Pieds d'isolation
Piedini di isolamento / Pies de aislamiento

5. Rubber

Gummi / Rubber
Gomma / Goma

6. Tonearm

 
Tonarm / Bras de lecture
Braccio / Brazo

 
7. Cartridge

 
Patrone / Cartouche
Cartuccia / Cartucho

8. Headphone Jack

Kopfhöreranschluss
Prise casque
Jack per cuffie
Toma de auriculares

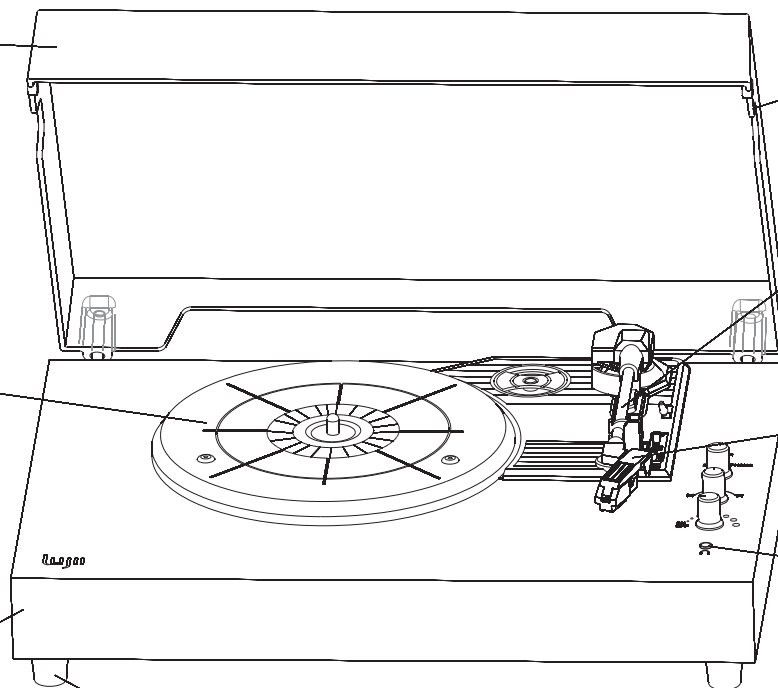

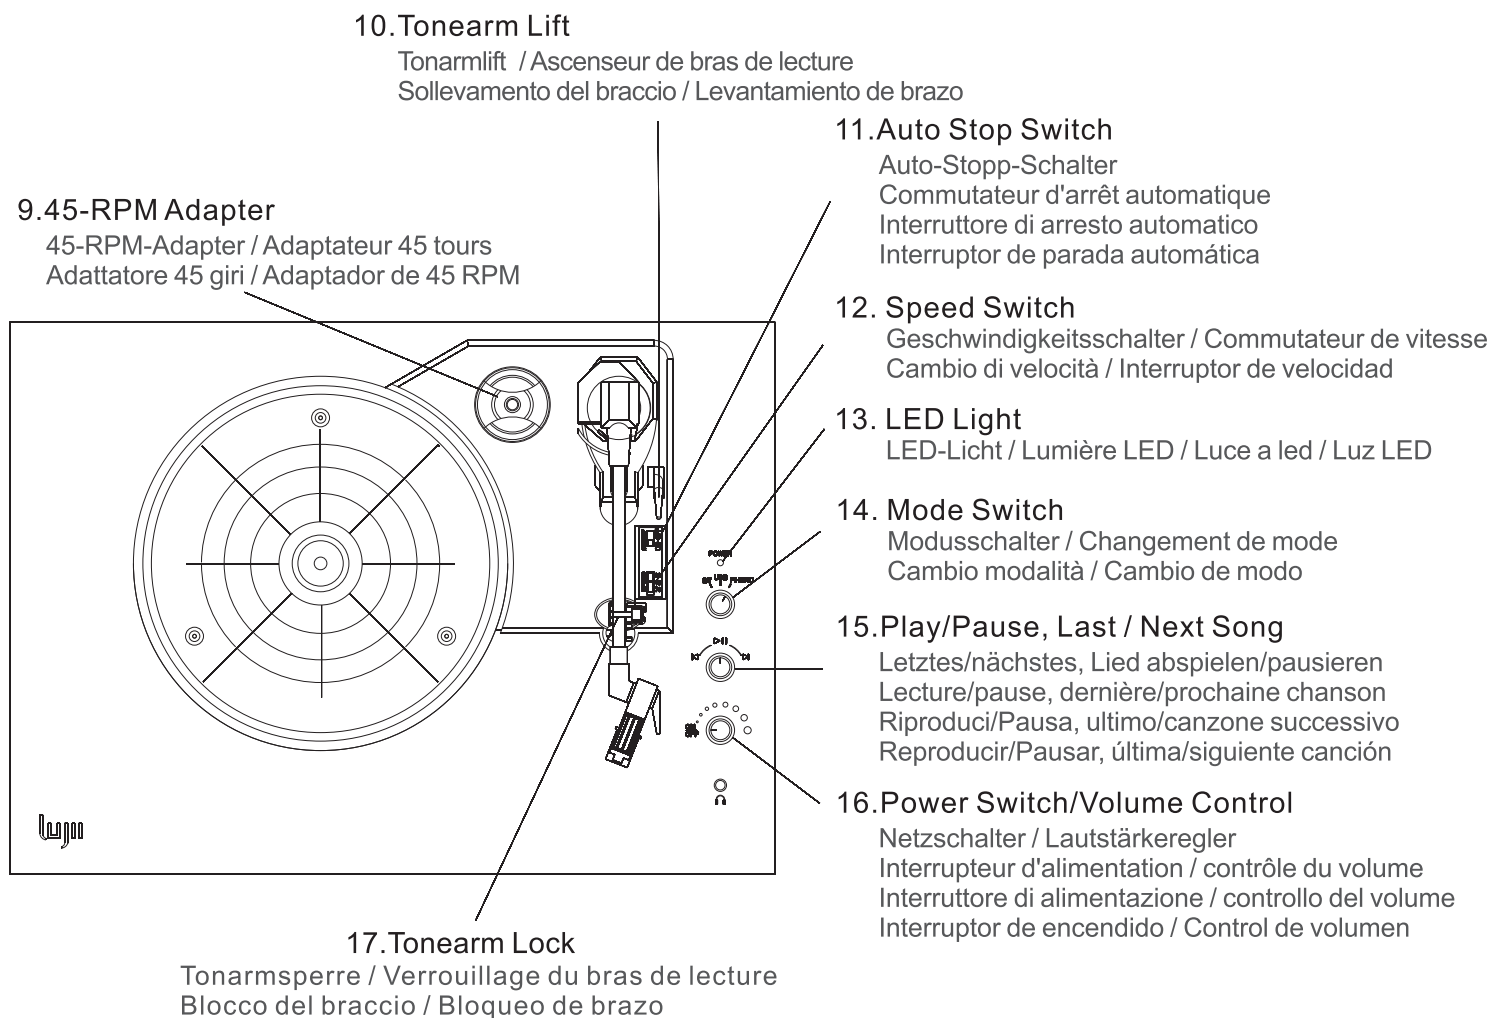

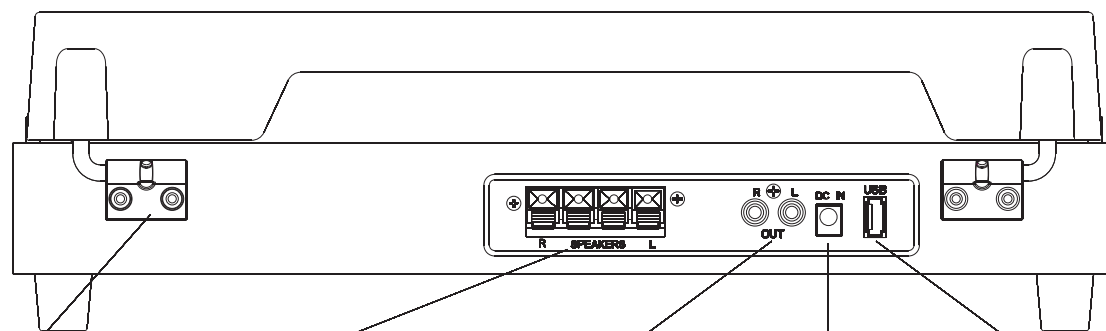

18.Hinge

Scharnier
Charnière
Cerniera
Bisagra

19.Speakers Outputs

Lautsprecherausgänge
Sorties haut-parleurs
Uscite degli altoparlanti
Salidas de altavoces

20.RCA Outputs

 
Cinch-Ausgänge
Sorties RCA
Uscite RCA
Salidas RCA

21.Power Input

Leistungsaufnahme
Entrée de puissance
Ingresso alimentazione
Entrada de alimentación


22.USB Input

USB-Eingang
Entrée USB
Ingresso USB
Entrada USB

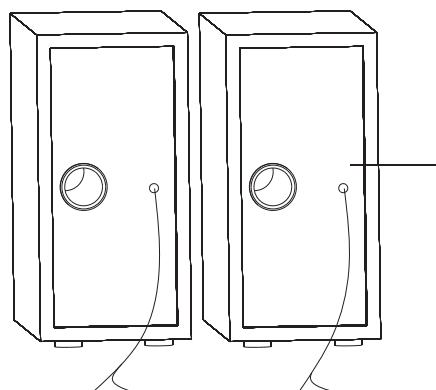

23.Speakers

 Lautsprecher
Conférencier
Oratore
Altavoz

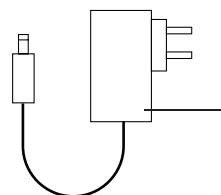

24.Power Adapter

Netzteil
Adaptateur secteur
Adattatore di alimentazione
Adaptador de corriente

First Time Setup

Erstmalige Einrichtung / Configuration initiale

Installazione per la prima volta / Configuración por primera vez

1. Installing the Speakers

Installation der Lautsprecher / Installation des haut-parleurs

 
Installazione degli altoparlanti / Instalación de los altavoces



ATTENTION!

The **COPPER** wire should be connected to the **RED** port.


The **SILVER** wire should be connected to the **BLACK** port.

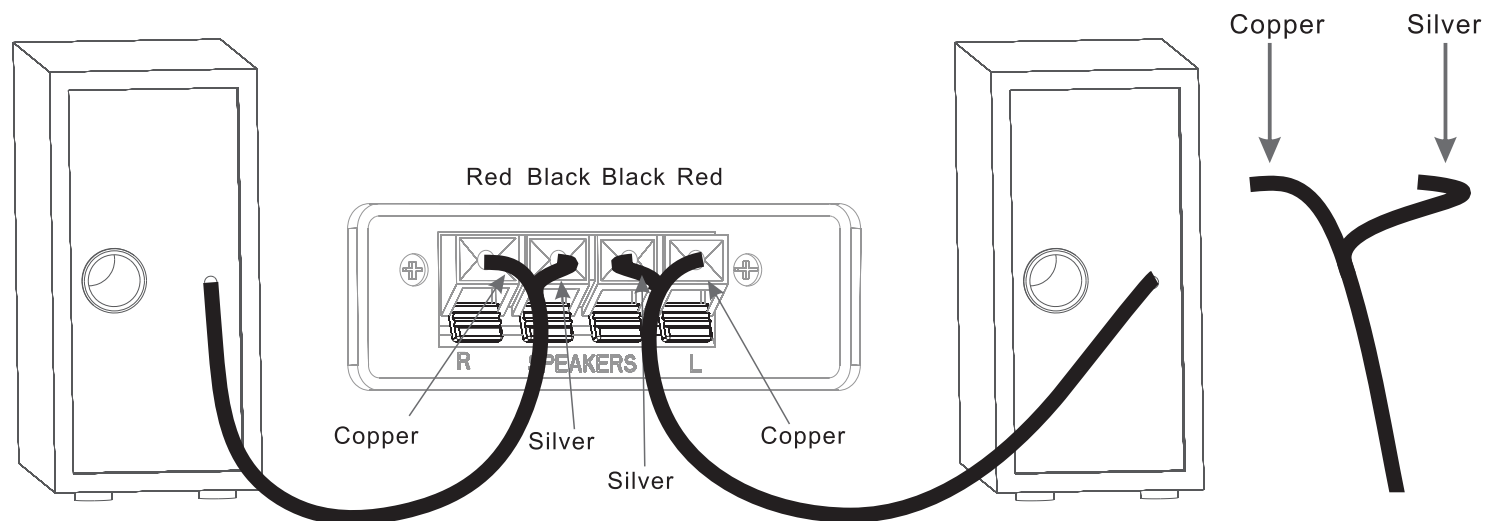


2.Connecting the Power

Anschließen der Stromversorgung / Connexion de l'alimentation
Collegare l'alimentazione / Conexión de la alimentación

 ①

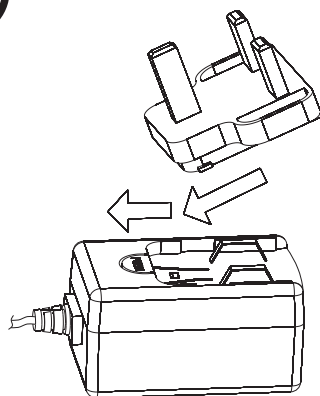


UK

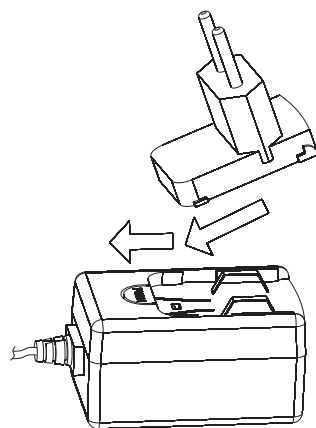 


EU

 ②

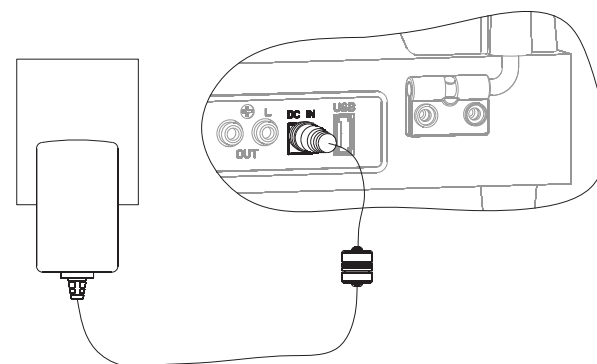


3. Turn on/Adjust the Volume

 Einschalten / Lautstärke anpassen
Allumer / régler le volume
Accendi / regola il volume
Encender / Ajustar el Volumen

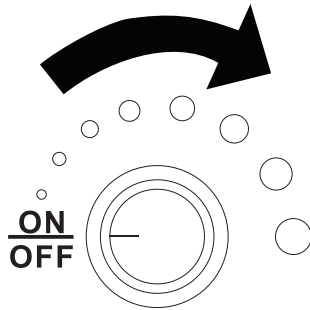


4. Select Mode

 Auswahlmodus
Sélectionnez le mode
Seleziona Modalità
Seleccionar modo

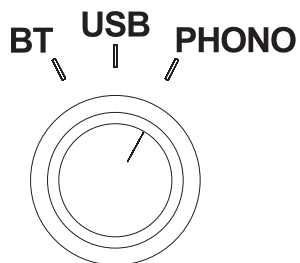


5. Press to Play/Pause

 Drücken Sie für Wiedergabe/Pause
Appuyez pour lire/mettre en pause
Premere per riprodurre/mettere in pausa
Presione para Reproducir/Pausar

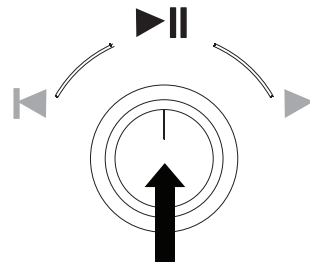


6. Rotate to Play Last/Next Song

 Drehen, um den letzten/nächsten Song abzuspielen
Tourner pour lire la dernière/suivante chanson
Ruota per riprodurre l'ultimo/successivo brano
Girar para reproducir la última/siguiente canción

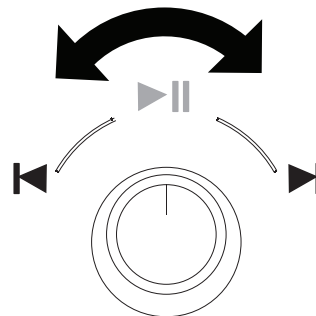


7.Connecting Headphones

 Kopfhörer anschließen
Connexion d'un casque
Collegamento delle cuffie
Conexión de auriculares

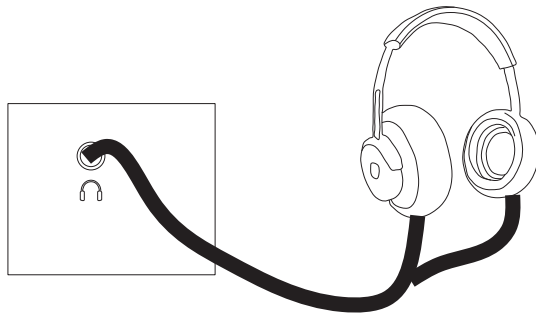

8.Connecting to an Amplifier

 Anschluss an einen Verstärker
Connexion à un amplificateur
Collegamento ad un amplificatore
Conexión a un amplificador

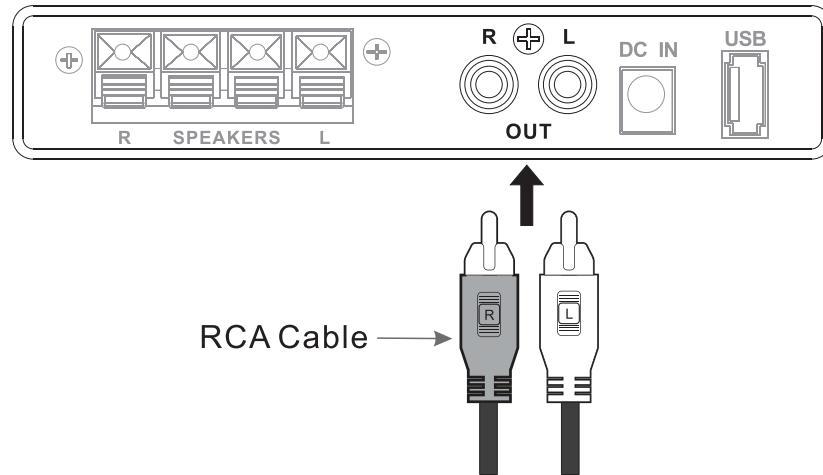


Playing a Vinyl Record

Abspielen einer Vinyl-Schallplatte / Jouer un disque vinyle
Riproduzione di un disco in vinile / Reproducir un disco de vinilo



1. Lift the Dust Cover

 Heben Sie die Staubabdeckung an
Soulevez le couvercle anti-poussière
Sollevare il coperchio antipolvere
Levante la cubierta antipolvo

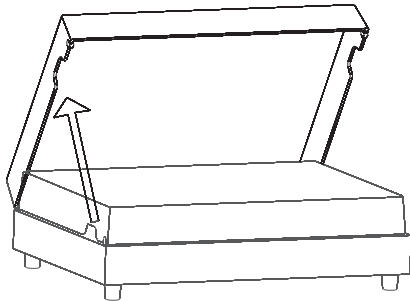


2. Place the Record

  Legen Sie die Schallplatte auf
Placez le disque vinyle
Posiziona il disco in vinile
Coloque el disco de vinilo

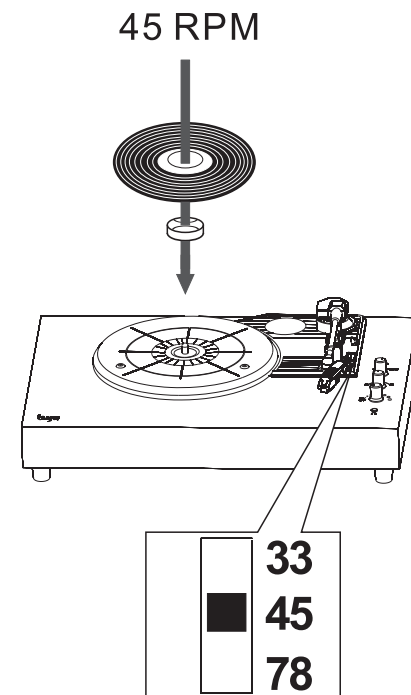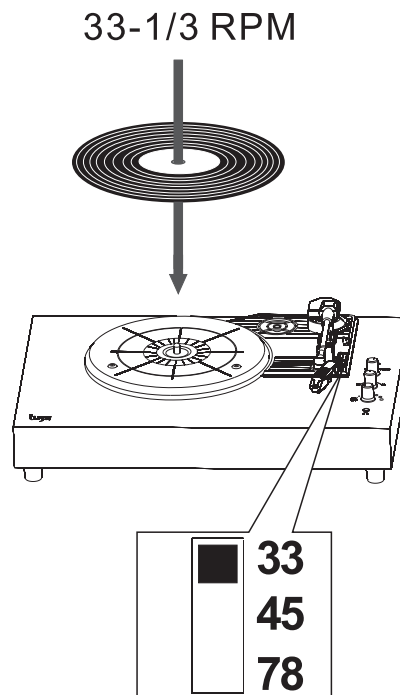


3. Select PHONO Mode

 Wählen Sie den PHONO-Modus
Sélectionnez le mode PHONO
Selezionare la modalità PHONO
Seleccione el modo PHONO

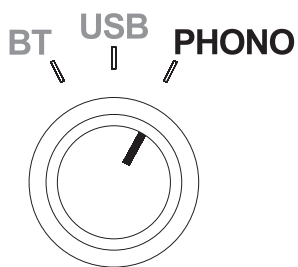


4. Remove the Stylus Cap

 Entfernen Sie die Stylus-Kappe
Retirez le capuchon du stylet
Rimuovere il cappuccio dello stilo
Retire la tapa de la aguja

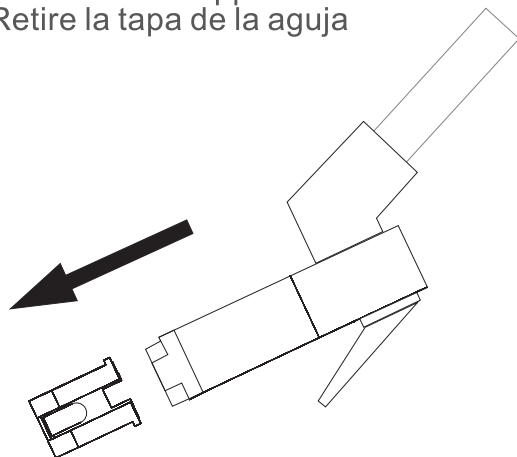


5. Unlock the Tonearm Lock

 Entriegeln Sie die Tonarmsperre
Déverrouillez le verrou du bras de lecture
Sblocca il blocco del braccio
Desbloquear el bloqueo del brazo fonocaptor

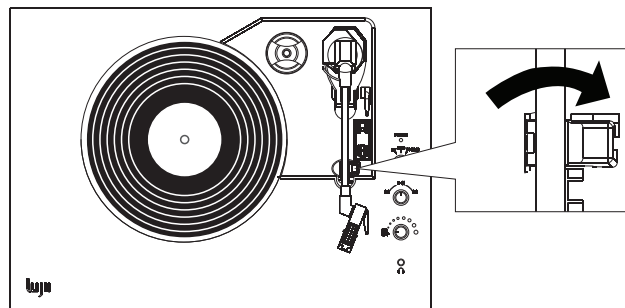


6. Lift the Tonearm Lift

 Heben Sie den Tonarmhebel an
Soulevez l'élévateur de contrôle du bras de lecture
Sollevare il sollevamento di controllo del braccio
Levante el elevador de control del brazo fonocaptor

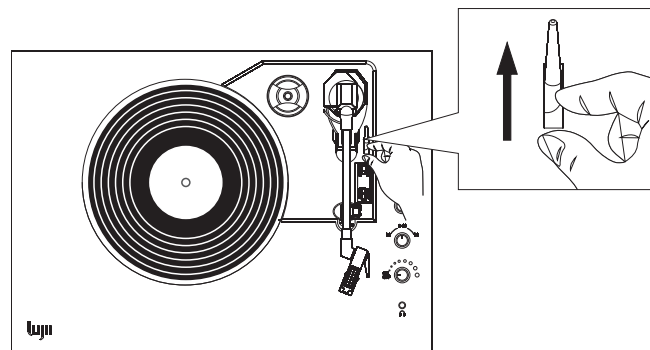


7.Position the Tonearm

 Positionieren Sie den Tonarm
Positionner le bras de lecture
Posiziona il braccio
Coloque el brazo fonocaptor

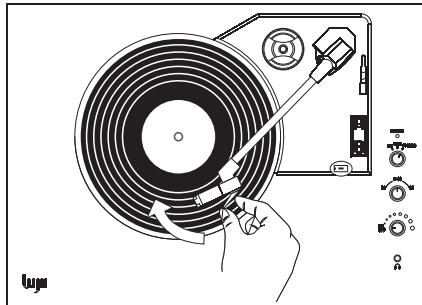

8.Lower the Tonearm Lift

 Senken Sie den Tonarmlift ab
Abaissez l'élévateur du bras de lecture
Abbassare il sollevamento del braccio
Baje el elevador del brazo fonocaptor

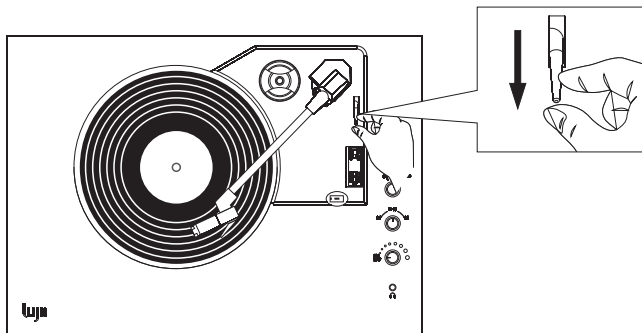


Pausing a Record

Anhalten einer Aufzeichnung / mettre un enregistrement en pause
mettere in pausa una registrazione / pausar una grabación


1. Lift the Tonearm Lift

 Heben Sie den Tonarmhebel an
Soulevez l'élévateur de contrôle du bras de lecture
Sollevare il sollevamento di controllo del braccio
Levante el elevador de control del brazo fonocaptor

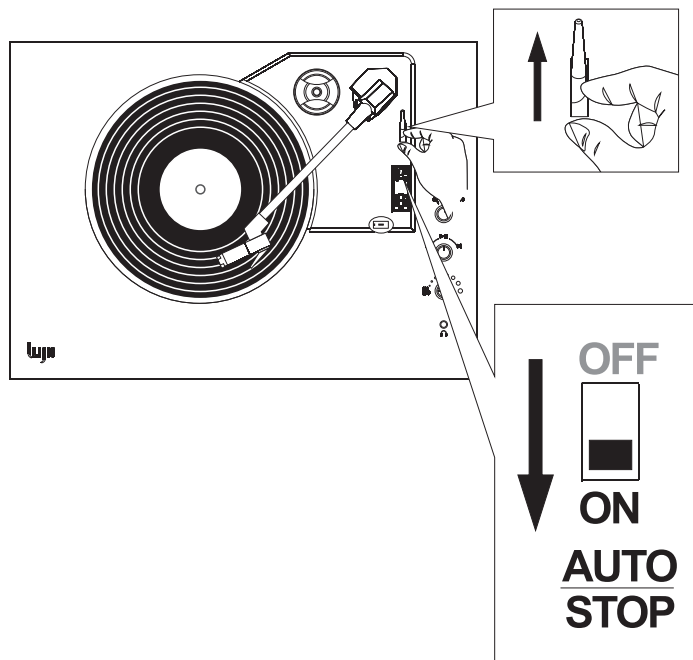

2. Return the Tonearm

 Geben Sie den Tonarm zurück
Retourner le bras de lecture
Restituisci il braccio
Devolver el brazo

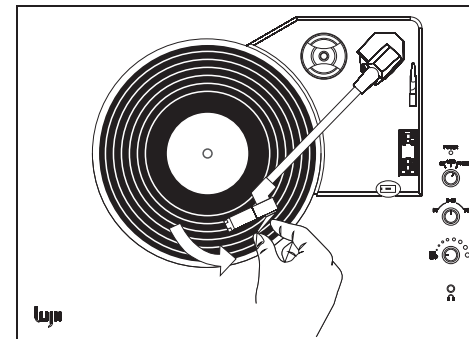


Playing from a Bluetooth Device

Wiedergabe von einem Bluetooth-Gerät / Lecture à partir d'un périphérique Bluetooth
Riproduzione da un dispositivo Bluetooth / Reproducción desde un dispositivo Bluetooth

1. Select BT Mode

 Wählen Sie den BT-Modus
Sélectionnez le mode BT
Selezionare la modalità BT
Seleccione el modo BT

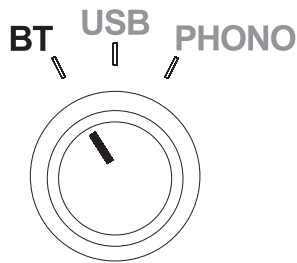

2. A Blue Light Blinks

 
Ein blaues Licht blinkt
Une lumière bleue clignote
Una luce blu lampeggia
Una luz azul parpadea

POWER



3. Pair with "JQ-001"

Mit „JQ-001“ koppeln
Paire avec "JQ-001"
Accoppia con "JQ-001"
Emparejar con "JQ-001"

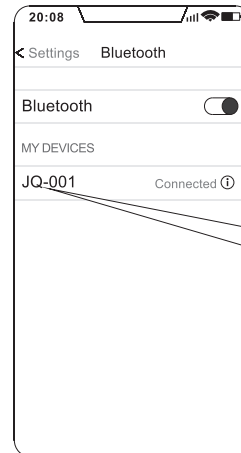

JQ-001

4. When connection is successful, you'll hear a DI sound

Nach erfolgreicher Verbindung hören Sie einen DI-Ton
Lorsque la connexion est réussie, vous entendrez un son DI
Quando la connessione è riuscita, sentirai un suono DI
Cuando la conexión sea exitosa, escuchará un sonido DI

 
Playing from USB

Abspielen von USB / Lecture depuis USB

Riproduzione da USB / Reproducción desde USB

1. Select USB Mode

Wählen Sie den USB-Modus
Sélectionnez le mode USB
Selezionare la modalità USB
Seleccione el modo USB

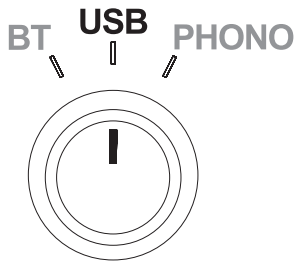

2. A Blue Light Blinks

 
Ein blaues Licht blinkt
Une lumière bleue clignote
Una luce blu lampeggia
Una luz azul parpadea

POWER



3. Insert USB Drive

USB-Laufwerk einstecken
Insérez la clé USB
Inserisci chiavetta USB
Insertar unidad USB

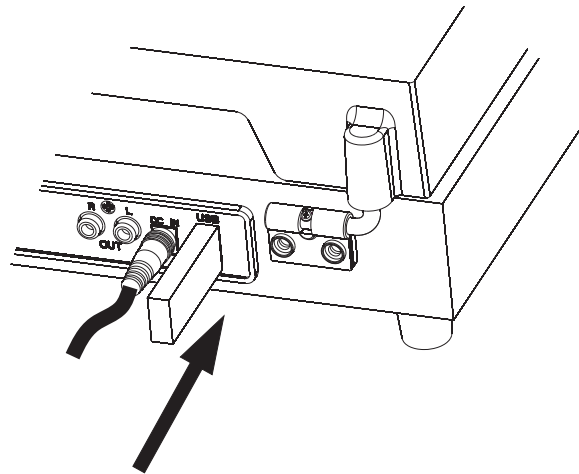

Replacing the Stylus

Ersetzen des Stifts / Ersetzen des Stifts

Sostituzione dello stilo / Sustitución del lápiz óptico

 
 
 
 
 
1. Removing the Stylus

Entfernen des Eingabestifts

Retrait du stylet

Rimozione dello stilo

Quitar el lápiz óptico

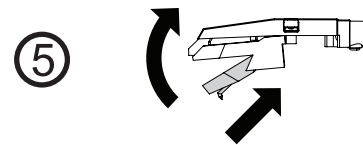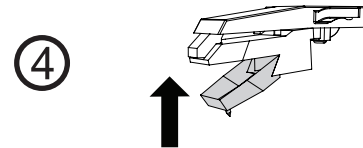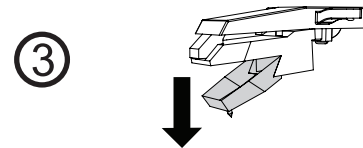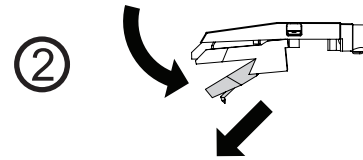

2. Installing a New Stylus

Installieren eines neuen Eingabestifts

Installation d'un nouveau stylet

Installazione di un nuovo stilo

Devolver el brazo

Specifications

Spezifikationen / Caractéristiques

Specifiche / Especificaciones

Specifications	
Brand name	LUJII
Model	JQ-001
Input	100-240V 50/60Hz 0.6A Max.
Output	12V, 2A
Consumption	24W
Speaker	3", 4Ω, 20W (2)
Speed	33 1/3, 45, 78 RPM
Auto-stop function	Yes
Unit Dimension (LxWxH)	493*266*355mm
Unit Weight	7kg

How to Contact Us

Wie man uns kontaktiert / Comment nous contacter
Come contattarci / Como contactar con nosotros

1. For Amazon customers, please contact us via Your Orders.

Für Amazon-Kunden kontaktieren Sie uns bitte über Ihre Bestellungen.

Pour les clients Amazon, veuillez nous contacter via Vos commandes.

Per i clienti Amazon, contattaci tramite I tuoi ordini.

Para los clientes de Amazon, comuníquese con nosotros a través de Sus pedidos.

2. Email Address: jiquantech@139.com



Manufacturer & Seller: yancheng shi jiquan keji youxian gongsi

Address: Liuzu, Youlian Cun, Chentao Zhen, Binhai Xian, Yancheng Shi,
Jiangsu Sheng, 224500, China



Name: Prolinx Global LTD

Address: 27 Old Gloucester Street, London, WC1N 3AX UK

Tel: 0044 20 39661193



Name: Prolinx GmbH

Address: Brehmstr.56, 40239 Duesseldorf, Germany

Tel: +4921131054698

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment