

背面

SRQMINI

MY002

 
Mini Wireless Earbuds
User Manual

Please read this manual carefully before use it

Welcome

Thank you for using the SRQMINI MY002.We hope you will enjoy it!

Package included:
Earbuds *2
Charging case *1
Charging cable*1
User manual*1
Ear Caps*2

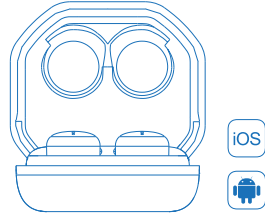

IOS

Android

Before use

Precautions

Before using this product, carefully read this manual and retain it for future reference. Additional warnings may be present on the product, packaging, or in the user instructions.

Safety

- Observe all warnings, precautions and instructions.
- CHOKING HAZARD – Small parts. Not for children under 6 years.

Use and handling

- Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:
 - Limit the amount of time you use the headset at high volume.
 - Avoid raising the volume to block out noisy surroundings.
 - Lower the volume if you can't hear people speaking near you.
 - Do not use the headset if it causes discomfort to your skin. If the headset causes discomfort to your skin, discontinue use immediately. If symptoms do not subside even after discontinuing use, seek medical attention.

Overview

Do not force tip of the headset earpiece down the ear canal. If the earpiece tip becomes lodged in the ear canal, seek medical attention immediately.

- Applying excessive pressure to the earpiece may injure the outer ear. Do not wear the earphones while in the situations where pressure may be exerted against the earpiece.
- Do not expose the earphones or accessories to high temperatures, high humidity or direct sunlight.
- Do not put heavy objects on the earphones or accessories.
- Do not allow liquid or small particles to get into the earphones or accessories.
- Do not throw or drop the earphones or accessories or subject them to strong physical shock.
- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Make sure the earphones is kept clean and free of ear wax buildup to maintain the specified product performance.
- Use a soft, dry cloth to clean the earphones or accessories.
- Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.
- Keep all products, cords, and cables away from operating machinery. As with all corded products, there is a danger of strangulation if a cord should become wrapped around your neck.
- Do not disassemble or insert anything into the earphones or charging cradle because this may cause damage to the internal components or cause injury to you.

Comply with laws regarding use of a mobile phone and earphones while driving. If you use the earphones while driving, make sure that your attention and focus remain on driving safely.

- Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft.
- Avoid the eyes of children or animals when the indicator light of the earphones is flashing.

Get the assistance

For assistance with this product, please contact our customer service at the website where you purchased the product, leave a message or email us, we will answer as soon as possible.

Company: shenzhen beeford technology Co.,LTD .

Address: 1003, No. 57, Chingtowninercun Gafeng Community, Daling Street, Longhua New District Shenzhen, China

Website: www.sqmini.com

Email: support@sqmini.com

How to charge

For the first time use, please fully charge the product.

Earphone charging

Please put the earphones into the charging case. Charging: The current battery indicator is blinking. Full power lights off.

Low battery alarm: the alarm sounds

Note: When the current and voltage of the earphone is lower than the normal value (cannot be turned on), it needs to be placed in the charging compartment for 15 minutes of wired connection to charge before returning to normal use. (Generally, this state will only appear after a long period of idle time)

Charging case charging


Charging: White light is always on. Full power: Green light is always on. Charging time: about 2 hours.

Open the charging case, power indicator:

The green light stays on for 10 seconds: the battery is 100%~71%. White light stays on for 10 seconds: the battery is below 70%.

How to connect

Open the charging case, the earphone will connect each other automatically, wait 3~5 seconds, when the white light of the left earphone flashes slowly, then turn on the mobile phone's Bluetooth search device, "some noise" appears, click pairing. Pick up earphone from charging case and wear.

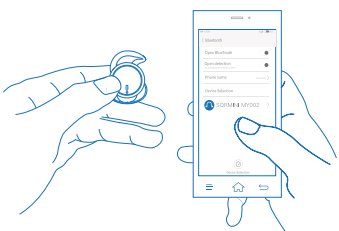


NOTICE


- When you want to use a earbud, just take one out. If you want to use a dual earphones, take out another earphone, and the earphones will automatically connect.
- Put the earphones back into the charging case, the earphones will automatically turn off when the charging case is closed.
- After successfully connecting for the first time, put the earphones back in the charging case to charge it, and then turn it on again, the earphones will automatically connect to the last connected device.

How to wear

WEARING FIGURE

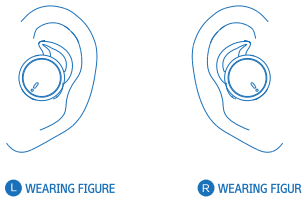

WEARING FIGURE

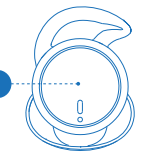

Turn on and Turn off

Turn on	Open the charging case or long press the MPB when the earphones are off
Turn off	Put the earphones into the charging case and close

Listen to music with earphone

R/L	Tap Twice	Play/Pause
R/L	Quick click 4 times	Wake up or turn off voice assistant

Call with earphone

R/L	Tap Once	Answer/ Hang up
R/L	Long press for 2 seconds	Incoming telegram: Reject

Turn on game mode

The earphones are connected to the device, [Tap Triple] the touch panel on either side, and when you hear the prompt sound, the earphones successfully enter the low-latency game mode.

Turn off game mode

The earphones are connected to the device, [Tap Triple] the touch panel on either side, and when you hear the prompt sound, the earphones successfully quit the low-latency game mode.

Put the earphones back into the charging case to charge and close the cover to turn off the game mode.

TIPS

- Make sure the earphones and the connected device are within a valid connection range and there are not too many obstacles that interfere with the signal.
- It is normal for the earphones to be disconnected occasionally. Just like WiFi, occasionally the connection is unstable. It may be due to interference in signal transmission. Please wait a moment or change the location to resolve.
- When the earphones cannot be connected to the device, please check whether the headset has power or is connected to other devices.
- Please fully charge the earphones once a month. If the earphones are not used for a long time, the battery of the earphones may be damaged.
- The sound insulation and sound leakage of earphones are related to the way of wearing the earphones and the volume of the earphones. You can adjust the wearing angle and degree of ear wrapping of the earphones in time according to the actual comfort of use. Please close the earhead foam part of the earphones as much as possible.
- Please use a standard-compliant charging head to charge the headset.
- Do not wear the product for bathing, or use it in the rain, and do not soak the product in water. After each normal use, it is recommended to dry the sweat or stains on the earphones with a dry cloth, paper towel, etc., and then store it.

Limited warranty

Warranty period: 1 year from the date of product receipt

During the warranty period of the product, due to the quality of the product itself, please contact us with the warranty card and shopping records to receive a return authorization / free maintenance and shipping instructions.

Fault Table

1. Bluetooth headset cannot hear sound;
2. The other side cannot hear the voice during the call;
3. Unable to charge Bluetooth headset

The following conditions will not provide free repair

- Unauthorized maintenance, misuse, collision, neglect, abuse, accident, alteration, or damage or alteration of the appearance of the product;
- The product exceeds the warranty period specified by the company;
- Damage caused by self-disassembly;
- Failures caused by accidents such as water ingress or falling, squeezing, etc;

5. Normal wear and dirt caused by use, such as scratches, damage caused by contact with chemical reagents, contact with sharp objects, etc;

6. Outer packaging and accessories, gifts, services other than the products promised by the sales staff, and additional configurations and gifts;

7. Improper storage: If the product is exposed to abnormal humidity and temperature for a long time, the performance is damaged;

8. Failure or damage caused by force majeure;

WARN

- Do not remove or repair or modify the earphones for any reason, otherwise it may cause the product to catch fire. Electronic breakdown or even complete damage to the product, and the damage to the product has nothing to do with our company. The consequences will be borne by the buyer.
- Do not place the device in an environment with a temperature below 0° C or above 45° C.
- Please avoid using the device indicator near the eyes of children or animals.
- Do not use the device in thunderstorm weather. Thunderstorms may cause the device to work abnormally and cause an increased risk of electric shock.
- Do not wipe the surface of this product with oil and other volatile chemical liquids, but alcohol can be used. Daily cleaning and maintenance products.
- Do not wet the device with liquid.

We apologize for any inconvenience caused by any typographical or translation errors. If the content is corrected later, please forgive us without notice.

Made in China

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.