 




It is located in the transparent storage box inside the packaging box



KM9000 Backlit Wireless Keyboard and Mouse Set User Manual

English version user manual: <http://www.topmate.cc/user-manual/km9000.pdf>
Spécification de la version française: <http://www.topmate.cc/user-manual/km9000.pdf>
Manual de Usuario en Versión Española: <http://www.topmate.cc/user-manual/km9000.pdf>
Deutsche Versionspezifikation: <http://www.topmate.cc/user-manual/km9000.pdf>
Versione manuale italiana: <http://www.topmate.cc/user-manual/km9000.pdf>

Product Specifications

Keyboard :

Product Size	37x14x2.2 cm / 14.5x5.5x0.86 in
Product Weight	417 g / 0.9 lb
Connection Method	2.4G Wireless Connection
Keyboard Charging Time	8 hours
Battery Capacity	1600 mAh (milliampere-hour)
Battery Life (Backlight On)	15 hours
Battery Life (Backlight Off)	350 hours
Operating Voltage	3.7 V (volts)
Connection Distance	8-10 meters
Energy-Saving Mode	Backlight turns off automatically when the keyboard is idle for 2 minutes
Key Lifespan	10 million keystrokes

Mouse :

Product Size	11x5.7x2.1 cm/4.3x2.25x0.82 in
Product Weight	65.8 ± 10g / 0.14 ± 0.02 lb
DPI	800-1200-1600-2000-2400
Sensor Replication Tracking Speed	4500 times/second
Power Requirement	3V DC (Direct Current)
Key Lifespan	5 million keystrokes
Sensor Tracking Speed	30 IPS (Inches Per Second)

Compatible Systems :

Windows XP, Windows 7/8/10/11, Mac OS, iPadOS, iOS, Android
(Note: The functions displayed may vary on some systems)

You will receive



Instructions for Using the Keyboard Backlight

How to Switch the Keyboard Backlight

1. Press the **Fn** + **Shift** , to turn on the keyboard backlight or

adjust its brightness. The keyboard brightness has three adjustable levels.


2. Press **Fn** + **Enter** to select different colors.

The keyboard backlight offers seven different colors to choose from.

Multimedia button description

Fn + F1 Lock the Fn Key	Fn + F10 Screen Brightness Up
Fn + F11 Mute	Fn + F12 Select All
Fn + F2 Volume Down	Fn + F13 Copy
Fn + F3 Volume Up	Fn + F14 Paste
Fn + F4 Previous Track	Fn + F15 Cut
Fn + F5 Play/Pause	Fn + F16 Switch to Windows System
Fn + F6 Next Track	Fn + F17 Switch to Mac System
Fn + F7 Screen Brightness Down	

 LED light description



WIN/MAC

Press **Fn** + **Q** to switch to Windows system, and the red light will turn on.

Press **Fn** + **W** to switch to the Mac system, and the green light will turn on.

Num/Caps

Press the **Clear Num** to activate the Number/Case Combination Mode, and the red light will turn on at this time.

Press the **Case Lock** to switch between uppercase and lowercase.

Low Battery Warning

When the LED indicator flashes slowly, it means the battery is about to run out. During charging, the battery indicator will turn red and automatically turn off once fully charged.



Note

If the keyboard or mouse cannot connect to the computer, please try the following steps:

Keyboard:

- 1) The Keyboard Fails to Connect
- 2) Turn on the keyboard power.
- 3) Press the **Fn** + **Q** , and the LED indicator will flash rapidly.
- 4) Insert the 2.4GHz USB receiver into the computer.
- 5) Within 10 seconds, place the keyboard within 10 centimeters of the receiver for pairing.
- 6) When the power indicator goes off, the keyboard pairing is successful.

Mouse:

- 1) Turn on the power switch;
- 2) Press and hold the left, middle, and right buttons for 3 to 5 seconds;
- 3) Release the buttons and insert the USB receiver.

Precautions

- 1) After receiving the product for the first time, please fully charge the keyboard as this helps extend the battery life.
- 2) After charging is complete, please unplug the power supply.
- 3) If you will not use the keyboard and mouse for a long time, it is recommended to turn off the power switch.
- 4) Do not expose this product to water; otherwise, it may cause a short circuit and damage the product.
- 5) Do not drop or impact this product, as it may damage internal components due to shock.
- 6) Do not place this product near high temperatures or open flames.

FAQ

Q1: What should I do if the keyboard has delays or freezes?

A1: Please check if there are nearby 2.4GHz devices (e.g., routers) interfering with the connection. Please check if the keyboard is fully charged. Please check if there is a full-metal case blocking the signal.

Q2: What should I do if the keyboard cannot be charged?

A2: Please check if the charging port is connected correctly. Please try replacing the charging cable. Try changing the USB port. If the problem persists, please feel free to contact us at any time.

Q3: What should I do if the backlight doesn't turn on?

A3: Please charge the keyboard for half an hour and then reinsert it into the USB port. Please try restarting the keyboard.

Q4: Does the mouse require battery installation to work?

A4: Yes, we have included two AAA batteries. Please insert the batteries into the mouse, then turn on the power switch, and it will be ready for use.

Q5: Where is my USB receiver?

A5: The USB receiver is located in the transparent storage case inside the packaging box. Please check carefully.



It is located in the transparent storage box inside the packaging box

Note

The multimedia keys are applicable to Windows 8 and Windows 10 systems. For other systems, some combination keys may be non-functional.

This device has been tested and meets the limit requirements for Class B digital devices as specified in Part 15 of the FCC Rules. These limits are intended to provide reasonable protection against harmful interference in a residential installation environment. This device generates and uses radio frequency energy. If it is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation environment. If this device does cause harmful interference to radio or television reception (which can be detected by turning the device off and on), the user should attempt to correct such interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the device and the receiver.
- Connect the device to a power outlet on a different circuit from the one the receiver is connected to.
- Consult the dealer or an experienced radio/television technician for help.

Any changes or modifications not explicitly approved by the party responsible for compliance may void the user's authority to operate the device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device shall not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause unintended operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.