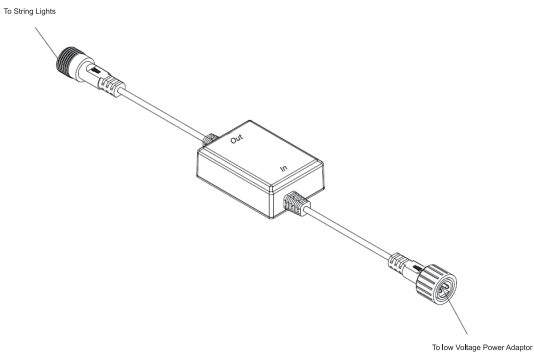


anko


Christmas Star Wand Controller

Christmas Magical Star Wand Controller is the simple and fun solution to turning on and off your Christmas tree lights by quick flick of the wand.

	
Magic Star wand controller (2 x AAA required, not included)	Wireless RF Receiver

Installation and pairing

1. Plug your Low voltage power adaptor to the end marked with **In**.
2. Plug your string lights to the end marked with **Out**. Plug the adaptor into your wall power outlet and turn the wall power outlet switch on.

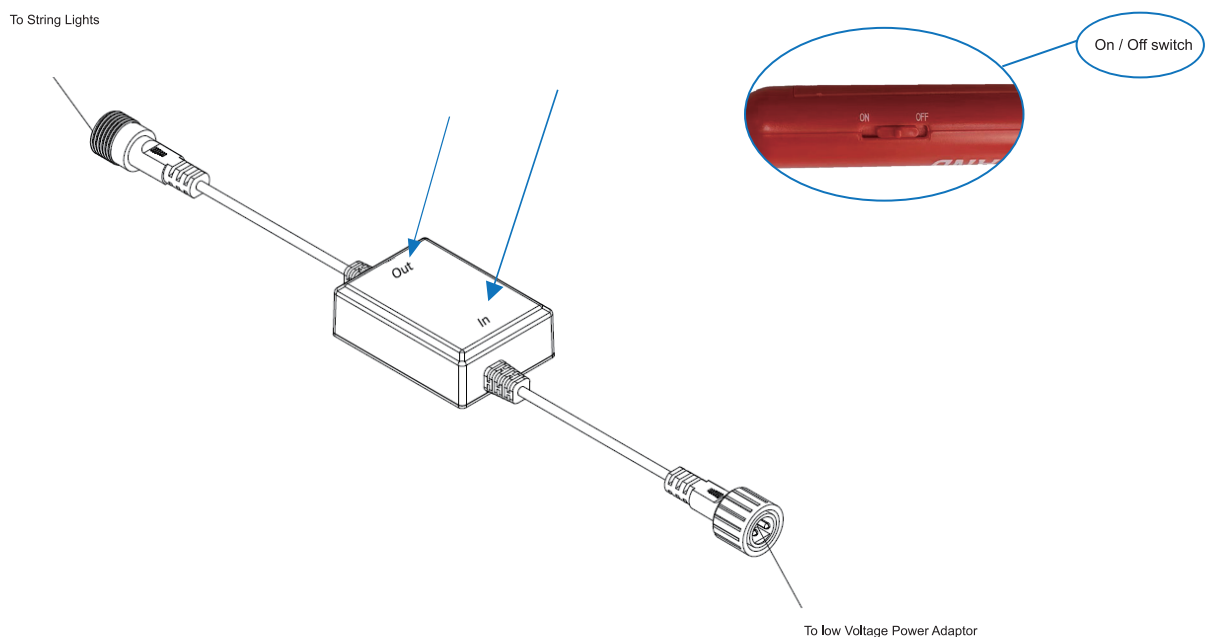

3. **PLEASE NOTE**: Once you have turned the power on at the wall, it can take up to one minute for the fairy lights to sync with your controller. Once paired, your fairy lights will blink 3 times meaning you can now control your lights with the Magical Wand.

Wave the wand to turn your Christmas lights on or off.

NOTE: you will need to repeat this pairing process each time you turn off the main power supply to the low voltage power adaptor.

WARNING: 240V mains power adaptor and switch must remain indoors at all times.

Operation range: Up to 15m in the open space.

Caution:

- 1. Only use the batteries specified and be sure to match the + - polarity signs**
- 2. Do not mix Alkaline, standard Carbon-zinc or rechargeable Nickel-Cadmium batteries.**
- 3. Do not mix old and new batteries**
- 4. Remove exhausted or dead batteries from the product**
- 5. Remove batteries if the product is not to be used for a long time**
- 6. Do not dispose of the batteries in fire. Batteries may explode or leak.**
- 7. Keep the batteries away from children, if swallowed seek for medical attention immediately**

FAQs

Q: Why does the wand controller no longer work or has lost the sound function?

A: When the battery is low in power, it may not have enough power to send the ON/OFF signal to the receiver or play the sound effect. We suggest replacing the battery with a fresh set of batteries.

Q: I have brand new batteries and it doesn't seem to turn the Christmas light on/off?

A: The wand controller is not paired or has disconnected with the wireless RF receiver, please turn off the main power supply to the low voltage adaptor, remove the batteries out of the wand , wait for 5 minutes, put the batteries back on , then power on the wand and follow step 3 again.



All trademarks are used for reference purposes only. Made in China

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.