

Quick Start Guide

Smart IP Camera with Battery



Please read the Quick Start Guide carefully before using the product and keep it properly.

Reminder: Please fully charge the device before first use.

About this product

This manual is only a guide for related products and may differ from the actual product, please refer to the actual product. Due to product version upgrade or other needs, this manual may be updated without further notice!

This guide is applicable to various types of battery cameras. Some of the illustrations are based on battery camera.



Interface description

 
1.1 Battery camera



Packing list

Battery camera x1 Base x1 mounting guide sticker x1
Charging cable x1 3M Glue x1 Quick Start Guide x1
Screw package x1


1.2 Solar PT Camera

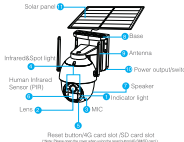

Packing list

Dome Camera x1 Solar panel x1 Solar panel mount x1
Mounting sticker x1 Quick Start Guide x1 Iron bracket x1
Hoop x2 Screw package x2

 1.3 Battery Bullet Camera



Packing list

Camera x1 Charging cable x1 Solar panel x1(option)
Mounting sticker x1 Quick Start Guide x1 Screw package x1

The instructions of LED light :

- Green light flashes for 2s and goes out: The device is powered on and connecting to the network
- Green light + red light is always on: The camera is being previewed remotely (privacy light)
- Green light is always on: The device is connected to the network or awakened
- Green light flashes continuously: Upgrading
- Green light flashes continuously and slowly: Charging
- Red light flashes 3 times quickly: Power off
- Red light is always on: Low battery
- The traffic light is always off: In standby

Button operation for single button model:

- Press the reset button and hold for 3s: Turn on
- Press the reset button 3 times continuously: Power off
- Press the reset button and hold for 5s in the power-on state: Reset

Button operation for Two-button model:

- Press and hold the on off button for 2s when shutting down: Turn on
- Press and hold the on off button for 2s when powering on: Power off
- Press and hold the reset button for 3s: reset

Boot up and Charging instructions

3.1 Boot up

- When remote view by connecting to the router and direct connection method, please boot the device after inserting the SD card. When using by pairing to the wireless NVR, please make sure the memory(SD card, HDD etc.) of the wireless NVR is ready.
- During use, if it is found that the APP pushes low battery message or the camera has a low battery warning indicator, you need to charge the camera, as shown in the figure.

3.1.1 Battery camera

Please press the power button for 2s-3s to turn on the battery camera.

Reminder: Please fully charge the device before first use.



4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

When remote view by connecting the router, the camera's WIFI should be connected to the router and the video is stored on the SD card of the camera or on the Cloud. When using in the local direct connecting mode, the WIFI of your mobile phone should be connected to the camera and the video can only store on the SD card of the camera. When working by pairing to the wireless NVR, the video is stored on the NVR and you can use mobile phone remotely to view and set up the camera through the wireless NVR.

(2). 4G Camera:

After waiting for the device to emit a "device networking success" prompt sound, click on the "+" in the upper right corner, select "scan", and enter the process of scanning and adding codes (Figure 2)



Figure 2

 
The device zoom function operation instructions

Note: This operation is only available for devices that support the zoom function.

1. Click the device play button in the device list to enter the real-time video interface;



2. You can adjust the focal length and magnification speed of the device lens by sliding up and down the zoom axis on the right side of the gimbal or zooming with two fingers in the video area.

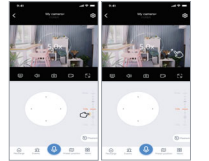

4G Camera working network diagram

Mobile direct connection (as the pictureshows)



Camera

Mobile device

3.3 Installation and placement

 
3.3.1 Battery camera

1.Place on a desk or table, As shown below.



2. Fix the battery camera on the wall or glass

First fix the mounting guide sticker to the wall with 3M glue (smooth surface such as glass)-or screws (brick wall, etc.), put the magnetic base of the battery camera on the iron sheet, and adjust the angle.



Ceiling installation

wall installation

2. The pole installation

(1). Fix the iron plate behind the battery compartment of thedome camera with screws;
(2). Install the camera on the pole by holding the hoop;
(3). Solar holder installation;
(4). The solar panel is installed outdoors, and then connectedto the camera;



3.3.3 Battery Bullet Camera

(1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug.



(3). Adjust the camera's pitch angle to a proper position and tighten the fixing screws;



⚠ PIR is sensitive to hot and cold disturbances, please note:

- Avoid installing the camera where the air flow is agitated. For example: the air outlet of the air conditioner, the heat dissipation port of the equipment, the side of the fan, the vicinity of the curtain, etc.
- Please do not install the camera in front of the glass or mirror.
- The height of the camera installation should be 2.5M-3M, the best distance of PIR trigger.
- Do not install the camera upside down.

(2). Fix the base with screws;



(4). The camera can be charged with solar panels.



▶ SIM card distribution network description

SIM card distribution network

1. Open the EseeCloud APP and click Add Device;
2. Scan the QR code of the device body to identify the device type (current, battery machine, different equipment types corresponding to different indicator light position guidance);
3. Insert the SIM card and open the device, check the device indicator status according to the instructions, and click Next;
4. Enter the distribution network, and until the distribution network is successful;
5. The page shows that the device was successfully added to launch the SIM card, modify the device name, and complete the addition.

SIM card APN distribution network

In the equipment distribution network, the distribution network time overtime or the equipment side broadcast "distribution network failure", the APN distribution network can be selected.

1. Device distribution network fails to enter the "Configuration Network Failure" page, and confirm that the device selects "Use entity SIM card" under using SIM card networking;

2. Enter the Physical SIM Card help page to confirm that the SIM card status is OK, and select APN Settings;
3. Obtain the SIM card APN information by consulting the SIM card instructions or contacting the SIM card channel customer service;
4. Enter the corresponding APN information and click Next;
5. Restart the device (let the device enter the scanning state), restart and click the next step to generate the QR code;
6. Scan the QR code on the screen of the device to enable the device SIM card to obtain the configuration APN information, and the device can scan the code to successfully broadcast the prompt sound. Click Next step;
7. Enter the distribution network, and until the distribution network is successful;
8. Device was added successfully, modify the device name, and complete the addition.

Exceptional case

During the equipment boot guide process, the indicator light is not flashing or always on after the device is turned on. Click the problem button in the upper right corner of the device boot guide page to view the common problems of the indicator light.

APN enable shortcut entry

Need to configure APN for the device SIM card , you can choose to enter in the boot FAQ page.

Warning

⚠ In case of fire or lightning, pls don't put product in damp and raining place, operate or maintain the device according to the user manual.

⚡ Be careful when you see attachment with a Dangerous Voltage which might cause serious electric accident.

Warning

To reduce electric shock, unprofessional people please don't open product front panel or rear panel.

Warning

In case of electric shock and fire, please don't use power supply beyond power limit in user manual.

Notice:

1. Ensure your equity, pls read the user manual carefully before you use the product.
2. Pls contact professional people if you need install and maintain the product.
3. Working Environment temperature of -20°C~+60°C, relative humidity under 85%.
4. Pls don't exceed the user manual's standard range of temperature, humidity and voltage.

Attention

1. Product failure caused by the following conditions is not covered by the warranty:
 - A. Product failure due to accident, negligence, disaster, improper operation or mishandling;
 - B. Improper use of the environment or conditions, such as power failure, ambient temperature, lightning strikes, etc., resulting in product failure;
 - C. Products that have been repaired by a non-factory authorized maintenance unit.
 - D. The products sell more than 12 months.
2. When the user finds that the product appeared faulty, please contact the distributor or local service organization for technical service with the user registration card.
3. When the user has any objection to the technical service provided by the distributor, he can complain to the manufacturer's customer support service center.
4. The warranty card must be valid after being stamped by the warranty unit.

Certification

QC: _____

Date: _____

尺寸: 70x125mm
材质: 128克铜版纸
风琴折

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.