

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Curtain motor JXXX series

Quick Start Guide




J230/A

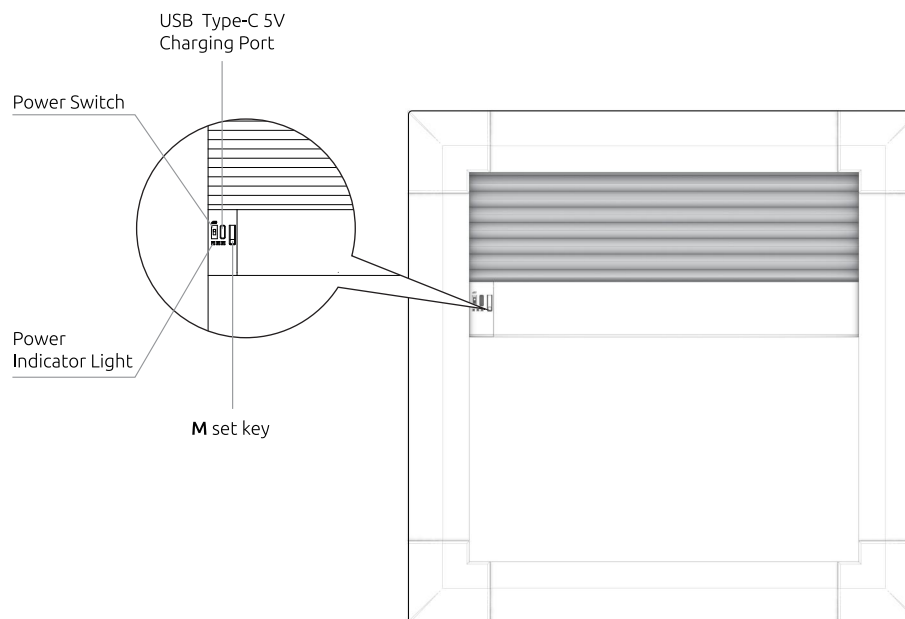


Main Parameter	Main Features	Wireless Frequency (MHz)	The rated torque (N.m)	Output speed (Rpm)	Battery Capacity (mAh)	Working Temperature (°C)	Protection Degree (IP)
J230/A	Easy To Assemble and Disassemble, Radio Control, Hidden Antenna, Auto-set Limiting, Third Limiting Site, Built-in Receiver, Silent Motor	433MHz	0.5	30	2500	0-40	20

Motor and emitter Description

Smart Emitter

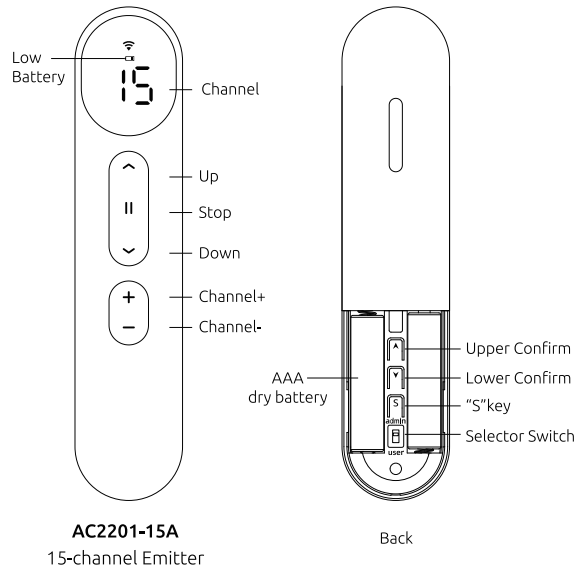

AC2201-15A
15-channel Emitter

  Moto "M" key Functional Specifications	Operation	The Motor Feedback	Function
	Repeated Short Press	Turn-stop-turn-stop Circular Motion	Emergency Switch
	Press For 2"	Motor Rotation The First Times	The Motor Enters The Matching State
	Press For 5"	Motor Rotation The Second Time	/
	Press For 10"	Motor Rotation The Third Time	Motor Reversing
	Press For 15"	Motor Rotation The Fourth Time	Restore The Factory


 Power Indicator Light	Indicator Status	Reason
	Flashing Red Light	 Low Battery
	Charging Red Light On	 In The Charging
	Charging Green Light On	 Charging>90%



"admin" mode

In "admin" mode, Emitter channel shows slow flash,
Channel "00" invalid

1. Quick matching

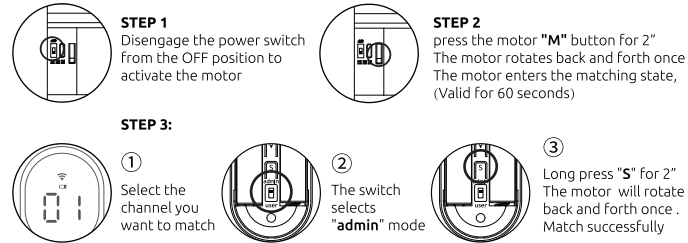

2. Setting limits

Setting limits in case of obstruction:

When the motor is in its initial state without stroke settings, activation will trigger automatic movement to both the highest and lowest positions, thereby setting the upper and lower travel limits automatically.

Reset Travel Limits:

Moving the power switch to OFF resets all travel limits.

Custom Limit Setting

Step 1: Set Upper Limits

Use the front button of the transmitter to stop the blinds at the required up travel point press ▲ for 2 seconds, motor rotation once, upper limit is set

Step 2: Set Lower Limits

Use the front button of the transmitter to stop the blinds at the desired down travel point press ▼ for 2 seconds, motor rotation once, lower limit is set

 
① In Admin mode, curtain operation will switch between inching operation and continuous operation, so as to set the stroke more accurately.

To "user" mode

Limits setup successful, normal use


3. Motor reversing

The running direction of the curtain is opposite to that of the transmitter button.



Method 1

 
Press both together until the motor rotates once



Method 2

Press M key 10 times, motor rotation the third time

 4. Delete emitter matches




"S" Press 5 times, motor rotation once.
Deleting completed



"user" mode

The user can proceed normally, Operation and use, will not be wrong operation of the motor


1. Favorite point

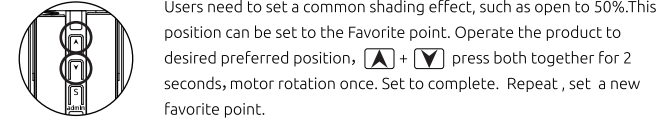

2. Add a new emitter

Normally, emitter A controls the motor, emitter B also needs to control.

 Method 1



Method 2

 
emitter B, "emitter quick matching"

3. Emitter lock channel

One channel of transmitter controls one motor, and 15 channels control up to 15 motors. For example, the 15 channel transmitter only uses 1-5 channels, the remaining 6-15 channels are not used and can be hidden without display

① Emitter access channel selection

Press and hold two channel switch keys at the same time emitter display, "L" appears first, then "15" words appear, then release the key



② Use channel switch button

Select channels to keep

③ Using the emitter stop key

Confirm the channel to be reserved



① Reserved channels can only be counted from channel 1. For example, 1-5. No support for 3-7. Repeat the operation to adjust the final required number of channels.

4. Motor speed regulation

The running speed of the motor is three gears in total, and the default is gear 1. Slower and quieter



Only one gear can be raised or lowered in one operation. When switching to the corresponding gear, the number of motor rotation is the same as that of the gear