

# Product List

## stopwatch



 
 
user's manual



No. 7 dry battery \*4



### Functional diagram

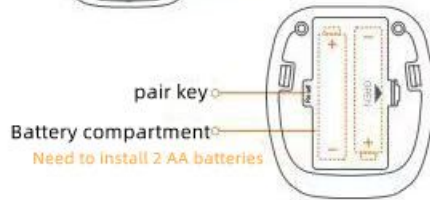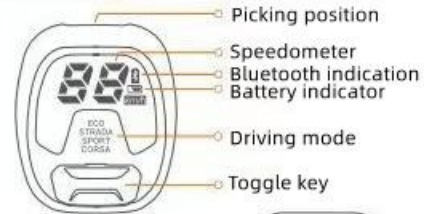

### Toggle key:

- Toggle up or down to power on: Press and hold down to power on.
- Toggle to switch the driving mode after power on
  - ECO--safe mode
  - STRADA--novice mode
  - SPORT - sports mode
  - CORSA - track mode
- Press and hold the toggle button up to adjust the brightness of the display.

**Speedometer:** Displays the current speed of the kart

 
 
**Bluetooth indication:** Bluetooth flashing means the vehicle is not connected; bluetooth off means the vehicle is connected

**Battery indicator:** Red light indicates that the battery of the computer is low, prompting to replace the battery of the computer

**Pairing keys:** Visible when the battery cover is opened. When the vehicle and the computer show that they are not connected, or need to be reconnected, press this key to pair.

### Correction and replacement

1. Take out the instrument cover from the steering wheel from the handle position
2. Open the battery compartment, insert 2 AA batteries, and close the battery cover

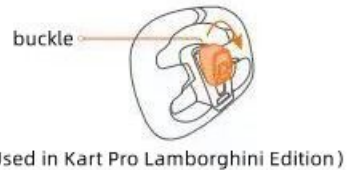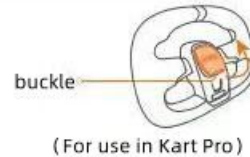

3. Install the stopwatch on the steering wheel



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction