

Remote Control Pairing

Turn on the remote control and place it within 10cm of the device.

1. Press and hold the "●" key for 4 to 5 seconds.

2. Release the buttons after the indicator light flashes.

3. Pairing prompt appears on the screen. "Paired Successfully" is displayed. The remote control has been paired successfully.

If pairing still fails, you need to disconnect the device from the power source, then restart it, and follow the above steps again.

Voice Control

Voice control of Remote Control: Press and hold the language button "o" of remote control, move close to the remote control and give a voice command, then release the voice button to complete voice control.

Focus Setting

Method 1: Manual focus

1. Press the focus key "F" on the remote control to navigate to the focus screen.

2. On the focus screen, press the up and down arrow keys on the remote control to adjust the focus manually.

Method 2: Auto focus

1. From the home screen, navigate to Setting -> Projector, then select Auto Focus. The system will automatically adjust the image into sharp focus.

Method 3: Manually trigger automatic correction

Lift the projector back to the original position to trigger automatic correction

Tip: The interface will be updated from time to time, please refer to the actual display for the interface style.

Calibration Settings

Method 1: Autokeystone correction

1. From the home screen, navigate to Settings -> Projector, then select Auto keystone correction. The system will automatically adjust the image into sharp focus.

2. While using the app, press the "i" key to enter quick settings for adjustments.

Method 2: Manual correction

1. From the home screen, navigate to Settings -> Projector, then select Manual Keystone Correction to enter the manual adjustment interface.

2. While using the app, press the "i" key to enter Quick Settings, then navigate to All Settings for adjustments.

Tip: The interface will be updated from time to time, please refer to the actual display for the interface style.

Wireless Screen Casting

AirPlay:

a. Open the AirPlay app on the projector.

b. In a video app or audio player, tap the video icon or audio icon to stream wirelessly to the projector. Alternatively, open Control Center and select the Screen Mirroring icon to share your screen.

c. Select this TV or streaming device.

Screen Sharing:

Make sure your devices are connected to the same Wi-Fi or Ethernet network.

a. Open the Screen Sharing app on the projector.

b. Swipe down to open the Control Center and select the "Screen Mirroring" or "Cast" function on your device. The name and location of this function may vary by device.

c. Select your device name from the device list to share your phone/computer screen to this device.

Note:

This function supports Android and Windows 10 or above operating systems. Some devices may not support screen casting. Screen sharing performance may vary depending on your device.

Wired Connection for Screen Casting

1. Connect the projector and the input device using an HDMI cable.

2. Press the "HDMI" button on the Remote Controller and select the HDMI channel to complete the connection display.

*The signal input devices of different systems may vary, and you need to operate according to the requirements of the signal input device.

Cleaning Method

Please make sure the power plug is unplugged before cleaning.

Do not use pesticides or other volatile chemicals on the projector or lens. Do not let rubber or vinyl products contacts the projector for a long time, which will damage the coating and make it peeled off.

- Projector cleaning

1. Wipe with a soft, dry cotton cloth. If it's dirtied seriously, we can wipe with soft cloth that stuck with diluted neutral detergent, then dry with a clean and dry cloth. Please pay more attention if used with chemical fiber cloth.

2. Don't use thinner, benzene or any other solvents to avoid quality reduction or coating peeling off etc.

3. A brush can be inserted into the front of the vacuum cleaner to remove dirt inside the vents. Please don't use vacuum cleaner with no connector, or clean with vents directly.

4. Please don't scrape the projector with nails or any other hard objects so as to avoid scratches.

- Projector cleaning

1. Clean lens with the same method for camera lens: please use professional blow dryer or cleaning paper for glasses, ensure lens are not scratched.

- Inlet and Outlet Dust Cleaning

1. Dust in the inlet and outlet will prevent ventilation and increase the internal temperature, which will cause defect.

2. Disconnected power line after turn off the projector.

3. Clean the exterior with an electric vacuum cleaner, please install brush head adapter on the vacuum cleaner first. Kindly take note: don't use vacuum cleaner with no connector or brush.

4. Replace the dust-proof cotton core regularly.

Poisonous and Harmful Substance, Element Name and Content

Part name	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Shell	0	0	0	0	0	0
Optical Machine	0	0	0	0	0	0
Circuit Board	0	0	0	0	0	0
Fan	0	0	0	0	0	0
Other Wires	X	0	0	0	0	0
Remote Control	0	0	0	0	0	0
Power Supply	0	0	0	0	0	0

O: Content of the hazardous substance in all homogeneous materials of the component is under the limits of SJ/T 11363-2006.

X: Content of the hazardous substance exceeds the limit requirements specified by SJ/T 11363-2006 in at least one homogeneous material of the component. The components labeled "X" have no substitutive due to global technology development limits. Circuit board assembly*: including printed circuit board and its components, electronic components, etc.

The number in the icon represents the projector's service life under normal environment (without battery).

After-sales Service Policy:

Products enjoy 12 months of warranty service from the date of purchase in the official store. If the purchased product has defects, please contact the corresponding purchase store for processing.

Note: The warranty policy only applies to products purchased in the official store (projectors purchased from other stores are not subject to this policy, and the purchase information of other stores shall prevail).

Users who need after-sales service or exercise warranty rights, please exercise the purchase account to contact the corresponding purchase store.

Due to different warranty policies of each dealer, users who did not purchase in the official store should contact the corresponding retailer for warranty service.

If projectors purchased from other channels require official assistance, the warranty period shall be redetermined based on the SN on the bottom of the projector (Projectors without SN or damaged SN are all classified as projectors without warranty).

The Circumstances Not Covered by the Warranty:

The product is damaged by the user, including but not limited to: burns, liquid or food spills, cracks, breaks, dents caused by falling, use/storage of the product at extreme temperatures or other product defects caused by human behavior. And the warranty will be deemed terminated.

The product under warranty does not cover the appearance damage to peripheral devices or other gifts in the box, product outer surface/coating and external parts, including but not limited to cracks, dents or scratches on the housing, lens, buttons and other accessories, and product deterioration caused by normal wear and tear, including but not limited to rust or stains.

Damage caused by reliability or compatibility issues when using unauthorized repairs or disassembly, modification and use of third-party parts.

Product failure caused by any software program (whether provided with the product or subsequently installed).

Inevitable damage to the machine caused by downloading firmware updates from elsewhere.

Product damage caused by disasters such as fire, floods, local power problems or other forms of force majeure.

Product's warranty period has expired.

wanbo

Wanbo Projector

Mozart 1S Introduction Manual

Before using this product, please read this product manual carefully

Thank you for purchasing our products. For your safety and benefit, please read this product manual carefully before using. If you fail to follow the product instructions or precautions, and cause any personal injury, property or other losses, the company will not bear any responsibility.

Important Safety Precautions

You are recommended to use the projector in a dark room to achieve the best effect.

1. Please don't install in places that directly blown by cold and warm air of air-conditioning, water condensation or high temperature may lead to failure to the machine.

2. Ensure adequate ventilation and vent are not blocked to prevent heat accumulation inside the machine.

3. Please prevent foreign matters such as nails or paper scraps from falling into the machine. Do not insert any metals such as iron wire or screwdriver into the machine. Please turn off the power immediately and turn to professional technician to remove it if any foreign matters fall into the body.

4. Do not place any liquid on this machine to avoid risk of electric leakage.

5. Please use soft packaging materials to move the projector, keep the projector from violent vibration.

6. Areas near the exhaust will become hot during and after we use the projector, it may lead to scold if we touch with hand.

7. Please don't watch lens directly when it's on so as to protect our eyes from damage. CAUTION Risk of explosion if the battery is replaced by an incorrect type

Note:

-Don't open the shell to prevent electric shock. Please turn to qualified professional maintenance personnel for the maintenance as there are no parts in the machine that users can repair themselves.

-Don't expose the machine to rain or moisture so as to prevent misfire or electric shock.

-The product is applicable to be used under a temperature of 0-35℃ for a safe side.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Important Safety Precautions

Don't install in places with poor ventilation

Don't install in places that hot and humid

Don't block the vent (Inlet or Outlet)

Don't install in dusty and smoky areas

Basic Parameters

Product Name	Wanbo Projector	Display Principle	LCD
Light Source	LED	Horn	20W
Operation Mode	Remote Control	Working Environment	0-35℃
Output Port	Headphone Audio Output	Input Port	HDMI / USB
Net Weight	3.3kg	Machine Size	176×209×223mm
Power Supply	AC 100-240V 50/60Hz 4A (MAX)		
Accessory	User Manual / Remote Control / Power Cord / Power adaptor		

*The poster is used below 200cm

List of Items

Projector

Instruction Manual

Remote Control

Power cord

Power Adaptor

Note: Thank you very much for purchasing Wanbo Projector. Please check whether the physical product and accessories you received is consistent with that of the list.If not, please contact the customer service of Wanbo in time.

Projection Distance Reference

Projection size (Inch)	55	80	100	120
Screen length × width (cm)	122 × 68	177 × 100	221 × 125	266 × 149
Lens – screen (m)	1.49	2.17	2.71	3.25

Recommended size

Note: The best projection distance for this product is about 1.7m-3.25m. If the distance is too far, the brightness and clarity will decrease, affecting the viewing experience.

Introduction to Projector Appearance

*Power button indicator light description

Standby: The indicator blinks slowly

Power on: The indicator stays on

Projector Hanger Installation Steps

External Device Connection

Remote Control

Facebook

Twitter

Instagram

Shenzhen Wanbo Technology Co., Ltd.

www.wanbo.cn

图纸号	T8(VIDAA)-SMS01-001	类型	Mozart 1S英文说明书
颜色	黑白印刷	尺寸	折前尺寸: 810*120mm; 折后尺寸: 90*120mm
材质工艺	128g铜版纸 白色; 9页风琴折双面		
备注			