

英文

[illegible]

Important Safety Precautions

You are recommended to use the projector in a dark room to achieve the best effect.

- Please don't install in places that directly blown by cold and warm air of air-conditioning, water condensation or high temperature may lead to failure to the machine.
- Ensure adequate ventilation and vent are not blocked to prevent heat accumulation inside the machine.
- Please prevent foreign matters such as nails or paper scraps from falling into the machine. Do not insert any metals such as iron wire or screwdriver into the machine. Please turn off the power immediately and turn to professional technician to remove it if any foreign matters fall into the body.
- Do not place any liquid on this machine to avoid risk of electric leakage.
- Please use soft packaging materials to move the projector, keep the projector from violent vibration.
- Areas near the exhaust will heat during and after we use the projector, it may lead to scold if we touch with hand.
- Please don't watch lens directly when it's on so as to protect our eyes from damage.

⚠️ Note:

- Don't open the shell to prevent electric shock. Please turn to qualified professional maintenance personnel for the maintenance as there are no parts in the machine that users can repair themselves.
- Don't expose the projector to rain or moisture so as to prevent moisture or electric shock.
- This product is applicable to be used under a temperature of 0-35°C for a safe kids.

Important Safety Precautions

Don't install in places with poor ventilation

Don't install in places that are hot and humid

Don't block the vent (Inlet or Outlet)

Don't install in dusty and smoky areas

Projector Part Name and Function

Camera

Infrared receiver

OFF/ON

HDMI Input

USB (Interface)

Headphone Jack

Hot Air Exhaustion (Air Out) Mark

(Open the back air vent of Back Screen from outside or clockwise to prevent cooling failure and prevent dust control)

Installation and Adjustment

1. Device Power-On and Power-Off

Power-On

Method 1: Press the power button on the projector to start.
Method 2: Point the remote control to the projector and press "Power" to turn it on.

Power-Off

Short press the power button or the "Power" key on the remote control, once shutdown prompt box appears, short press the power button or the power key on the remote control again.

2. Adjusts Focal Length

Schematic diagram of blurred image

Focus Length: When the picture image is blurred (indicated as the right picture), adjust the lens focus through "Focus" on the remote control to achieve the best definition.

Projector hanger installation steps

1 The bracket is aligned with the screw hole

2 Adjust hanger angle and then tighten screws

3 Install the fitting bracket

Remote Control

OFF/ON

User

OK

Left

Return

Sound Volume +/-

Youtube

Prime Video

Input

Setting

Up

Right

Down

Projection shortcut setting

Home

Focus +/-

Mute

Netflix

Disney+

Input

Google Assistant

Setting

Up

Right

Down

Projection shortcut setting

Home

Focus +/-

Mute

Netflix

Disney+

Mobile Phone with the Same Screen

The following steps can help us to display content of our mobile phone to projection screen synchronously through wireless wifi, just enjoy with a larger picture (Applicable for intelligent Android version only).
Equipment requirements: support devices above IOS6 and Android 5.3 Min.

iPhone
Support for IOS6 or Over IOS6

Android
Support for Android 5.3 Min

IOS Old Version

IOS New Version

Screen Mirror

Same Screen User Instruction - IOS Devices

- Ensure the Phone and Projector under the same WIFI.
- Download "AirScreen" in Google Play Store of the Projector.
- Open "AirScreen", follow App prompts.
- Open console of the Phone, click "AirPlay" to search and connect the device.
- Find the projection name "AS-TV Stick" corresponding to the projector, click connect to complete same screen process.

IOS Old Version

IOS New Version

Screen Mirror

Same Screen User Instruction - Android Devices

- Ensure the Phone and Projector under the same WIFI.
- Open Projection function via setting in the phone.
- Find the projection name "TV Stick" corresponding to the projector, click connect to complete same screen process.

Instructions

- Indicator Light: Indicator light on the remote control flashes when press any key and flashes quickly under low battery.
- Bluetooth Pairing: Pressed the "Home" + "Return" keys together on your Remote Control for 10 seconds.
- Google Assistant: Press the Google Assistant button on your remote to talk to Google

Basic Parameters

Product Name	Wisenbo Projector	Display Principle	LCD
Light Source	LED	Hom	5W*2
Operation Mode	Remote Control	Working Environment	0-36°C
Output Port	Headphone Audio Output	Input Port	HDMI/USB
Net Weight	1.5kg	Machine Size	145*142*217mm
Power Supply	AC 100-240V 50/60Hz 2A (Max)		
Accessory	User Manual / RemoteControl / Power Cord		

封底 1 2 3 4 5 6 封面

7 8 9 10 11 12 13 14

图纸号	R2(1+1)-SMS01-002	类型	R2(1+1) 英文说明书
颜色	黑白印刷	尺寸	折前尺寸: 720*120mm; 折后尺寸: 90*120mm
材质工艺	128g铜版纸 白色; 8页风琴折双面		
备注			