 




Tempo

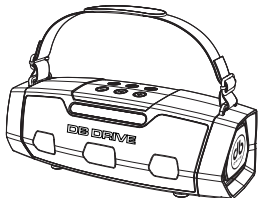

T- STAGE100

Wireless Portable Party Speaker

USER MANUAL

Installation Instructions / Owners Manual

Due to continuous improvement of the product the specifications are subject to change without notice

INTRODUCTION

Congratulations on your purchase of a DB Drive wireless speaker. Your choice reflects a true appreciation for powerful, high-quality sound and modern convenience. Whether you're upgrading your home setup, enhancing outdoor gatherings, or taking your music on the go, your DB Drive wireless speaker is designed to deliver impressive performance, deep bass, and crystal-clear audio wherever you are.

KEEP YOUR SALES RECEIPT

Please take a moment to attach your sales receipt to this manual and store it in a safe place. In the event that warranty service is required, your receipt will be necessary to verify the purchase date.

RECOMMENDATION

For best results, fully charge the unit before first use, follow the pairing instructions carefully, and position the speaker in an open area to maximize sound quality and Bluetooth connectivity. While setup is simple and user-friendly, we recommend reviewing this manual thoroughly to ensure optimal performance and longevity.


Due to ongoing product enhancements and potential manual updates, we encourage you to visit our website for the latest product information and support resources at www.dbdrive.net

FEATURES

- RGB Mood Lighting Effects
- Up to 4 Hours Playtime
- TWS Stereo Pairing (Double the Sound)
- Side-Firing Bass Boost Radiators
- IPX4 Water Resistant Design
- Karaoke Ready
- Built-in FM Radio Tuner
- TF Card Playback (Music Without a Phone)
- Bluetooth® 5.3 Wireless Streaming
- Quick Pair & Auto Reconnect
- 60W Dynamic power output
- USB-C Fast & Easy Charging


SPECIFICATIONS

- Bluetooth Version: 5.3
- Output Power: 30W RMS / 60W Dynamic
- Battery Capacity: 4,000mAh
- Frequency Response: 80Hz – 18kHz
- Charging Time: 3 Hours
- Charging Input: DC 5V (USB-C Type-C)

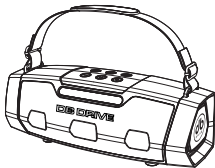


ACCESSORIES

 - 1 X Bluetooth Speaker
- 1 X Manual
- 1 X Strap

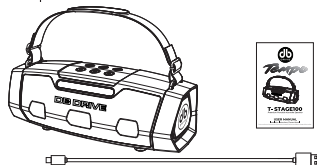

OVERVIEW OF SPEAKER

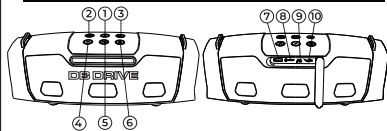 

1	Power Button	6	+ Volume Up
2	Light Button	7	USB Slot
3	M Key	8	TF Card Port
4	- Volume Down	9	AUX
5	Play/Pause Key	10	Charging Port (Type-C)

BUTTON DESCRIPTION OF SPEAKER

- Power Button**
-Press and hold the Power button for approximately 3 seconds to turn the device on or off.
- Light Key**
Press to cycle through RGB lighting modes or turn the RGB lighting ON/OFF.
- M Button**
-Short Press: Switch to the next function.
- Volume up +**
Short press: Increase the volume.
Press and Hold: Skip to the next track
- Play/Pause Key**
Press to play or pause audio.
- Volume down -**
Short press: Decrease the volume.
Press and Hold: Return to the previous track
- USB Slot**
Insert a USB drive to play audio files.
- TF Card Port**
Insert a microSD (TF) card to play audio files.
- AUX Input**
Connect an external audio device using a 3.5 mm auxiliary cable.
- Charging Port (Type-C)**
Connect a USB Type-C cable to charge the unit.

INSTRUCTIONS

BLUETOOTH/WIRELESS PAIRING

- Keep the Bluetooth speaker within 1 meter (3 feet) of the mobile phone or other device during pairing.
- Turn on the speaker. Ensure the blue indicator light is flashing rapidly, indicating it is in Bluetooth pairing mode.
- Enable Bluetooth on your device and search for available devices. Select "T-STAGE100" from the list to pair. Once connected, the indicator light will remain solid, confirming a successful connection.

VOICE PROMPTS

- A voice prompt will indicate when the device is powered ON or OFF.
- When the volume reaches maximum, a double beep will sound. When the volume reaches minimum, a single beep will sound.
- When the battery voltage is low (3.4V), a low-battery alert will sound three times before the device powers off.

MODE SWITCHING

By default, the device enters Bluetooth mode when powered on. Press the Mode (M) button to cycle through the following modes: **Bluetooth → USB/TF Card → USB → AUX Input**

CHARGING INDICATOR

- Power ON: Blue light flashes rapidly
Power OFF: Blue light turns off
- Pairing Mode: Blue light flashes slowly
Connected: Blue light remains solid
- Music Playback: Blue light flashes slowly
Paused: Blue light remains solid
- Red light ON: Charging in progress
Red light OFF: Charging complete

VOLUME

The default speaker volume is set to 70% when the device is powered on.

CHARGING INSTRUCTIONS

This speaker features a built-in overcharge protection circuit and can be connected to a computer or charger for extended periods. Charging typically takes approximately 4 hours. Playback time may vary depending on the volume level.

AUTO POWER-OFF

If there is no activity, the device will automatically power off after 15 minutes.

TROUBLESHOOTING

AUTOMATIC SHUTDOWN

- When the battery level is low, battery protection will activate and the device will power off automatically. Charge the device for approximately 4 hours before use.

UNABLE TO PLAY MUSIC

The device may not recognize the file storage path. Ensure music files are stored in the root directory of the storage device.

NO SOUND WHEN CONNECTED TO COMPUTER

- The audio output may be incorrectly configured. Select the correct audio output device on your computer.

BUTTONS NOT RESPONDING/MALFUNCTIONING

- If the device is unresponsive or functions are irregular, power it off and restart.

DEVICE FREEZES OR MALFUNCTIONS

- If the device becomes unresponsive, press the reset button to restore normal operation.

MAINTENANCE

- Please read the following suggestions to help prolong the product's lifespan and better understand the warranty terms.
- Keep the product dry. Do not use or store it in humid environments, as this may cause short circuits.
- Do not expose the product to direct sunlight or high temperatures. Excessive heat may shorten the lifespan of electronic components, damage the battery, and deform plastic parts.
- Do not use or store the product in extremely cold environments, as this may damage the PCB board.
- Do not attempt to disassemble the product. Non-professionals should not open or repair it.
- Avoid dropping the product, exposing it to strong vibrations, or striking it with hard objects, as this may damage the internal electronic components.
- Do not use strong chemicals or detergents to clean the product.
- Do not scratch the surface with sharp objects, as this may damage the casing and affect its appearance.
- Do not charge the product continuously for more than 10 hours, as this may reduce the battery's lifespan.



LIMITED WARRANTY

DB Drive warrants any products purchased in the U.S.A. from an authorized DB Drive dealer.

All products are warranted to be free from defects in material and workmanship under normal use and service for a period of one (1) year when purchased over the counter. This warranty applies to the original purchase only.

DB Drive will either repair or replace (as its option) any unit that had been found to be defective and under warranty provided the defect occurs within the one (1) year warranty period.

This limited warranty extends to units having been subjected to misuse, abuse, neglect, or accident. In DB Drive's judgment, products that show evidence of having been altered, modified, or serviced without DB Drive's authorization, will be ineligible under this warranty.

To obtain warranty services please contact your retailer or visit our website at www.dbdrive.net for more details.



DB Research L.L.R. • 302 Hammore Industrial Parkway • Harlingen, TX 78550
Ph: (877) 787-0101 • Fax: (956) 421-4513 • Tech support: support@dbdrive.net

Designed and Engineered in the U.S.A.