

True Wireless Bluetooth Earbuds

Elf E06

User Manual | VWS-E37

At a glance

Specifications

Model: NBK

Bluetooth version: Bluetooth 5.3

Compatible Bluetooth profile: AVRCP/A2DP/HFP/HSP

Supported codes: SBC/AAC

Maximum communication range: ≤10 m

Frequency band: 2402MHz-2480MHz

Frequency range: 20KHz-20KHz

Earbuds' battery capacity: 30mAh/0.11Wh

Earbuds' input power: 5V=30mA

Charging case's battery capacity: 230mAh/0.851Wh

Charging case's input power: 5V=200mA

Charging case's interface: USB-C

Material: ABS

Operating instructions

1. Power on

a. When the charging case opens, the earbuds power on.

2. Pairing and connection

① Earbuds are ready to pair right out of the charging case.
Note: If the pairing fails, please check whether the earbuds are fully charged and repeat the operation above.

② Open the Bluetooth menu on your device. In the list of discovered Bluetooth devices, tap or click your Vention E06.
Note: For the first-time pairing, please keep the pairing range within 1m. After the pairing is successful, the earbud automatically powers off when placed back in the case, and you can use either earbud independently.

3. Power off

a. Auto power off
The earbuds will automatically power off after 5 minutes of not being connected.

b. When the earbuds are not paired with the phone due to the long distance, it will automatically power off if it is not connected for more than 5 minutes.

•Manual power off

a. Earbuds automatically power off when placed back in the charging case with the lid closed.

b. When it is connected and not playing any content, press and hold the multi-function button for 5 seconds to power off (left or right).

4. Music mode:

Play/Pause: Tap the multi-function button twice quickly (left or right)

Skip backward: Press and hold the multi-function button on the left earbud for 2 seconds

5. Phone mode:

Skip forward: Press and hold the multi-function button on the right earbud for 2 seconds

Decrease the volume: Tap the multi-function button (left)

Increase the volume: Tap the multi-function button (right)

Decline the call: Press and hold the multi-function button for 2 seconds(left or right)

Answer a call: Tap the multi-function button twice quickly(left or right)

End a call: Tap the multi-function button twice quickly (left or right)

6. Using the voice assist function

When the phone is on standby or playing music, tap the multi-function button 3 times (right) to activate your voice assistant. Tap the multi-function button 3 times (right) to stop the mobile device voice control.

7. Clear the Earbuds device list

When the earbuds are powered on (and the device's Bluetooth function is turned off), tap the multi-function button 4 times to clear the Bluetooth devices list.

8. Charging case status light

Status	Color	Indication
While charging the charging case	White	The indicator on the charging case repeatedly flashes in white. The indicator lights up in white after charging is complete.
While charging the earbuds	Green	The indicator lights up in green.
When the remaining battery charge is low (charging case)	Green	When you set the earbuds into the charging case, if the remaining battery charge of the charging case is 30% or lower, the indicator on the charging case flashes in green and then turns off.

Important safety instructions

Please read all instructions and warnings before using this product. Inappropriate use will cause damage to the product or personal safety.

1. Do not expose products containing batteries to excessive heat (e.g., from storage in direct sunlight, fire, or the like) do not store this product in high temperature, strong light, and strong magnetic field environment, do not place it in other harsh environments such as fire sources. If your earbuds ever go into the water, please dry it naturally before using.

2. Improper use of the product can easily cause product damage or may endanger personal and property safety.

3. If consumers violate the product instructions and use them improperly, the company will not bear any consequences or legal liability for personal and property damage.

4. Non-professionals are strictly forbidden to disassemble this product.

5. Use this product only with an agency-approved power supply that meets local regulatory requirements.

Declaration on toxic or hazardous substances and elements contained in electronic products

Parts name	Toxic or Hazardous Substance or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBs	X	O	O	O	O	O
Conform Parts	X	O	O	O	O	O
Chipsets	X	O	O	O	O	O
Charging Cables	O	O	O	O	O	O
Casing	O	O	O	O	O	O

This table is prepared in accordance with the provisions of EU T106.

O indicates that this toxic or hazardous substance is contained in all of the homogeneous materials for this part to below the limit requirement of GB/T 26572.

X indicates that this toxic or hazardous substance is contained in at least one of the homogeneous materials used for this part to above the limit requirement of GB/T 26572.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE 3: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Contents

折叠尺寸：70x90mm 展开尺寸：90x350mm
材质：157g哑粉纸 风琴折 双面印刷
蓝色印刷：C100 M:0 Y:0 K:0 参考：Pantone Process Cyan C

宁波福茂通讯科技有限公司 NINGBO FULMAN COMMUNICATION TECHNOLOGY CO.,LTD					
品名 PART NAME	NBK系列蓝牙耳机包装说明书			型号 PART MODEL	VWS-E37
设计 DESIGNER	Melissa	单位 UNIT	mm	客户代码 Client NO.	
校对 CHECK		版本 REV	A0	图号 DWG.NO.	
核准 APPR.		PAGE 页数	1/1	更新 UPDATE	2023/09/26