


## ▼04 PRODUCT APPEARANCE

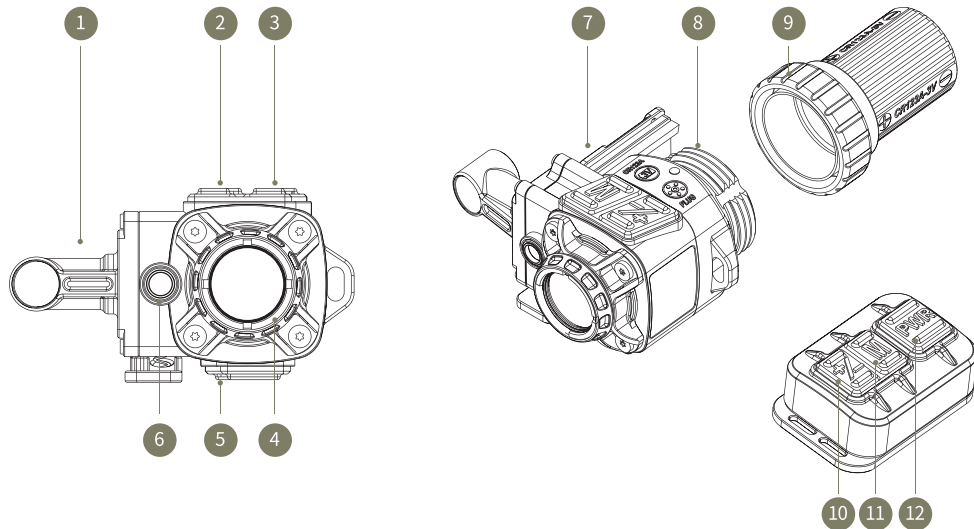


## ▼04 PRODUCT APPEARANCE

### NOTE

All images used in this instruction manual are for illustrative purpose only.

|   |                  |    |                                 |
|---|------------------|----|---------------------------------|
| 1 | Eyepiece         | 7  | Mounting bracket interface      |
| 2 | Button (M)       | 8  | Battery interface               |
| 3 | Button ( $\pm$ ) | 9  | CR123A battery cover            |
| 4 | Objective lens   | 10 | Remote control button ( $\pm$ ) |
| 5 | Button (PWR)     | 11 | Remote control button (M)       |
| 6 | Sensor Window    | 12 | Remote control button (PWR)     |


## ▼05 INSTALLATION AND CONTROLS

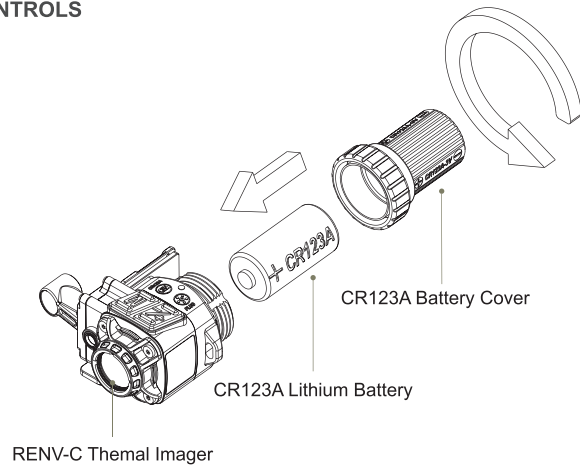

As shown in Figure,install CR123A battery (3V) into the device then rotate and tighten the battery cover.


**Attention:** Incorrect installation method may cause damage to the equipment.

## ▼05 INSTALLATION AND CONTROLS

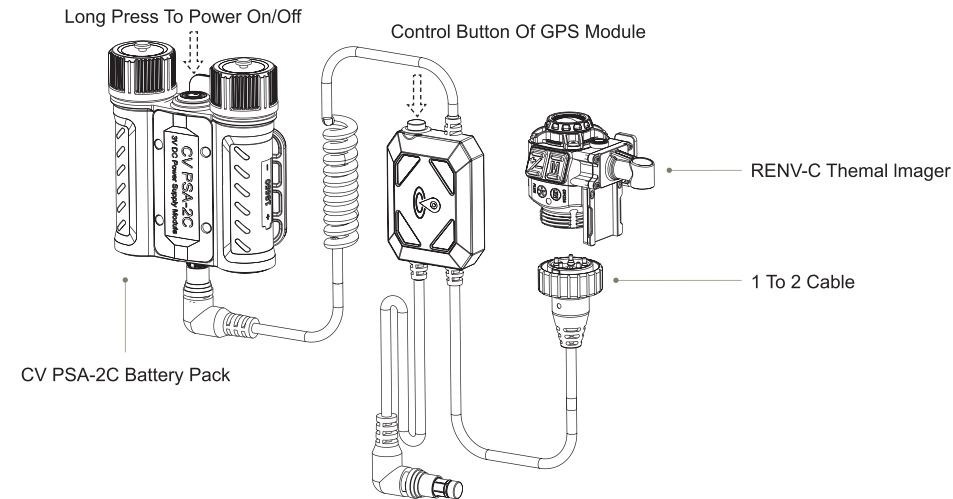


As shown in Figure,install the battery pack and cables.

## ▼05 INSTALLATION AND CONTROLS

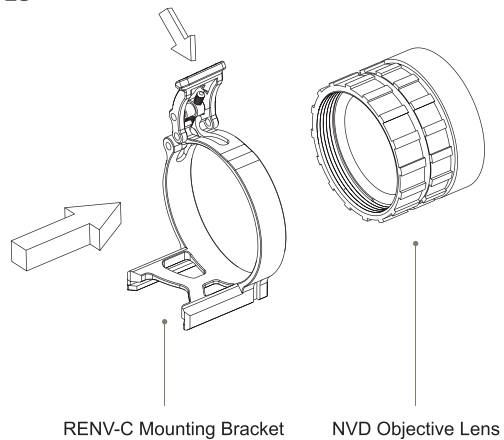

As shown in Figure, insert the mounting bracket onto the Objective Lens, rotate and adjust the tightness of the buckle, then press the buckle to complete the installation.

## ▼05 INSTALLATION AND CONTROLS

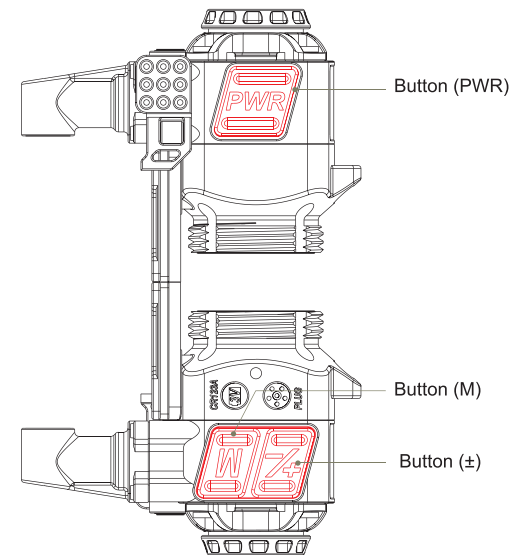


●Please operate the device as shown in the figure.

## ▼05 INSTALLATION AND CONTROLS

| Button                                                                            | Current Status | Short Press                             | Long Press                                             |
|-----------------------------------------------------------------------------------|----------------|-----------------------------------------|--------------------------------------------------------|
|  | Power off      | --                                      | Power on                                               |
|                                                                                   | Home screen    | Shutter correction<br>( Custom Button ) | Power off                                              |
|                                                                                   | Menu interface |                                         |                                                        |
|  | Home screen    | Image modes( Highlight / Outline )      | Enter menu                                             |
|                                                                                   | Menu interface | Scroll down options                     | Exit menu                                              |
|  | Home screen    | Quick adjustment                        | Adjust switching<br>(Brightness, threshold, frequency) |
|                                                                                   | Menu interface | Adjust parameter                        | --                                                     |

## ▼05 INSTALLATION AND CONTROLS

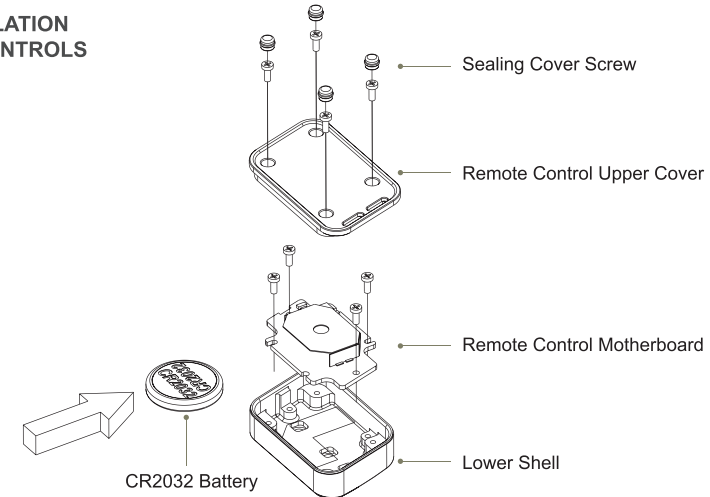


As shown in Figure,remove the 4x Sealing Cover, 4x Screw, and Upper Cover in sequence, remove the motherboard, and then install the CR2032 battery,and install them back in order.

## ▼05 INSTALLATION AND CONTROLS


Click the PWR key to start when in use.

- The remote control has completed function pairing before leaving the factory.
- If there is no response after installing the battery, please turn on the host and remote control, and follow the following steps to pair the remote control buttons:

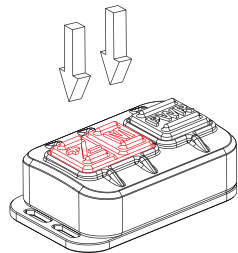

1. Click the PWR button to start (flashing red light).
2. Press and hold the button (M) and the button ( $\pm$ ) simultaneously for 6 seconds (green and red lights flashing).
3. The green light remains on, indicating that the remote control has paired with the nearest host.

## ▼06 STATUS BAR

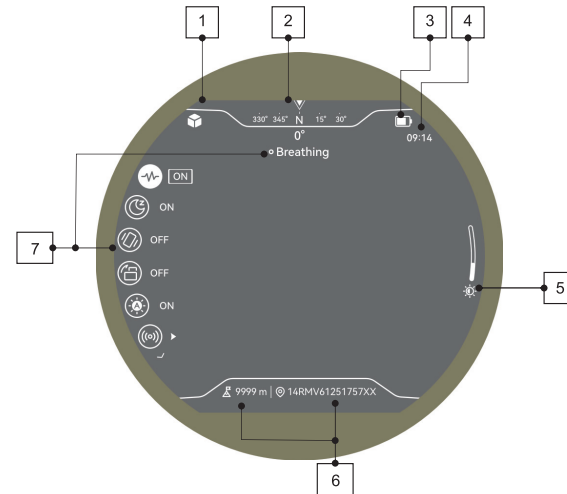

The status bars at the top, sides, and bottom of the screen show information on the operating status of the RENV-C.