

 
GPS SMART WATCH

User Manual



V1.0
DM58 PRO

1.Product Introduction&buttons Instructions

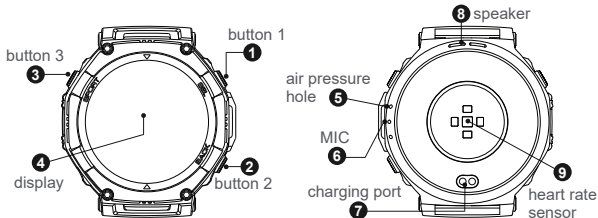


1、 Power button; 2、 Return key/shortcut key; 3、 Sports button;

2.Touch Screen Operation Instructions

 On the watch face interface, press and hold the watch face for 2-3 seconds to switch watch faces. Swipe left or right to switch watch faces, and click to select a watch face.

 - ◆ Swipe down: Swipe down on the watch face interface to open the status bar
- ▲ Swipe up: Swipe up on the watch face interface to access the card shortcut function
- ◀ Swipe left: Swipe left on the watch face interface to enter the main menu interface
- ➡ Swipe right: Swipe right on the watch face interface to enter the notification information interface.

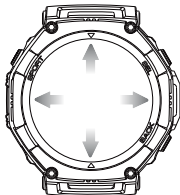

3.APP Connection

Scan the watch QR code or go to major application markets to download and install the "GloryFitPro" APP. When you open the APP for the first time, a permission pop-up window will pop up. Please click "Allow" to ensure that the APP can obtain the corresponding permissions.

During the connection process, a pop-up window will pop up to confirm the pairing connection with the watch and mobile phone. Please click to confirm the pairing. After the connection is successful, the call icon and data connection icon in the watch status bar will turn green. In gray, it is not connected.

 


Scan Watch
QR Code



4. Offline Geomorphic Map Download

In the "Devices" of the GloryFitPro APP, find the "Geomorphic Map" and select a map radius range between 2-20 kilometers to transfer to Device. Once transferred, when on a workout interface with a successful GPS Connected, swipe right to view the Geomorphic Map along with the route generated during your activity. Press any button to return to the workout interface .

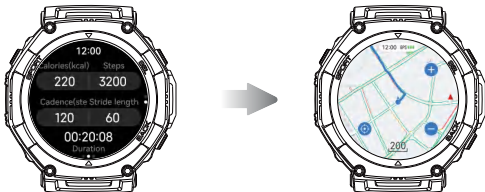

5.Unbinding APP

IOS: Find "Unbind" in the "Device" interface of the APP and click on it to enter the "Settings-Bluetooth" interface of the mobile phone system. Click on the "i" on the right of the device and select "Forget this device" to unbind it from the mobile phone system. Make sure it is no longer connected to the mobile phone, otherwise it will not be able to connect again next time.

Android: Find "Unbind" in the "Device" interface of the APP and click on it to disconnect from the mobile phone

6.FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.