

25/28 Tubular Motor and Finished Product

Instruction Manual



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Product Introduction

Motor Head

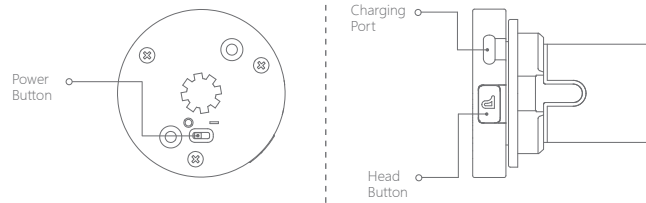

Remote

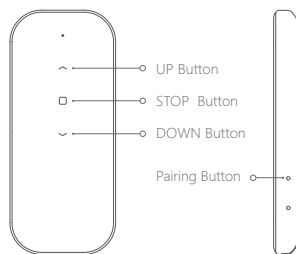

Technical Data


Power:	Refer to the nameplate for details
Frequency:	433.92MHz
Receiver Sensitivity:	-112dBm
IP Grade:	IP20
Working Temperature:	-20°C ~ +60°C

Operation Instruction

Factory default setting is OFF. Please enter setting mode after turning it on and complete each operation within 10s.

Power ON/OFF

Power ON: The motor can perform basic functional operations.

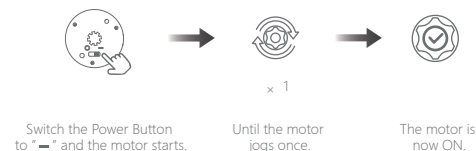


Power OFF: The motor can't perform any operation.




Pairing


① Button Pairing

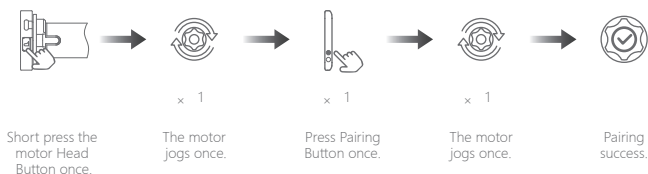

② Copy Pairing

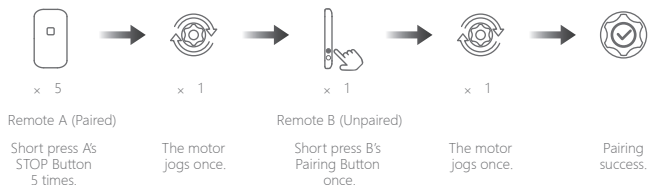


Change Direction

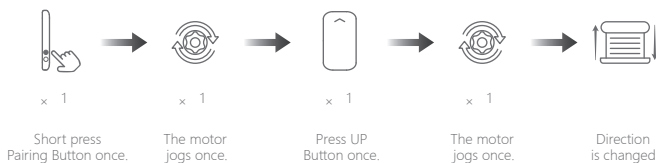


Set the First and Second Limits

Before the limit position is set, the motor is in the jogging state. When the first and second limit positions are set, the motor turns to the interlocking state. After the limit has been set, short press UP/DOWN Button, and the motor will run up/down continuously.

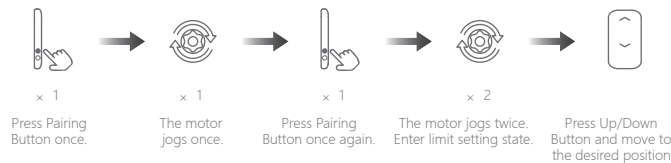


Set the Third Limit

The third limit can only be set after the first and second limits are completed. After the third limit has been set, long press STOP Button to run to the limit.

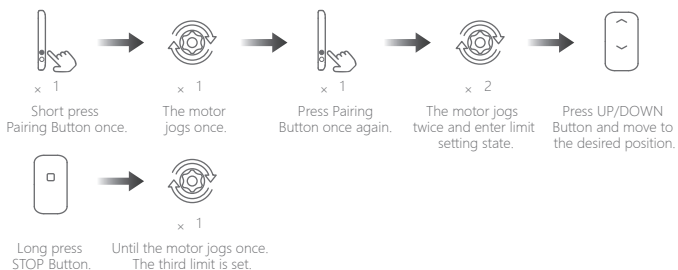


Delete All Limits

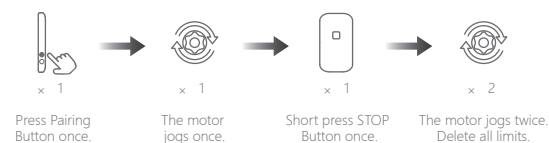


Adjust Speed

The speed of motor is adjustable, which can switch among three levels. The initial factory setting defaults to maximum.

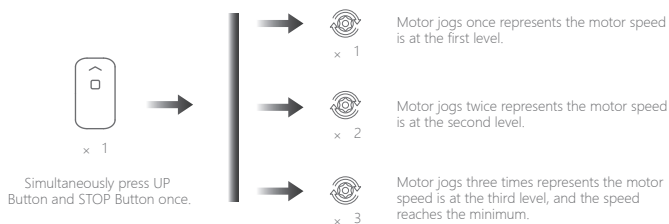

Delete the Current Operating Remote/Channel

For multi-channel remotes, delete the channel of the current operating remote.

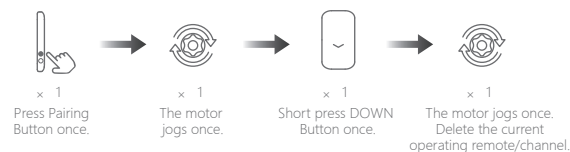


Restore Factory Settings

Note: All remotes and original limits are removed

Option A



Option B

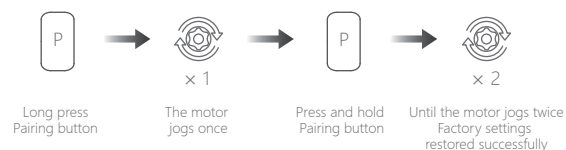


Charge Reminder

Reminder of electricity loss, charging and discharging.

When the motor is running, the red indicator light at the motor head flashes indicates that the motor is under charge. Please charge it in time.

Charging ports: TYPC "P".

When it is charging, the red indicator light "P" is normally on; After it is full, the blue indicator light "P" is normally on.

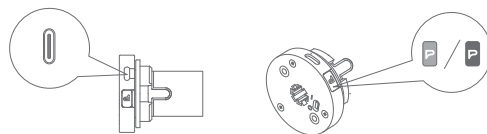


Attention


- 1) Improper installation may result in serious personal injury. Please strictly follow all instructions.
- 2) Please place the motor and remotes out of the reach of children to avoid accidents caused by improper operations.
- 3) Before installing the motor, please make sure to remove all extraneous power cables.
- 4) During the setting process, it may fail because of signal interference. Please reset once.
- 5) The remote button time should keep short, otherwise it will affect the battery life; The button time should be about 0.5s, and the interval remote between each button is about 1s. When the battery power is too low, the transmitter does not work. The battery needs to be replaced.
- 6) Please operate strictly in accordance with the motor function manual. If there are any unfinished matters, please contact with our company.

Installation Method

Step 1: Install the motor as shown in the diagram:

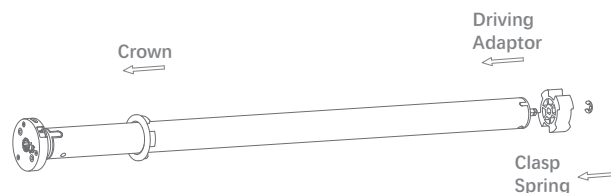

Step 2: After wrapping the blind, please fix the bracket as shown in the diagram:

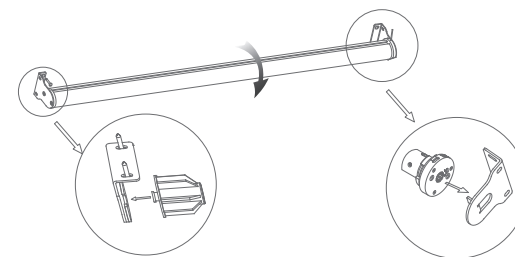

Simplified EU Declaration Of Conformity

- 1) The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:
Hereby, Zhejiang General Light Curtain Co., Ltd declares that the radio equipment type tubular motor is in compliance with Directive 2014/53/EU.
- 2) The full text of the EU declaration of conformity is available at the following internet address:
<https://www.poyaltech.com/eu-declaration-of-conformity>

Importer Company Name: XXXXXX
Importer Company Address: XXXXXXXXXXXX
Manufacturer Company Name: Zhejiang General Light Curtain Co.,LTD.
Manufacturer Company Address: Xin Tang Tou Village, Xin Jie Town, Xiao Shan District, Hang Zhou City, Zhe Jiang Province, China

Warranty Card

User Name	
Contact Number	
Postal Address	
Product Name	
Model	
Purchase Date	

The following situations are out of free warranty:

1. Faults and damages caused by human factors, including failure to use according to the instructions or caused by the environment not in accordance with the instructions.
2. Without the authorization, the user is not allowed to disassemble the motor. Otherwise it will not be covered by the warranty.
3. Damage caused by other force majeure (such as flood, lightning strike, earthquake).
4. Failure to show valid shopping vouchers and warranty card, etc.
5. Products that do not belong to our company (such as counterfeit products).
6. Normal use, wear, tear and dipping.