

尺寸: 70*95mm
材质: 80g书写纸
双面印刷
骑马钉

封底

封面

MINISO

PRODUCT MANUAL

Wireless Earbud X30

Creating sound to live with

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 How to wear headphones correctly

02 Product Introduction

03 Touch Operation

04 Item list

05 Warranty Statement

5

9

12

30

32

Welcome to MINISO Wireless Earphones

How to wear headphones correctly

Left

Right

1

Take out and pair it

When using it for the first time, take out both the left and right earphones at the same time. When the white and red lights of the earphones flash alternately, the earphones will enter automatic pairing mode.

4

5

2

3

6

7

Product Description

Bluetooth LED Display light

Multi function key touch position

Charging Contacts

4

Specification of Product

Model of Product: X30

Version: V5.4

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 16\text{mm}$

Impedance: 32 Ω

Frequency Response: 20Hz-20KHz

Microphone Sensitivity: -42dB $\pm$ 3dB

Earphone Input: 5V $\leq$ 50mA

Charging Case Input: 5V $\leq$ 400mA

Charging Case Battery Capacity: 400mAh

Duration: Approx. 6H (Earphone)

Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 2 H

Type-c Interface

Charging Indicator

TF card

On/Off button

10

11

Touch Operation

Indicator Light Description

Connect with Bluetooth device

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-X30". Click the pairing name to pair.

12

When the headset is turned on: the white light and the ice blue light flash alternately

When the headset is turned off: the white light flashes 3 times quickly and then goes out

Pairing status: white light and ice blue light flash alternately

Connection successful: no light

Headphone charging: The charging case indicator light is always white, and the white indicator light for the headphones is always on. After the earphones are fully charged, they turn off, and the charging case indicator light also goes off.

Charging of the charging case: The charging case indicator light flashes slowly. After the charging case is fully charged, the red indicator light on the charging case remains on.

13

Once Press

Power On

Automatic power on: The earphones are in the charging case, open the charging case cover, the Earphone will be powered on, with the prompt sound of "Du".

Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

Power Off

Auto power off: Put the Earphone in the charging case, close the charging case cover, the Earphone will be powered off, with the prompt sound of "Du".

Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

14

15

Double Press

Long Press

Music mode

Double press the right ear: Volume up

Double press the left ear: Volume decreases

16

Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant.

Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

17

Triple Press

Clear Bluetooth pairing history

When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

18

19

Switch between game mode and music mode (Binaural operation)

Icon Introduction

Game mode

Press and hold the multi-function button on the right ear for 2 seconds

Music mode

Press and hold again for 2 seconds

20

21

Battery status

Phone Music interface

Charging status indicator icon for the charging compartment

Green: Charging in progress

Blue: fully charged

Red: Low battery

White: Normal battery level, not charging

Headphone charging status indicator icon

Green: The earphones are charging in the charging compartment

Blue: fully charged

White: The headphones are not charging

22

23

Spatial sound interface

Alarm clock interface

Move Mode

Music mode

Game Mode

24

Equalizer interface

Switch between different EQ sound effects: Standard, Rock, Pop, Classic, Jazz

25

Language Switch interface

Find My Earphone interface

Click to switch languages from different countries

26

27

Like interface

Photograph interface

Like

28

29

Item list

FCC ID: 2A83K-X30

Headphones *1

Instruction *1

Charging cable *1

230

31

Warranty statement

MINISO product warranty card

Product number

SN number

Purchase date

User info

name

telephone

address

Invoice number

Sales unit information

name

address

telephone

32

33

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;

2. Altering of the warranty cards and product code do not match the product itself;

3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;

4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;

5. Zippers and tower buckles are damaged due to excessive force;

6. Off-line or tear caused by overloading;

7. Any damage caused by sharp objects;

8. Products with signs of burn damage or water logging;

9. Damage caused by unauthorized dismantling and modification;

10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product;

11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

Service supervision hotline: 400-812-0102

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: 70hifi-earphone.com

34

35

Guidelines for safe and effective use

Important safety tips

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

① Electromagnetic interference: Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions. Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system. ② Safety matters: Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury. Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

③ Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product. ④ This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type, battery usage. ⑤ After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage. ⑥ During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lag, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference. ⑦ When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery to be damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

36

37

Enjoy the company of MINISO

Copyright©2024 MINISO Group affiliated companies and its licensors. All rights reserved

38