

10.1" Wi-Fi Touch Digital Calendar

User Manual (2025)



(The functions of our digital alarm clocks are all pretty much the same. This manual is a general version and the pictures in the manual may not match the machine you purchased, but the manual does not affect your use.)


Open digital calendar:

1. Remove the Wifi Digital Calendar and adaptor from the package.
2. Plug the input connector of the Adaptor into the DC 5V2A hole on the side of the device.
3. The Wifi digital calendar will automatically turn on within 3 seconds after turning on the power.

Start using:

1. Swipe your finger left/right on the screen to switch between favorite interfaces.
2. For the color-impaired, you can change the font color by swiping up or down on some screens.

Icon Introduction:

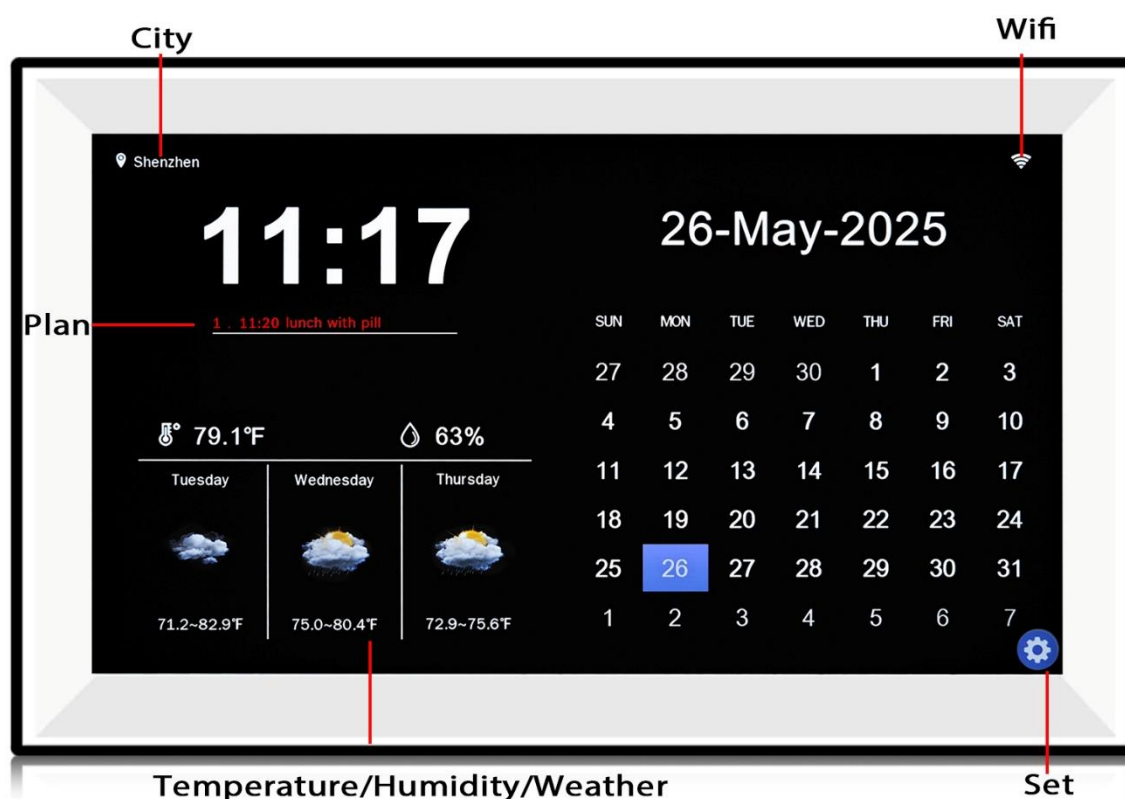

Step1: Set the language: Click on "set" in the bottom right corner of the screen, Click on language to enter language selection.

Step2: Wifi Set: Click the Wifi icon in the upper right corner to enter the Wifi settings. Search for your Wifi name, click on it and enter the password. It will take about 10 seconds to connect once it's done. Click the top left corner to return to the main interface. (According to the current most secure and commonly used security mode WPA2-PSK, WiFi requires a minimum of 8 bits.)

Step3: City Selection: Click the City icon in the upper left corner to enter the City settings. Enter your city name, click search, select the correct city from among them, and return to the main interface after selecting the correct one. (Support fuzzy search, you can input only the first 3 to 4 letters of the city word) (If not displayed, it may be necessary to enter a higher-level city. The city needs to be on Google servers.)

After the WiFi and city settings are OK, the time/date/temperature/humidity/climate will automatically synchronize with the local network. (If there is no update, check to see if Auto date/time updating is turned on. please make sure the Wifi signal is working and the city is correct.)

Click the Settings icon in the lower right corner to set: Time Format / Date Format / Units / Sound / Hibernate / Auto Brightness, and so on.

Alarm Set:(Up to 64 groups.)

Click the Settings icon in the lower right corner, click the Alarm Set column, click the plus sign in the upper right corner to enter the alarm settings: Alarm Label/Alarm Time/Repeat Wek/Alarm Duration.

(This feature is suitable for reminding you of tasks that need to be reminded at fixed times every week.)

Delete alarm clock: click the Settings icon in the lower right corner, click the Alarm Set

column, you can see the alarm clock that has been coordinated, click the Edit icon, click Delete.

Plan Set:(Up to 64 groups.)

Click the Settings icon in the lower right corner, click the Plan Set column, and click the plus sign in the upper right corner to enter Plan Set:Plan label/Start Time/End Time/Repeat Mode/Ring Duration/Plan Reminder.

The set plan for the day will be displayed on the main screen. Plans for other days need to be in the Calendar screen

Delete Plan: click the Settings icon in the lower right corner, click the Plan Set column, you can see the plan that has been coordinated, click the Edit icon, click Delete.

Auto Dimming: When Auto is selected, the screen will automatically dim at 20 o'clock and brighten between 7 o'clock.

Sleep: Set to make the screen go off during rest time. Please note, such as do not unplug the power. If the Sleep time is not up and you need to wake up the screen, please press the power button on the back of the machine.

CAUTION:

To Reduce The Risk Of Electric Shock, Do Not Remove The Cover(Or Back).No User-Serviceable Parts, Refer To Qualified User Personnel.

**Thank you for choosing our products. If you encounter any problems during the use, please contact our service team: abao@xinxiangoptical.com
Have a nice day!**

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.