 


Emergency Radio

DF-580

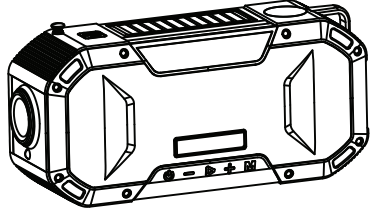

Instruction

This contains usage and important cautions, please read carefully and keep it.

Operation Guide

1

Power button/long press for 3s to switch it on. [Press silence button to switch to radio mode.]

2

Mus ic mode: long press to turn volume down, and quick press to switch to previous song. Radio mode: long press to turn volume down, and quick press to switch to previous channel.

3

Mus ic mode: quick press to pause or play, and long press for 3s to disconnect Bluetooth. Radio mode: long press to search for channel automatically, quick press to switch to next channel.

4

Mus ic mode: long press to turn volume up, and quick press to switch to next song. Radio mode: long press to turn volume up, and quick press to switch to next channel.

5

Switch mode/Bluetooth/FM/AM

6

SOS button

7

Radio mode: channel indicator/volume indicator while adjusting volume Bluetooth mode: Bluetooth indicator/ volume indicator while adjusting volume TF mode: indicator of the number of playing song

8

Battery indicator: red light is on while charging.

9

Percentage of battery: 99% is full charge

10

Mode indicator: BT/FM/AM/TF

11

Torch button

Operation Guide

1

7

8

9

10

11

1

2

3

4

5

6

1

2

Reset usage

When the product crashes or is needed, insert a card pin into this hole, and it can restart without power supply.

SOS usage

1. SOS button is at the bottom

2. When using this function, please press the SOS button, the device will start the alarm and ask the surrounding people for help.

3. To turn off the SOS function, short press again.

Bluetooth speaker usage

1.Once device is switched on, the Bluetooth mode is on. To switch from other modes to Bluetooth mode, please quick press button "M"

2. Open Bluetooth function of phone, and find DF-580 to connect.

Radio Usage:

1.Pull out antenna in FM mode.

2.Quick press button "M" to switch to FM or AM mode. (Current mode could be found at)

3.Long press play button for 3s to search for channels automatically. The device will save all the accessible channels, and do not have to do so manually. (When the device is searching for channels, you cannot switch channels by pressing button . Please be patient and wait for automatic search to finish.)

4.After the device finishing automatic search and saving channels, quick press play button to switch to next channel.

5.When next time use FM or AM function, do not need to search for channels again. Quick press play button and saved channels could be selected and listened to.

Volume adjustment :

1.When turn volume down, please long press for 3s.

2.When turn volume up, please long press for 3s.

Package contains

DF-580

1

Type-C Charging Cable

1

Instruction

 
1

Carabiner

1

Crank charging usage:

Crank charging function is prepared for charging the device, and it is only recommended in emergency. Caution: Please switch off the device when using crank charging.

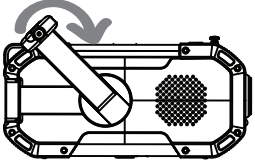

Please pull out the crank as the picture and rotate it clockwise. After 3-5 minutes, and inner battery is active and ready to function. When charge device with crank, the red light of battery indicator will be on, and crank will produce energy at the speed of 130-150 rmp/min. After 30 minutes, inner battery will contain 300 MAH battery.

Solar power charging usage

Turn the solar panel of device towards sun directly. When charging, the red light of battery indicator will be on. This function is only recommended for torch, radio, and SOS because of its low efficiency. It is mainly used to extend battery life and face emergency. Caution: Please switch off the device when using solar power charging.

Specification :

Model

DF-580

Weight

410G

Size

166*52*78MM

FM

87.5---108MHZ

AM

522---1620KHZ

Power

7W

Play Mode

BT/FM/AM/TF

Waterproof Level

IPX5

Charging Time

3.5H

Charging Input

5V-2A

Battery

5000MAH

Caution:

There is no substitutable accessories for this product and replacing accessories will lead to invalidation of warranty. Please do not replace battery because it is inner battery. Avoid using device under humid or corrosive circumstance.

*RF warning for Mobile device: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Warranty Certificate

Product

DF-580

Warranty Duration

12 Months

1.The warranty will go into effect since purchasing day, based on the date written on purchase certificate.

2.The warranty should only be applied under normal circumstance. If there is malfunction caused by poor quality of this product, instead of man-made damage, warranty service should be applied with purchase certificate and warranty card.

3.The warranty would not apply to the following situations: (1).The service expiration date is exceeded. (2).The damage is caused when not following the instruction (3).People, unauthorized by our company, caused damage by changing, modifying, and disassembling the device (4).Use the device under harsh conditions, such as smoky, hyperthermal, and harmful situations 4.Our company reserves the final interpretation right of this warranty.

FCC Warning Statement

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

英文板

蓝牙收音机

DF-580

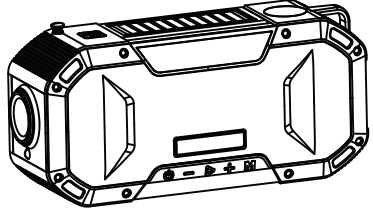

使用说明书

说明书有产品使用方法和重要注意事项 请仔细查看并保管

功能操作

1

开关机键/长按3S开机机【收音模式为静音键】

2

音乐模式：长按减小音量，短按上一曲收音模式：长按减小音量，短按减一个频率

3

音乐模式：短按暂停/播放，长按3S断开蓝牙收音模式：长按自动搜台，短按切换下一个台

4

音乐模式：长按加大音量，短按下一曲收音模式：长按加大音量，短按加一个频率

5

模式切换键/蓝牙/FM/AM

6

SOS一键启动按键

7

收音模式：显示频率/按下音量键显示音量蓝牙模式：显示bLUe/按下音量键显示音量TF模式：显示歌曲第几首

8

电池符号：充电时红灯亮

9

电量显示:99电量为满电

10

模式状态显示：BT/FM/AM/TF

11

电筒按键

功能介绍

1

7

8

9

10

11

1

2

3

4

5

6

1

2

复位孔使用方法：

在产品死机或需要的时候，用卡针插入此孔，能够在不断电的情况下，使其重新启动。

SOS使用方法：

1. SOS按键位于设备底部

2. 如果需要使用此功能，请按下SOS键，设备便会发出警报的响声，以向周边的人发出求救信号。

3. 如果需要关闭SOS，请再次短按SOS键。

蓝牙音箱使用方法：

1.设备一开机就会处于BT模式，如果在其他模式下想要切换到BT模式，请短按M键 切换到BT模式 可以在 处看所在的模式）

2.打手机蓝牙功能，找到:DF-580并连接即可

收音机使用方法：

1.FM模式拉出天线

2.然后短按M键 切换到FM或AM模式（可以在 处看所在的模式）。

3.长按播放键 3秒钟开始自动搜索频道，设备会自动保存所有有信号的电台，无需进行手动存台。（自动搜索电台期间，按键 是无法进行切换电台的，请耐心等待自动搜索程序全部完成。）

4.自动搜索存台后，短按播放键 可切换到下一个电台。

5.在下一大使用FM或AM功能时，无需再次自动搜索频道，短按播放键，便可选择收听保存下来的电台

音量调节方法：

1. 如果想要降低音量，请长按 "-" 键3秒

2. 如果想要增加音量，请长按 "+" 键3秒

包装清单

DF-580主机

1台

typec充电线

1条

说明书

 
1本

登山扣/绳

1个/条

手柄发电功能：

手柄发电充电功能，为备用充电的功能，仅建议在紧急状态下使用 注：手柄发电时，请关机操作

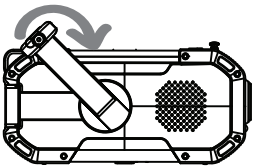

请按上图示意拿出发电手柄，顺时针摇动，转动3-5分钟，激活内部电池，开始使用。充电时显示屏电池符号会亮红灯，以130-150RMP/MIN转动手柄产生动力，转动30分钟，内部电池有300MAH的电量。

太阳能发电功能：

把设备的太阳能板向着太阳光直晒。充电时显示屏电池符号会亮红灯。太阳能充电功能仅建议给电筒、收音机和SOS使用，因为充电的效率较低。此功能主要用于延长电池的寿命和紧急状态下使用。 注：太阳能充电时，请关机操作

规格表：

型号

DF-580

产品重量

410G

产品尺寸

166*52*78MM

FM

87.5---108MHZ

AM

522---1620KHZ

功率

7W

播放模式

BT/FM/AM/TF

防水等级

IPX5

充电时长

3.5H

充电输入

5V-2A

电池容量

5000MAH

注意事项：

本产品不含任何可替换的零件，如私自替换会使保修无效。请不要尝试更换电池产品，因为电池是内置电池，不能更换，避免在潮湿或腐蚀性的环境中使用。

产品三包凭证回执

产品

DF-580

保修承诺

主机12个月保修

一， 我司的DF-580系列产品的三包服务期限自购买之日起生效日期以购机凭证填写的日期为准。

二， 三包服务只限于在正常使用情况下，由于产品本身质量引起的非人为损坏故障，可凭购机凭证与保修卡享受三包服务

三， 以下情况不在三包服务范围内： 1. 超过三包服务的有效期 2. 未按使用说明操作引发的损坏 3. 经非我司授权服务人员修理，改动，改装，拆卸损坏 4. 在恶化的条件下使用【如油烟，高温，有害液体】下使用

四， 该产品实行全国联保，本三包凭证所有内容最终解释权归我司所有

中文板

DF-580 说明书 尺寸:60*100mm 80g双胶纸