

T&G WIRELESS TG-469 USER MANUAL	Product specifications: -Wireless: V6.0 Support: L2CAP/A2DP/AVRCP, can receive AUDIO signal and control the AUDIO device. Support HSP/HFP(Handsfree profile), with HANDS-FREE functions. -Working distance:10M -SNR:≥90db -Battery: 7.4V about 2400mAh -Normal volume playing time: about 3 hours with LED light off -Speaker driver: 66mm*2 -Speaker Power: 4Ω/15W*2 -Frequency response:120Hz-20KHz -Unit size: 264*89*166mm -Unit weight: about 1209 g (not includ accessories) -Charging:5V/2A -Charging time:about 3H Product Feature: 1.International advanced wireless chip and circuit design techniques, support wireless devices. 2.With FM function, can search radio station broadcast automatically 3.With Hi-Fi speaker, to make sure the clear and bright sound. 4.Support Micro SD card and USB card, play MP3 format audio. 5.The wireless working distance is 10	meters. 6.With AUX line in, can directly connect the outside devices, for example, tablet PC/TV/cell phones. 7.It will close automatically after 30 mins if disconnect Wireless . 8.A variety of flashing LED lights with different colors, color lights flash follow the melody. 9.Support TWS. 10.Support outdoor EQ audio modes. Key and slot function: 10 8 5 9 6 7 1.DC 5V slot: Use the standard USB TYPE-C charging cable for power charging. 2.TF slot: It can decode and play MP3 format audio when put TF card into	the slot. 3.USB slot: It can decode and play MP3 format audio when put the USB card into the slot. 4.AUX line in slot: Use the Mini 3.5 head input through outside devices. 5.Power switch: Press long for power on /power off. IWhen play music,(USB card/TF card/ line in/Wireless), short press for “play/pause”. -In FM mode, press short to search station automatically, press again to stop searching. -Under wireless mode with mobile paired, when call coming, press short to answer a call hands-free, press again to hand up, press twice to ring up a call. 6.When play music, Press short for last song, long press to turn down the volume. 7.When play music, press short for next song, long press to turn up the volume. 8.LED switch: press short for option of the LED flashing light, press long to close LED light, then press short for open the LED light . 9.When play music, short press to switch model (USB card/TF card/ Wireless/line in/FM) ; When connecting to a mobile phone, double-click the M key to disconnect the phone. TWS:Keep the two speaker under Wireless mode without pairing, press the “M” key for 2-3 seconds either of the speaker until hear a hint , now it is TWS mode ,then can paire the mobile. Disconnect the wireless connection and then long press the M button to cancel the TWS function. 10.Outdoor EQ key: short press it to switch to audio mode when playing audio. NOTE: -In the FM mode, put in r AUX cable to increase the FM radio signal ; the LED flashling light will close auto when switch to FM model. -If this speaker crash during use, you can press and hold the power button for 8 seconds to reset and shut down. -USB (32Gmax) /TF card (32Gmax) pls use FAT32 format. -LINE IN /TF card / U disk used separately.
Warning Statement This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.			