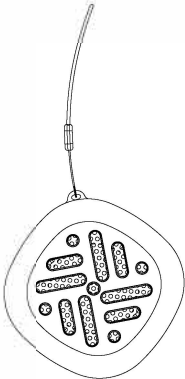
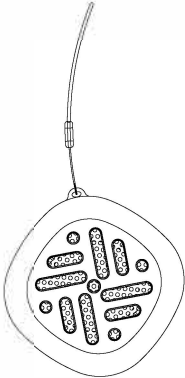


尺寸：50*100mm, 正反印刷，材料：70g双胶

T&G WIRELESS TG-474 使用说明书 	基本参数: -无线规格：BT EDR V6.0 支持无线协议： 支持L2CAP/A2DP/AVRCP，用来接收立体声音频信号，通过协议可以控制音频发射端的上下曲操作； 支持HSP/HFP(Handsfree profile)，具有免提功能，可以进行语音通讯； -无线传输范围：10M -音频性噪比：≥90db -电池容量：1000mAh -内置电压：3.7V -正常音量播放：4H左右（因音频内容和音量而异） -喇叭规格：Φ40mm*1 -喇叭功率：5W * 1 -频率响应：120Hz-20KHz -尺寸：64x64x54.7mm -单机重量：109.1g -充电电压：5V/0.5A -充电时长：约2.5H 功能特点 1、采用先进的无线音频解码芯片，	支持无线设备连接。 2、音色柔和清晰有动感，各层次分明。 3、无线接收距离远可长达10米。 4、无线模式无连接，半小时关机。 5、支持TWS功能。 功能指示 1.⌂ DC5V充电接口，(type-c 充电接口) 2.⌂ 电源开关：长按时为开机状态，再长按时为关机状态。 -在音乐模式下短按为播放/暂停。 -在无线模式并配对手机情况下，有电话接入时短按一下为免提接听，再短按一下为挂断电话，双击为重拨电话。 TWS: 两台音箱同时在开机无线状态,且都没有连接手机，双击其中一台音箱，2-3S后听到提示音即连TWS成功，再连接手机即可；断开无线连接后再双击可取消TWS功能。 -连接上手机时三击可断开手机连	接。 备注： 使用中遇到死机现象可长按开机键8秒后会自动关机
--	--	--	---

T&G WIRELESS TG-474 USER MANUAL 	Product Specifications: -Wireless: BT EDR V6.0 Support: L2CAP/A2DP/AVRCP, can receive AUDIO signal and control the AUDIO device. Support HSP/HFP(Handsfree profile), with HANDS-FREE functions. -Working distance:10M -SNR:≥90db -Battery: 3.7V about 1000mAh -Normal volume playing time: about 4 hours -Speaker driver: Φ40mm*1 -Speaker Power: 5W*1 -Frequency response:120Hz-20KHz -Unit size: 64*64*54.7mm -Unit weight: about 109.1 g (not includ accessories) -Charging:5V/0.5A -Charging time:about 2.5H Product Feature: 1.International advanced wireless chip and circuit design techniques, support wireless devices. 2.With Hi-Fi speaker, to make sure the clear and bright sound. 3.The wireless working distance is 10	eters. 4.It will close automatically after 30 mins if disconnect Wireless . 5.Support TWS. Key and slot function: 1.⌂ DC 5V slot: Use the standard TYPE-C charging cable for power charging. 2.⌂ Power switch(Multifunction key): Press long for power on /power off. -When play music, short press for “play/pause”. -Under wireless mode with mobile paired, when call coming, press short to answer a call hands-free, press again to hand up, press twice to ring up a call. -TWS: Two speakers are both in wireless mode when turned on, and neither is connected to the phone. Double click one of the speakers, and after 2-3 seconds, hear a prompt sound to successfully connect to TWS. Then connect to the phone again; Disconnect the wireless connection and double-click again to	-When connecting to the phone, three clicks can disconnect the phone connection. NOTE: If this speaker crash during use, you can press and hold the power button for 8 seconds to reset and shut down.
---	---	--	---

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.