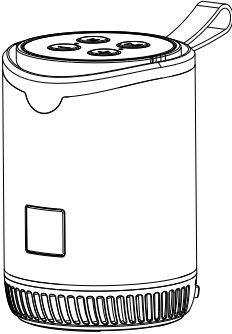 
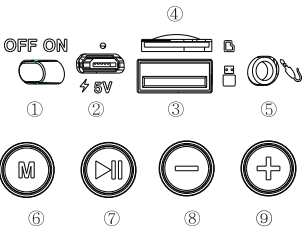 
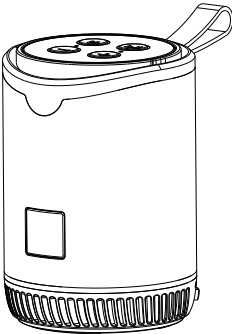 
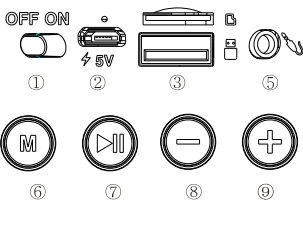 


尺寸：50*100mm,5折页正反印刷，材料：70g双胶

TG528 使用说明书 	一、产品参数 •无线版本：V5.3 •无线传输范围：10M •音频性噪比：≥85db •电池容量：500mAh •电池电压：3.7V •正常音量播放：1H •喇叭规格：Φ 52mm •喇叭功率：4Ω/5W •频率响应：50HZ-20KHZ •尺寸：70*70*100mm •单机重量：248 g •充电电压：5V/500mA 二、功能特点 1、采用先进的无线音频解码芯片，支持所有无线设备连接 2、音色柔和清晰有动感，各层次分明； 3、可直接连接手机/平板电脑/及电视无线配对播放音乐，无线接收距离长达10米；	4、支持AUX音频输入，为你提供电脑音箱功能； 5、支持U盘和TF卡音乐播放支持MP3格式的全码率播放； 6、FM自动搜索和存储电台内置FM收音模块，可自动搜索及存储电台，省时省力； 7、支持免提通话功能，内置高灵敏度麦克风，让手机通话拥有无比畅快的通话享受 8、支持对箱TWS功能 三、功能指示  ①电源开关：拨动到OFF时为关	机状态，拨动到ON时为开机状态 ②DC 5V电源接口（Micro USB 充电接口） ③U盘输入接口：当U盘插入时可解码MP3格式的音频播放; ④TF卡输入接口：当TF卡插入时可解码MP3格式的音频播放; ⑤AUX输入接口：3.5音频头外音输入; ⑥模式按键：在音乐的模式下，短按为各模式切换（U盘、TF卡、FM收音、无线）LINE IN线性输入为硬切换;两台音箱同时在开机无线模式且未连接的状态下，长按其中一台音箱的模式键2-3S听到提示音且其中一台指示灯长亮即连TWS成功，再连接手机即可。 ⑦暂停按键：在音乐的模式下（U盘、TF卡、LINE IN、无线），短按为“播放、暂停”，在无线模式并配对手机情况下，来电话	时短按一下为免提接听，再按一下为挂断电话；来电话时长按为拒接电话（在FM模式下短按为自动搜索电台、在搜台过程中短按一下为取消往后自动搜索电台）; ⑧上一曲按键：在音乐的模式下，短按为“上一曲”长按音量递减 ⑨下一曲按键：在音乐的模式下，短a按为“下一曲”长按音量递加 备注:在收音模式下，请插入音频线增加收音信号强度，收音效果会更好。
---	--	--	--	---

TG528 USER MANUAL 	Product specifications: •Version:5.3 •Working distance:10M •SNR:≥85db •Battery: 3.7V 500mah •Normal volume playing time:1H •Speaker driver: Φ52mm •Power: 4Ω/5W •Frequency response: 50HZ-20KHZ •Unit size70*70*100mm •Unit weight:248g •Charging:5V/500MAH Product Feature: 1.International advanced wireless chip and circuit design techniques, support all wireless devices. 2.With Hi-Fi speaker, to make sure the clear and bright sound. 3.The wireless working distance is 10 meters, can connect all out wireless devices (cell phone	/Tablet PC/ TV) to play music. 4.With AUX line in, can directly connect the outside devices, for example, tablet PC/TV/cell phones. 5.Support Micro SD card and USB card, play MP3 format audio. 6.With FM function, can search radio station broadcast automatically. 7.Built-in Mic for handsfree call. 8.support TWS Key and slot function:  1.Power switch: “OFF” is power off, “ON” is power on.	2.DC 5V slot: Use the standard Micro USB charging cable for power charging. 3.USB slot: It can decode and play MP3 format audio when put the USB card into the slot. 4.TF slot: It can decode and play MP3 format audio when put TF card into the slot. 5.AUX line in slot: Use the Mini 3.5 head input through outside devices. 6.Switch mode: when play music (USB card/ TF card/FM/LINE IN/ BT), press short to switch USB/ TF/FM /BT.(switch to “line in” if via AUX cable to audio device). Keep the TWS speaker under BT mode without pairing ,press the “M” key for 3 seconds either of the speaker until hear a hint “du du” for TWS mode ,then can paire the mobile. 7.When play music(USB card/ TF card/LINE IN/BT), press short for "play/pause ". under	BT mode with mobile paired , press short to answer a call , press again to hand up . in FM mode, press short to search station automatically, press again to stop searching) 8.When play music, Press short for last song, long press to turn down the volume. 9.When play music, press short for next song, long press to turn up the volume. NOTE: In the FM mode, put in micro charging cable to get better FM radio station.
--	---	--	---	--

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.