


Instruction Manual of Time
Decompression Lamp

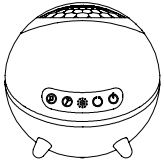

product description


Thank you for purchasing our product. This product is an intelligent time decompression lamp. I hope it will bring you a romantic and warm product experience during use. Please read this manual carefully before using this product and keep it properly for reference.

Product parameters	
Product name	Time decompression lamp
product model	HL-7001
product material	ABS+PC
Product size	4.53 in × 4.53 inch × 4.53in
Feature capacity	1000mAh
Rated voltage	3V
rated power	2.4W
light color temper	Warm 33 color light
Product weight	230g

List of accessories

Product name	quantity	Unit	quantity
Time decompression lamp	1PCS	USB power cord	1PCS
remote control	1PCS	Instruction manual	1PCS

 
Host key description



Key function description

Detach button:
Press the detach button for a long time to turn on the machine. After turning on the machine, it will enter the nightlight mode, turn on the white light, and then turn it on.
Detach button:
Press the detach button to shut down.
Detach key:
Touch the rotary button, turn it on (the default gear), and touch the button again to switch.
In the second gear, touch the key again to switch to the third gear, and touch the key again to stop the function.
Rotary operation:
RGB light button:
Touch the RGB light button to adjust the light combination, and the light color sequence is white, blue, red, green, and white, green and white, blue and white, red and green, red and blue, green and blue, red and green and white, blue and white, red and green, red and blue, white, green, blue and white, off.
Special effect light button:
Touch the special effect light button to turn on the special light, turn on the special light for breathing mode, and then touch the special effect light button again to turn on the special light, and press the special effect light button for a long time to turn on the music.
You can connect with your mobile phone, and press and hold the special light button again to turn off Bluetooth.
Detach key:
Touch the music button to turn on the built-in music, touch the button again to switch to the next song, and then touch the key twice to turn on the music. Then the music is turned on.
Press and hold the music key to adjust the volume.

Remote control key description

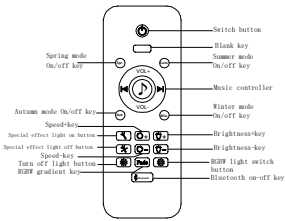

Note: When the spring, summer, autumn and winter modes are turned on, you can only adjust the sound volume, light brightness and special effect light switch. To adjust other functions, please turn off the current mode before adjusting.

Matters needing attention in use

1. If the light doesn't light up when using it for the first time, please charge it first.
2. After a period of normal use, if the brightness of nightlight decreases or flashes, please charge it in time.
3. When charging, the charging indicator lights up, and after charging, the indicator lights up.

Safety precautions

1. Before use, please confirm whether the voltage of the use environment meets the working voltage of this product. Improper use of voltage will damage the product and bring potential safety hazards.
2. Do not disassemble, open, disassemble or puncture this product.
3. Do not place this product in a high-temperature and humid environment.
4. Do not put this product into fire, water or corrosive environment.
5. The product contains small accessories such as charging cable, which is not suitable for children aged 3 and under.
6. The product does not include a power adapter, so please buy it from a regular manufacturer and confirm to the national 3C standard.
7. If any abnormality is found during the product use, please stop using it.
8. The light source of this lamp is irreplaceable. When the light source reaches the end of its life, the whole lamp should be replaced.

After-sales terms and conditions

The warranty period of this product is one year from the date of sale. During the warranty period, you can obtain warranty service from the dealer with valid purchase certificate. Beyond the warranty period, you can also get the warranty service at the point of purchase with a valid purchase certificate.

Non-warranty regulations

1. Due to misuse, negligence, abuse, liquid flooding, abrasion, fall, extrusion deformation and incorrect use.
 2. The accessories are torn, altered and other invisible man-made damages.
 3. Exceed the warranty period.
 4. Damage caused by force majeure, such as earthquake, flood, fire, etc.
- ★ The final interpretation right of this warranty clause belongs to the manufacturer.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment