

## Gaming Gun Sensitivity

There are Three ways to adjust the sensitivity.

### Way1:

Adjust the control sensitivity of the game directly. Adjust the vertical or horizontal sensitivity of the controller or mouse from the game settings.

### Way2:

- ① Press and hold the MD button while turning on the power of the gaming gun, at this time the four lights on the game gun are all on.



- ② Press the M1 button, at this point one of the LEDs on the RinBox flashes (4 LEDs in total). Corresponding to the level of sensitivity (1-4), No. 4 LED means the highest sensitivity, No. 1 means the lowest.
- ③ Press the M1 button again to change the level of sensitivity, at which time the corresponding LED on the RinBox starts flashing. When the setting is finished, press MD button to store the sensitivity, at this time RinBox makes a beep sound, indicating that the sensitivity setting is finished. After the setting is finished, turn off the power of the gaming gun.

### Way3:

- ① Go to [www.rinfire.com](http://www.rinfire.com) and use a Windows PC to download and install the RinFire Assistant.
- ② Plug the RinBox into the USB port of your computer.
- ③ Run RinFire Assistant and select the corresponding gaming platform, then click GAMING GUN PROFILE.
- ④ Click OTHER PROFILES, then adjust the GAMING GUN SENSITIVITY, and then click SYNC TO GAMING GUN after the adjustment is finished.



## Gaming Gun Recoil Switch

1. Press and hold the MD button while turning on the power of the gaming gun, at this time the four lights on the game gun are all on.



2. Press the M2 button.


If the recoil function is currently on, the game gun will vibrate once. Pressing the M2 button once more at this point will turn off the recoil function. When the recoil function is turned off, the 4 Led lights will flash a few times.

Press the MD button to exit the setting.

## Gaming Gun Channel Setting

When multiple gaming guns are used in a space, the channel of the gaming guns needs to be set to prevent mutual interference. There are 15 channels in total.

1. Make sure the RinBox is **not** plugged into the USB port (RinBox is **not** powered).

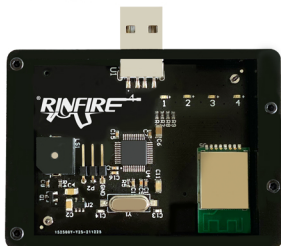

RinBox

2. Press and hold the MD button while turning on the power of the gaming gun, at this time the four lights on the game gun are all on.



3. Press the M4 button.

At this time the indicator light on the gaming gun will start flashing, the number of flashes is the current channel number (flashing 1 times and then pause to indicate channel 1, flashing 15 times and then pause to indicate channel 15).

4. Press the M5 button to increase the channel number, and press the M6 button to decrease the channel number.

5. After selecting the channel number, insert the RinBox into the USB port, RinBox will emit 3 beeps continuously, indicating that RinBox has installed the channel number you selected.

6. Press the MD button on the gaming gun to store the channel number (1 and 2 indicator lights on once), and the gaming gun automatically exits the setting.

## Screen Calibration\*

Most games do not require screen calibration, only Light Gun mode will be more accurate if the screen is calibrated.



**Step1:** Press and hold SC button for 3 seconds to activate Screen Calibration.

**Step2:** In the position of the gaming, aim at the left border of the screen and shoot the first shot.

⚠ (Do not use gun sight to aim, use the gaming posture to aim)

**Step3:** In the same way, aim at the right border of the screen and shoot the second shot.

One long beeping sound, indicates calibration successful.

⚠ **Caution:** The calibration order of the border cannot be reversed!

If the calibration fails, you need to restart the gaming gun, and do it again.

Restore default data:

If you no longer play Light Gun mode, you can restore the default data.

**Step1:** Press and hold SC button for 3 seconds to activate Screen Calibration.

**Step2:** To any position (the same position) continuous shooting 2 times, you can restore the default data.

# HEALTH AND SAFETY INFORMATION AND USAGE GUIDELINES

Read the following warnings before setup or use of the RinFire Gaming Gun. If this product will be used by young children, these instructions should be read and explained to them by an adult. Failing to do so may cause injury. Please also carefully review the information for the game you are playing and review any additional health and safety information.

## Important Safety Information

Throughout these instructions, you will see this symbol  followed by WARNING or CAUTION, or you may see the term NOTICE. These terms have different levels of meaning as outlined below. Please read and understand these terms and the information that appears after them before using your RinFire Gaming Gun.

### WARNING

Warns you about incorrect use of this product that could result in serious personal injury.

### CAUTION

Cautions you about incorrect use of this product that could result in personal injury or damage to the gaming gun, or accessories.

### NOTICE

Informs you about incorrect use of the product that could result in damage to the gaming gun, or accessories.

### WARNING - SEIZURES

- Some people (about 1 in 4,000) may have seizures or blackouts triggered by light flashes or patterns, and this may occur while they are watching TV or playing video games, even if they have never had a seizure before.
- Anyone who has had a seizure, loss of awareness, or other symptom linked to an epileptic condition should consult a doctor before playing a video game.
- Parents should watch their children play video games. Stop playing and consult a doctor if you or your child has any of the following symptoms:
  - Convulsions
  - Eye or muscle twitching
  - Loss of awareness

- Altered vision
- Involuntary movements
- Disorientation

To reduce the likelihood of a seizure when playing video games:

1. Sit or stand as far from the screen as possible.
2. Play on the smallest available television screen.
3. Do not play if you are tired or need sleep.
4. Play in a well-lit place.
5. Take a 10 to 15 minute break every hour.

### WARNING - REPETITIVE MOTION INJURIES AND EYESTRAIN

Playing video games can make your muscles, joints, skin, or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Parents should monitor their children for appropriate play.
- Take a 10 to 15 minute break every hour, even if you don't think you need it.
- If your hands, wrists, arms, or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning, or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

### CAUTION - MOTION SICKNESS

Playing video games can cause motion sickness in some players. If you or your child feels dizzy or nauseous when playing video games, stop playing and rest. Do not drive or engage in other demanding activity until you feel better.

### WARNING - ELECTRIC SHOCK

To avoid electric shock when you use this system:

- Please disconnect the AC adapter during a lightning storm. There may be a risk of electric shock from lightning.
- To minimize the risk of damage to the system, only use qualified AC adapters with your product.
- Do not use the AC adapter if it has damaged, split, or broken cords or wires.
- Make sure that the AC adapter cord is fully inserted into the wall outlet or extension cord.
- Always carefully disconnect all plugs by pulling on the plug and not on the cord.

**DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS**

For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet, if needed.

 **WARNING - BATTERY LEAKAGE**

The RinFire Gaming Gun and certain accessories contain a rechargeable lithium ion battery. Leakage of ingredients contained within the battery, or the combustion products of the ingredients, can cause personal injury as well as damage to your RinFire Gaming Gun. If battery leakage occurs, avoid contact with skin. If contact occurs, immediately wash thoroughly with soap and water. If liquid leaking from a battery comes into contact with your eyes, immediately flush thoroughly with water and see a doctor.

To avoid battery leakage:

- Do not expose battery to excessive physical shock, vibration, or liquids.
- Do not disassemble, attempt to repair, or deform the battery.
- Do not dispose of battery in a fire.
- Do not touch the terminals of the battery or cause a short between the terminals with a metal object.

 **WARNING - RADIO FREQUENCY INTERFERENCE**

The RinFire Gaming Gun and accessories, can emit radio waves that can affect the operation of nearby electronics, including cardiac pacemakers.

- Do not operate the RinFire Gaming Gun and accessories within 9 inches of a pacemaker.
- If you have a pacemaker or other implanted medical device, do not use the RinFire Gaming Gun and accessories without first consulting your doctor or the manufacturer of your medical device.

 **CAUTION - USING HEADPHONES**

When using headphones, set the volume at a safe level. Setting the volume too high may harm your hearing or damage the headphones.

## Product and Accessories Precautions and Maintenance

- Do not disassemble or try to repair the RinFire Gaming Gun, components, or accessories. Doing so may damage them.
- Do not drop, hit, or otherwise abuse the RinFire Gaming Gun, Components or accessories. Doing so may damage the RinFire Gaming Gun or accessories.
- Make sure all connections to the RinFire Gaming Gun are made carefully and inserted into the correct locations only. Hold plugs straight when inserting them into sockets.
- When disconnecting any plugs from RinFire Gaming Gun, always carefully pull by the plug itself rather than by the cord.
- Do not expose the RinFire Gaming Gun or any of the Nintendo Switch components or accessories to extreme heat or cold. Take care not to expose the RinFire Gaming Gun to direct sunlight for extended periods of time.
- Do not spill liquids on the RinFire Gaming Gun or other components or accessories. If liquids get into the product, do not charge the product. Contact RinFire customer service for further instructions. If you have questions or experience problems with your product or accessories, please visit our website at [www.rinfire.com](http://www.rinfire.com) for troubleshooting information.

### AC ADAPTER PRECAUTIONS

Please read and follow the precautions listed below when setting up and using the RinFire Gaming Gun. Failure to do so may result in damage to your RinFire Gaming Gun or accessories.

- Plug the AC adapter into an easily accessible standard wall outlet near your RinFire Gaming Gun.
- Make sure there is adequate ventilation around the AC adapter and RinFire Gaming Gun, and that any air vents are unobstructed.
- Be sure to connect the AC adapter to the correct voltage (100-240V).
- Do not expose the AC adapter or RinFire Gaming Gun to extremes of heat.
- Do not expose the AC adapter or RinFire Gaming Gun to any type of liquid or high humidity.

### IMPORTANT BATTERY GUIDELINES

To minimize the risk of damage to the RinFire Gaming Gun, when recharging the battery, use only qualified AC adapters.

### CLEANING THE PRODUCT

If the product becomes dirty, please clean it using a soft clean cloth, such as a lens or eyeglass cleaning cloth. If the outside of the RinFire Gaming Gun comes into contact with liquids, wipe