

Creative Drawing Pad



5150-5250MHz for indoor use only

 
Thanks for choosing HUION Creative Drawing Pad drawing tablet. Creative Drawing Pad is a 12.7-inch Android tablet with a full HD touch screen and an active capacitive stylus pen. Supporting finger touch and pen touch, Wi-Fi, and Bluetooth, Creative Drawing Pad is ideal for note-taking, painting, design, office work, and entertainment. The product comes with pre-installed apps brought by Google Mobile Services (GMS) such as Google Maps, YouTube, and Google Play. More apps can be downloaded from Google Play.

[To better know and use this product, please read this user manual carefully.](#)


Note: Design and specifications are subject to change without notice. The pictures in the user manual are for reference only.

1. Product View

1.1. Front

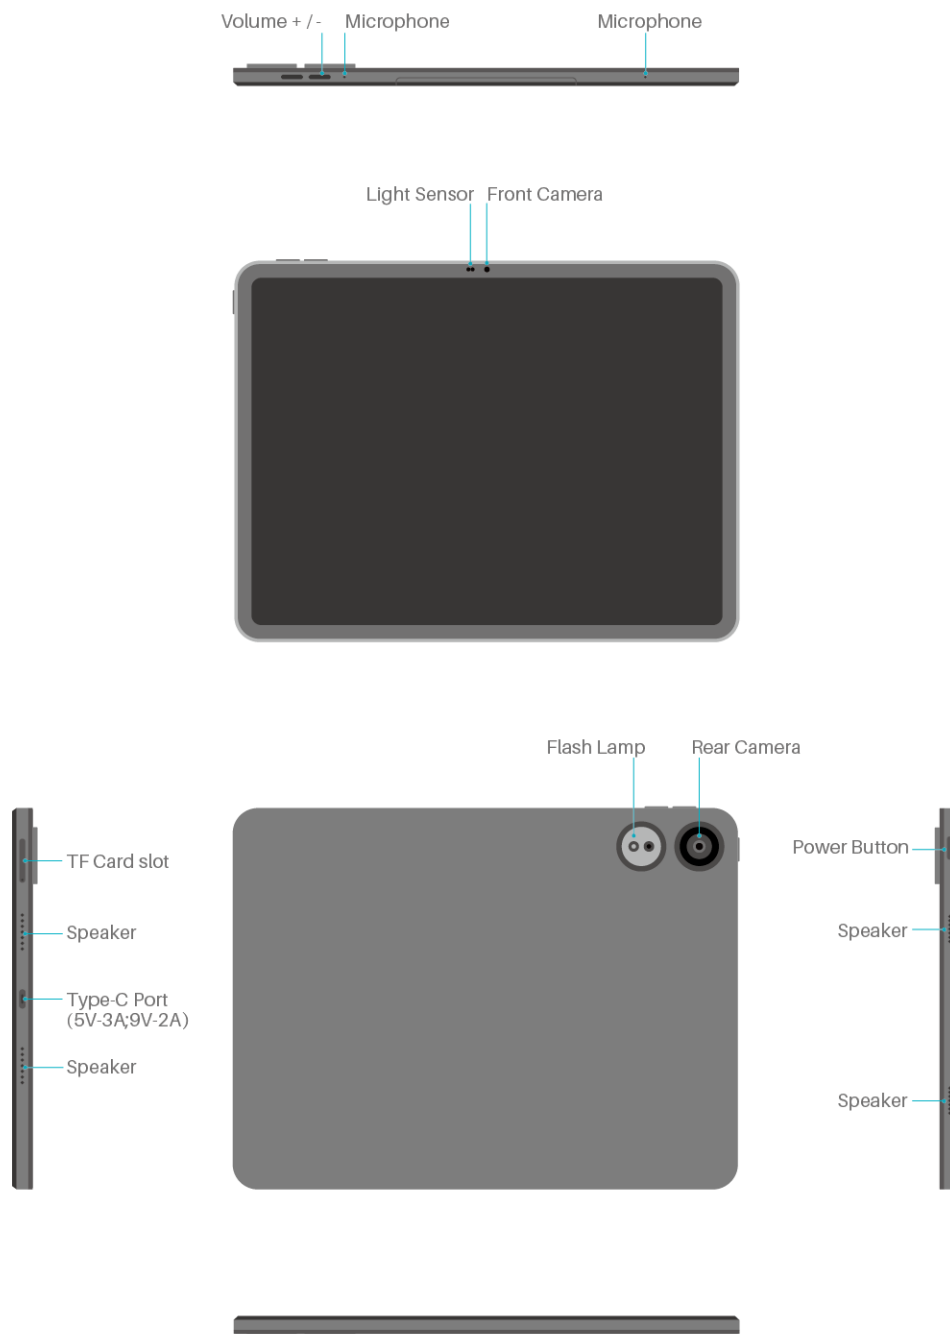


 1.2. Active Capacitive Stylus Pen

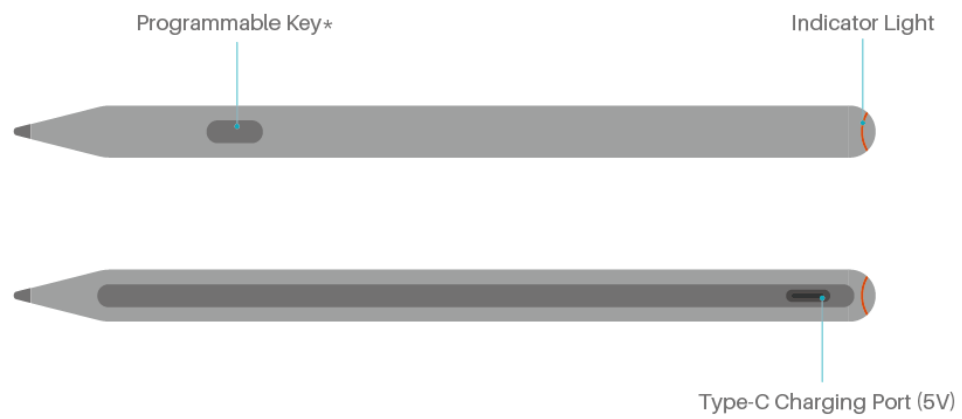

*Programmable functions are only supported in specific software

 1.3. Accessories

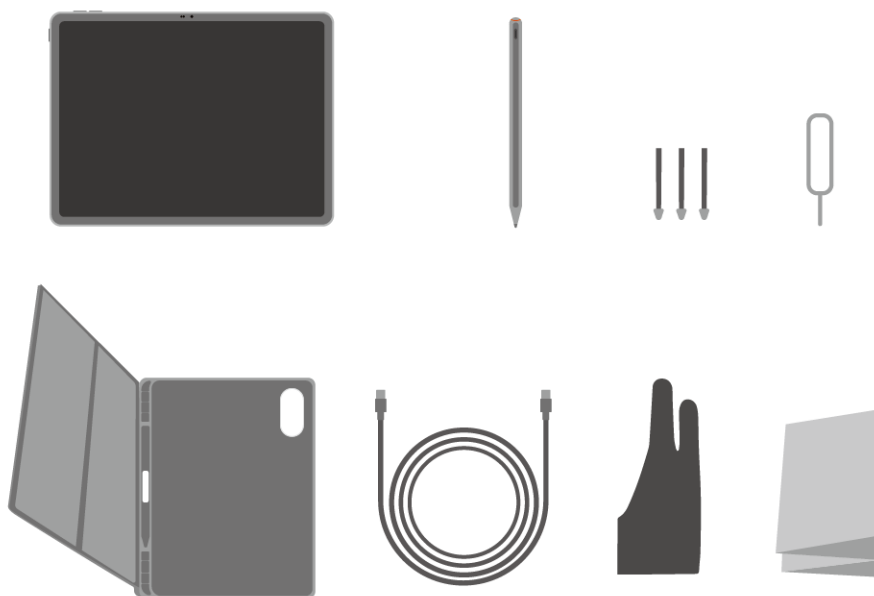

Drawing Tablet ×1	Drawing Tablet ×1	Spare Pen Tip ×3	Tablet Case ×1
Power Adapter (Optional) ×1	USB-C Cable ×1	SIM Card Ejector Pin ×1	Quick Start Guide ×1

2. User Guide

2.1. Operating Temperature

 
Do not place this product in an environment where the temperature is too high or too low so as not to cause circuit failure of the device. Please use it within the optimum operating temperature range of 0° C to 40° C.

This product is not waterproof. Do not expose the device to a humid environment or use it in the rain. Please keep it away from corrosive liquids and do not use potent chemicals, cleaning agents, or strong detergents to clean the device.

2.2. Charge the Tablet

It is recommended to charge the tablet before the first use. Please use the power adapter and USB cable to charge as shown. Do not use any other power adapter. Using an incompatible adapter to charge may damage the tablet and pose fire hazards. You can also use a USB cable to connect the tablet to a computer for charging. But the charging speed will be much slower.

The battery of this product cannot be replaced. Please do not disassemble or replace the battery without authorization. Using the wrong type of battery may pose a risk of explosion. All consequences arising from unauthorized disassembly shall be borne by yourself.

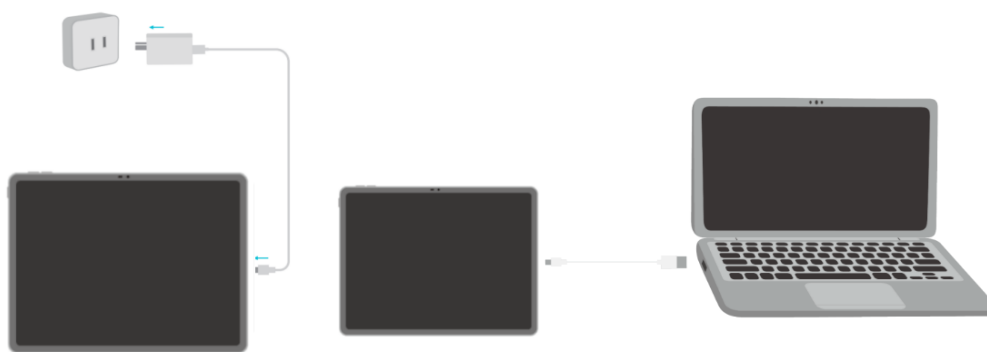

2.3. How to Use the Stylus Pen

Before first use, please use the USB-C cable to charge the stylus for at least 10 minutes to make sure the power is sufficient for the stylus to function properly.

The red indicator lights up when the stylus is charging and goes out when charging is complete.

 
When the battery is low, breathing red indicator lights up.

When the pen tip is badly worn, please pull it out and insert a new one.



2.4. Shut Down and Restart

2.4.1. Long press the power button to shut down or restart the tablet

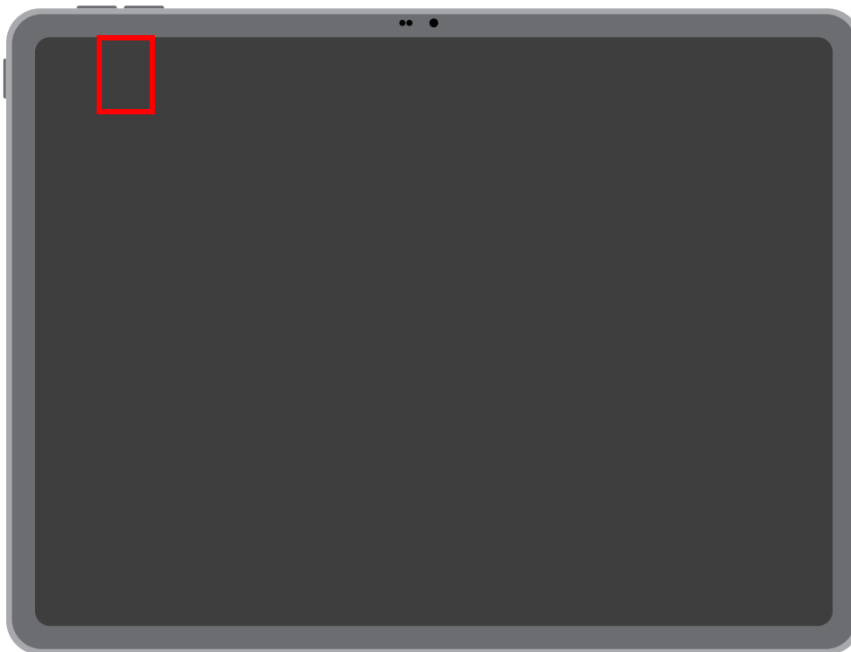


Long press the power button for 2s, and tap the "Power off" or "Restart" button in the pop-up window to shut down or restart the tablet.

Long press the power button for 7s to force shutdown.


2.4.2. Open the Control Center to shut down or restart the tablet

 Swipe down from the top of the screen to bring up the Control Center and Notification Center, and tap the "Power off" button at the bottom to get to the shutdown box.

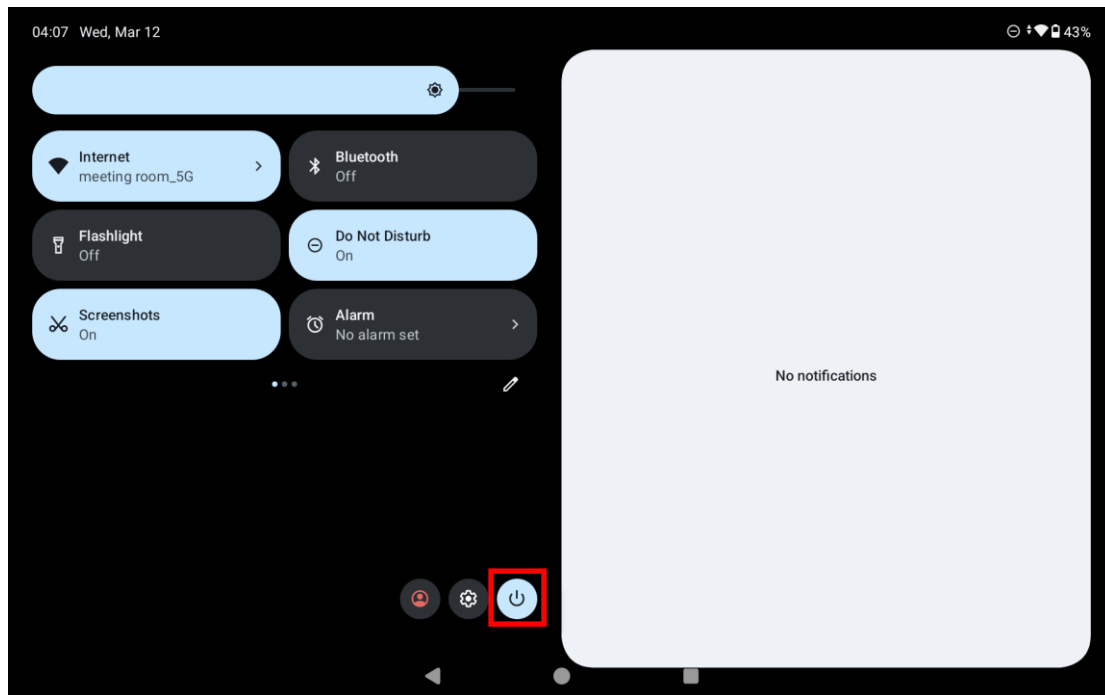


2.5. Learn About the Home Screen

 2.5.1. Onscreen Navigation Button

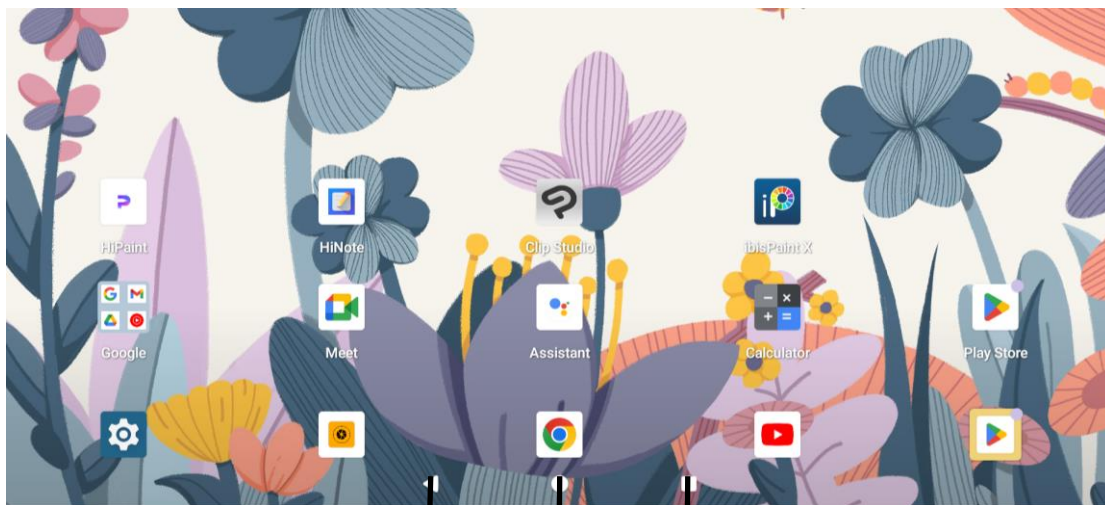

2.5.2. Home Settings, Widgets, and Wallpaper & Style

 Touch and hold an empty area on the Home screen to bring up the Home settings, Widgets, and Wallpaper & style options.

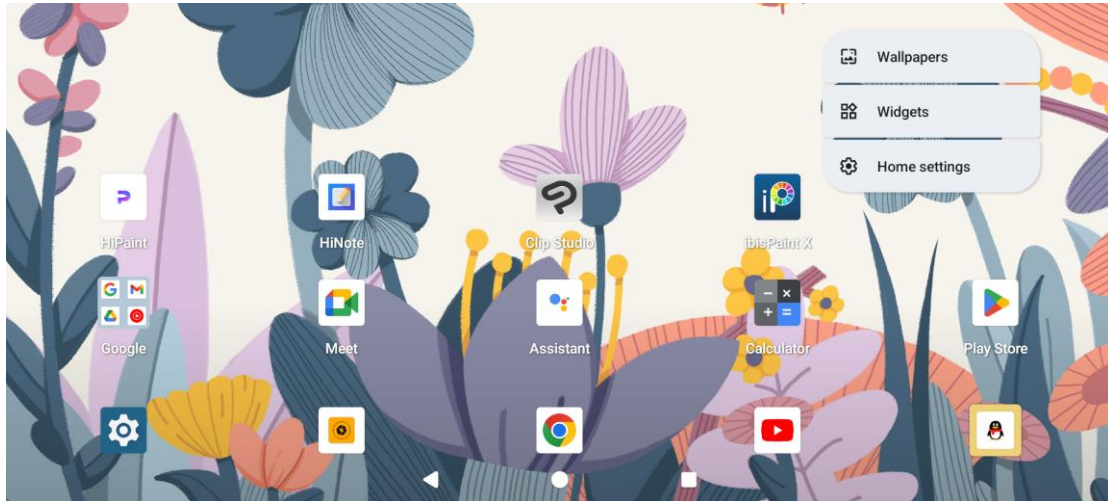


Tap Home settings to enable/disable adding icons to the Home screen, which applies to new apps installed from Google Play. You can also enable/disable notification dots and set swipe down gestures on the Home screen.

Tap Widgets, find a widget you need, then touch, hold, and drag its icon to add it to the Home screen.

Tap Wallpaper & style to change wallpaper. You can select a preloaded wallpaper or use an image from your album.


2.5.3. Language Setting

 Select the desired system language when you first turn on the device. You can also tap the Settings icon on the Home screen to change the language setting.

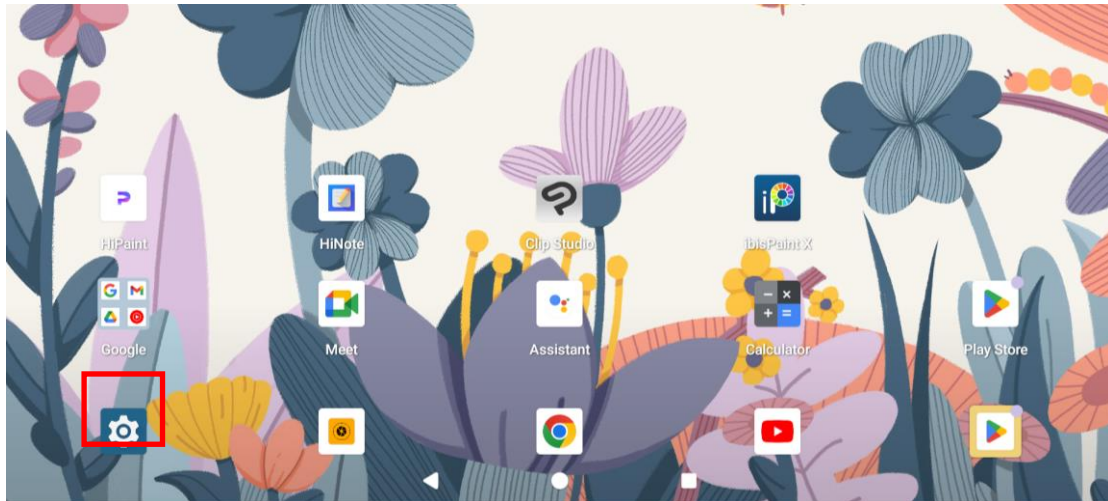


Tap Settings > System > Languages to enter the language setting interface.

 Tap Add a Language and select the language you want. It will be added to the bottom of the languages list. Then touch and drag the language to the top of the list. Then the device automatically displays the language you selected.

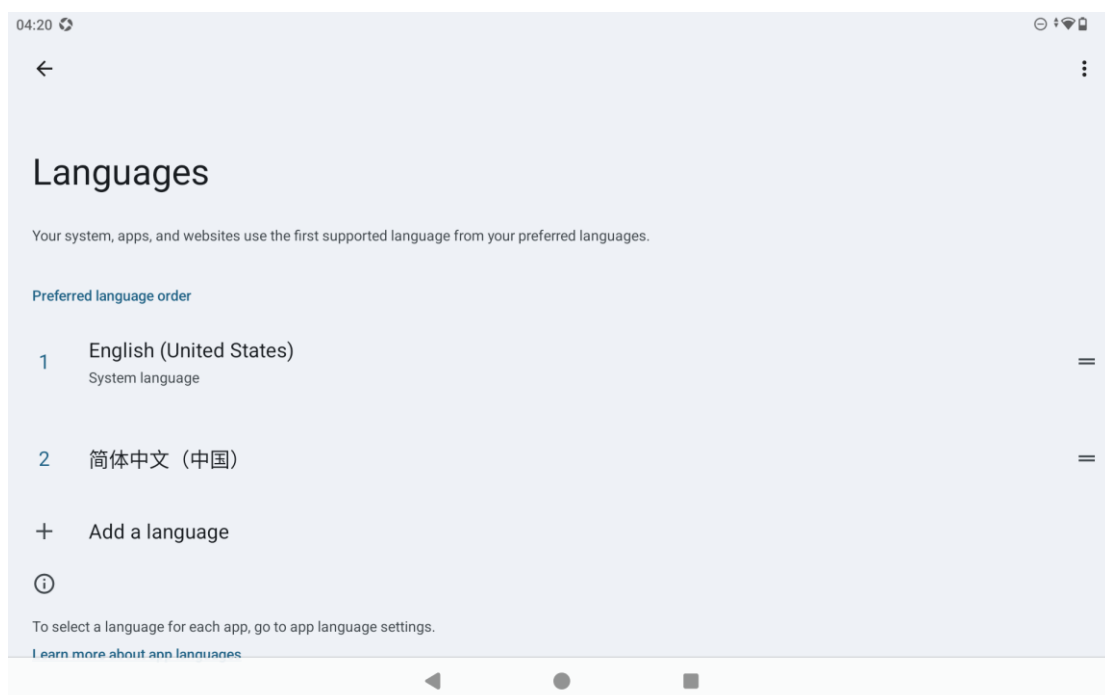


2.5.4. Wi-Fi Connection

 From the Home screen, tap Settings > Network & internet > Wi-Fi to view available Wi-Fi networks.

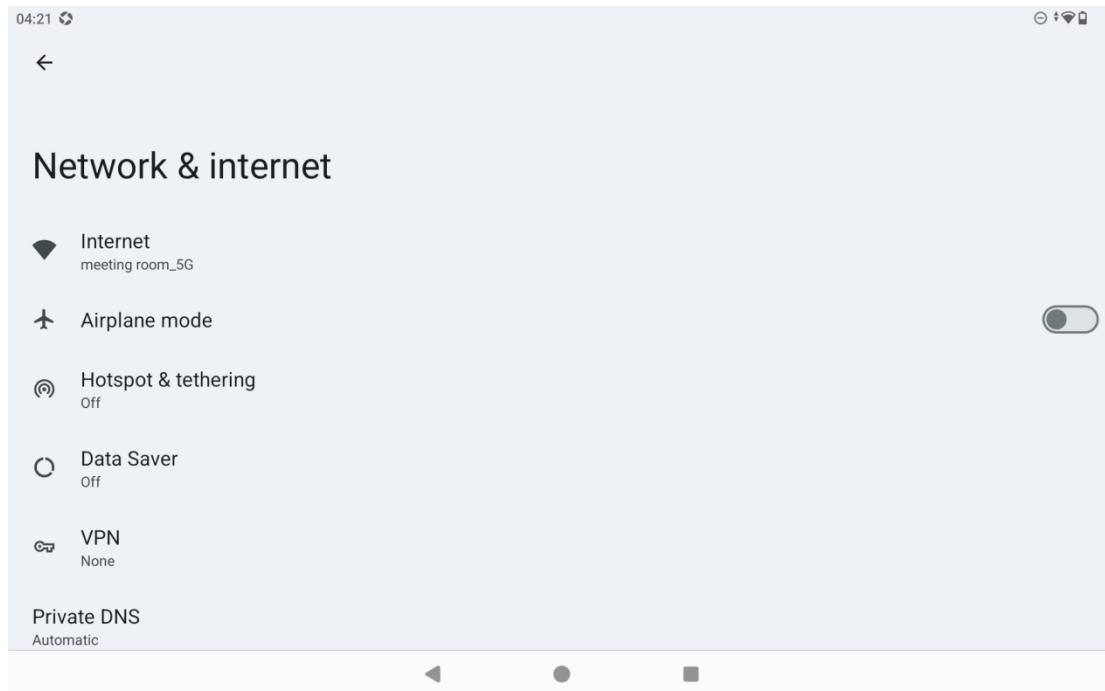


Once Wi-Fi is turned on, the tablet will automatically search for available Wi-Fi networks. Select a Wi-Fi network and enter the Wi-Fi password to complete the connection.

 You can pull down to bring up the Control Center and then tap the “Internet” button to enter the network settings interface and complete the Wi-Fi network connection.

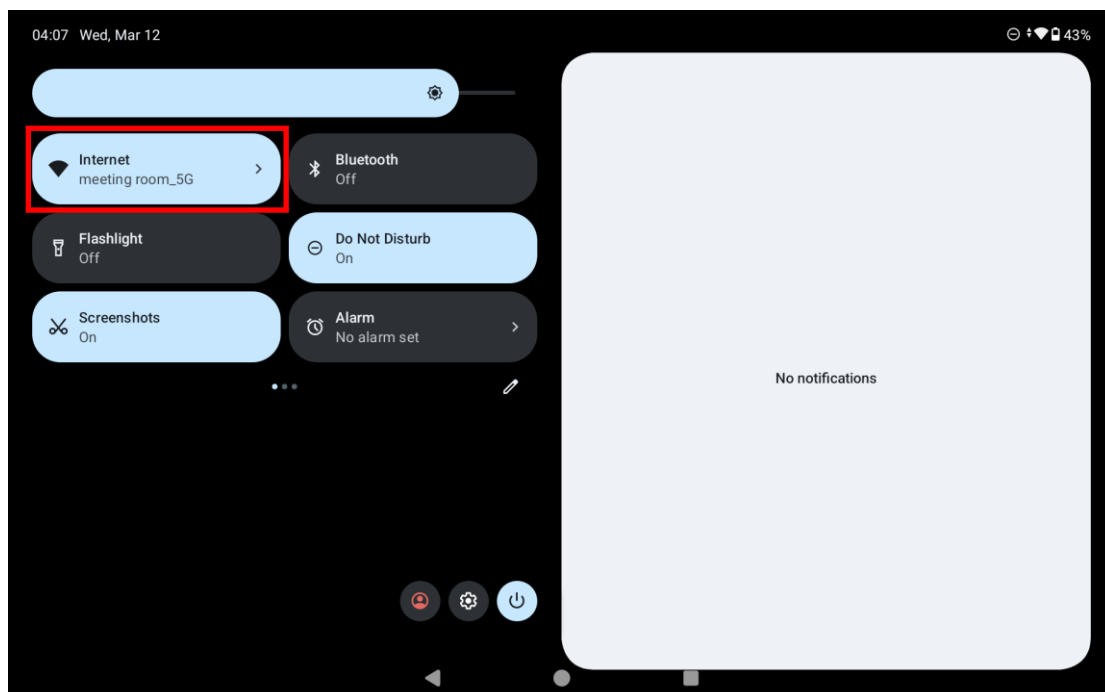

2.5.5. Log Into a Google Account

 
From the Home screen, tap Settings > Passwords & accounts > Add an account > Google.

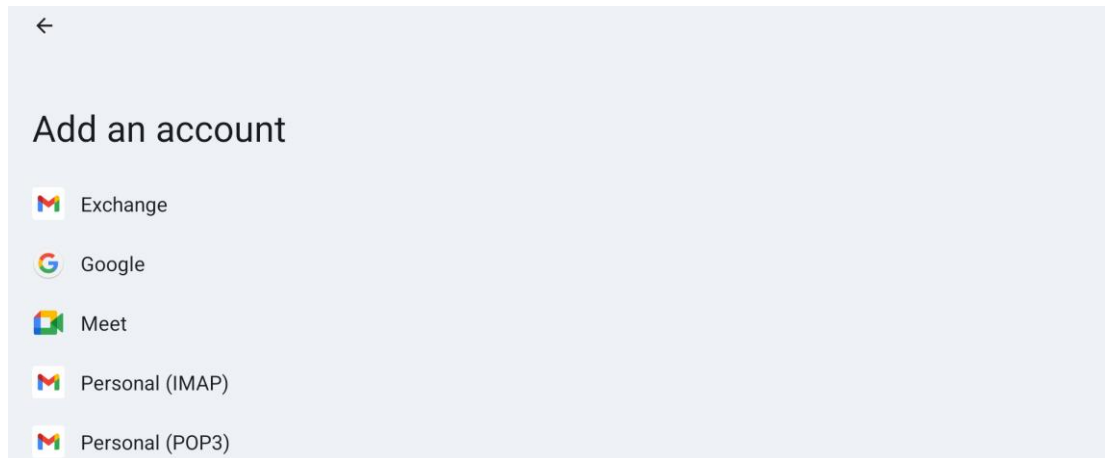

On the Google Sign-in interface, enter your Google account and password. If you don't have a Google account yet, you can tap "Create account" on the Sign-in interface and follow the instructions to create and log in to your Google account.

2.5.6. Switch System Navigation Method

 Tap the "Settings" icon on the Home screen or in the apps list, tap System-Gestures-Navigation mode in Settings, and switch to Gesture navigation or 3-button navigation in the system navigation mode selection interface.

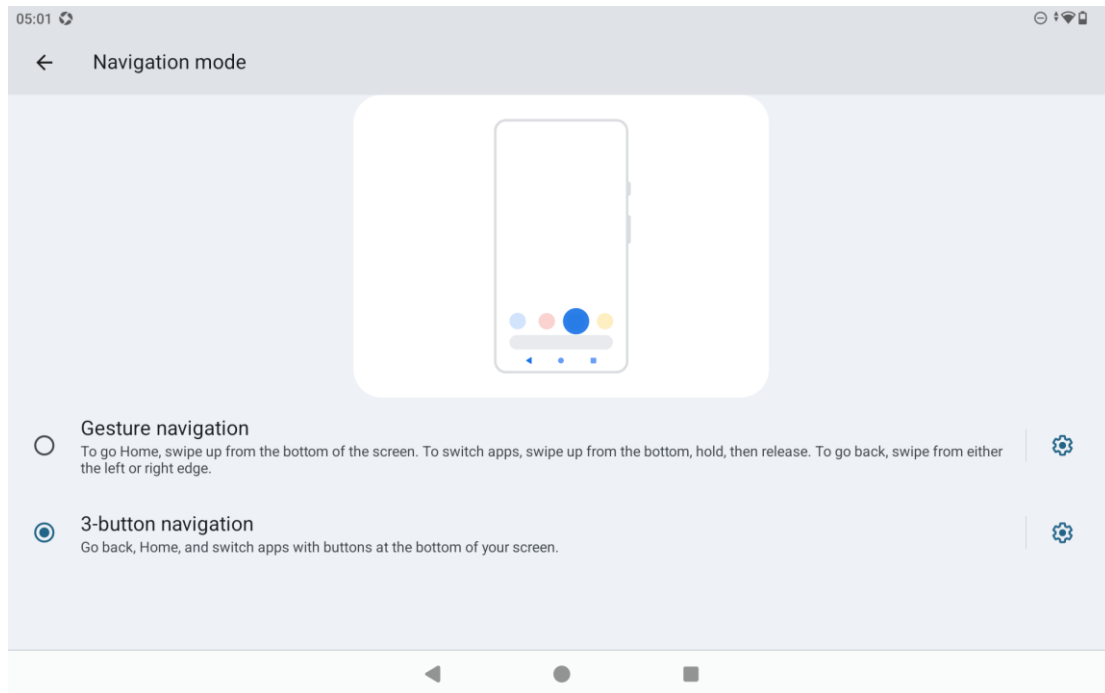


When you switch to gesture navigation, the three navigation buttons at the bottom of the screen will disappear and their functions will be replaced by gestures (you can view the animated demonstration when the gesture navigation option is selected).

3. Lock/Unlock Screen

3.1. Auto-lock

By default, the tablet will automatically lock the screen and enter sleep mode if there is no operation in one minute.

 Tap the "Settings" icon on the Home screen or in the app list to enter the Settings interface, and tap "Display - Screen timeout" in the Settings to set the waiting time for automatic sleep.

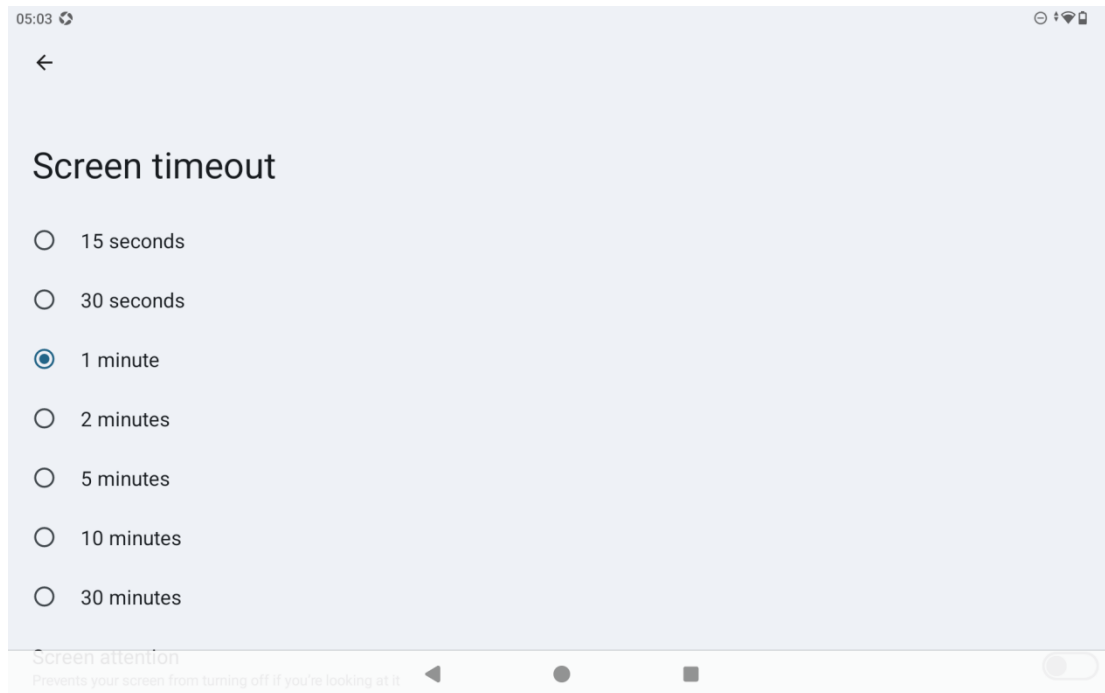

3.2. Manual Lock

You can press the power button to lock the screen and activate sleep mode.

 
3.3. Wake Up Screen

You can press the power button to wake up the screen.

3.4. Unlock Screen

When the screen wakes up from sleep mode, you can swipe up the unlock interface to enter the unlock interface, and then enter the correct password to unlock the screen.

You can also tap the "Settings" icon on the Home screen or in the app list to enter the Settings interface, and tap Security&privacy - Set screen lock in Settings to change the unlocking method.

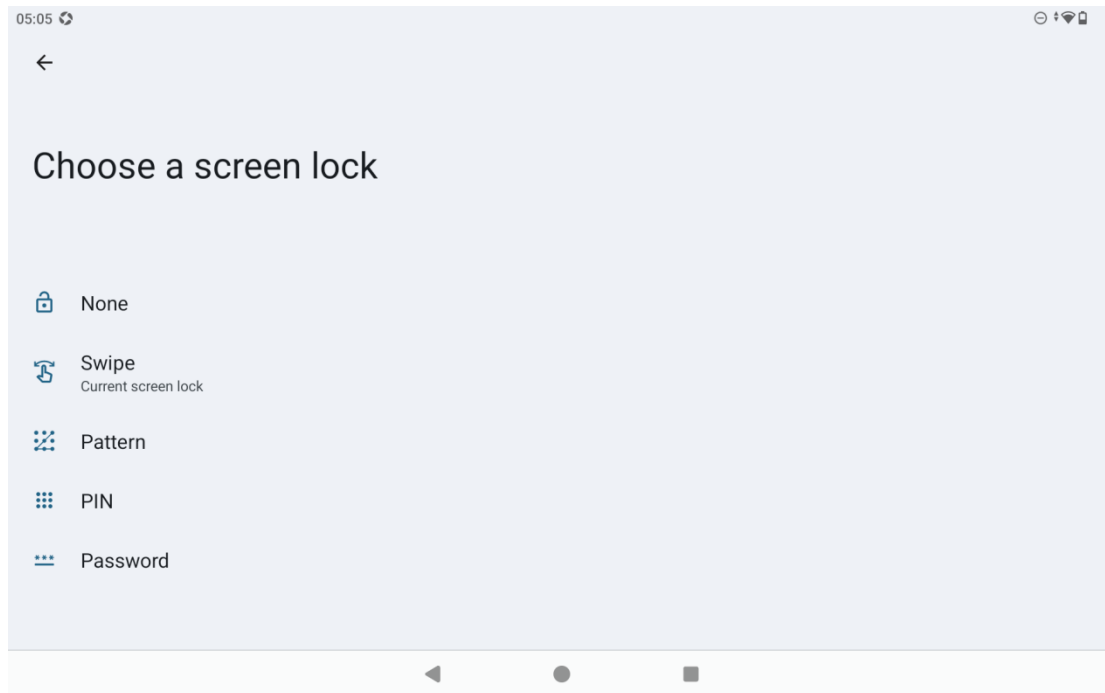

4. HiPaint software

 
 
4.1. Customize Stylus Side Button

The functions of the side buttons of the stylus can be customized in HiPaint. The side buttons of the stylus in other software may have no function, and the functions cannot be customized.


Open the HiPaint app, open any file or create a new one.

01:32


Gallery Favorite


Untitled
03/03

  
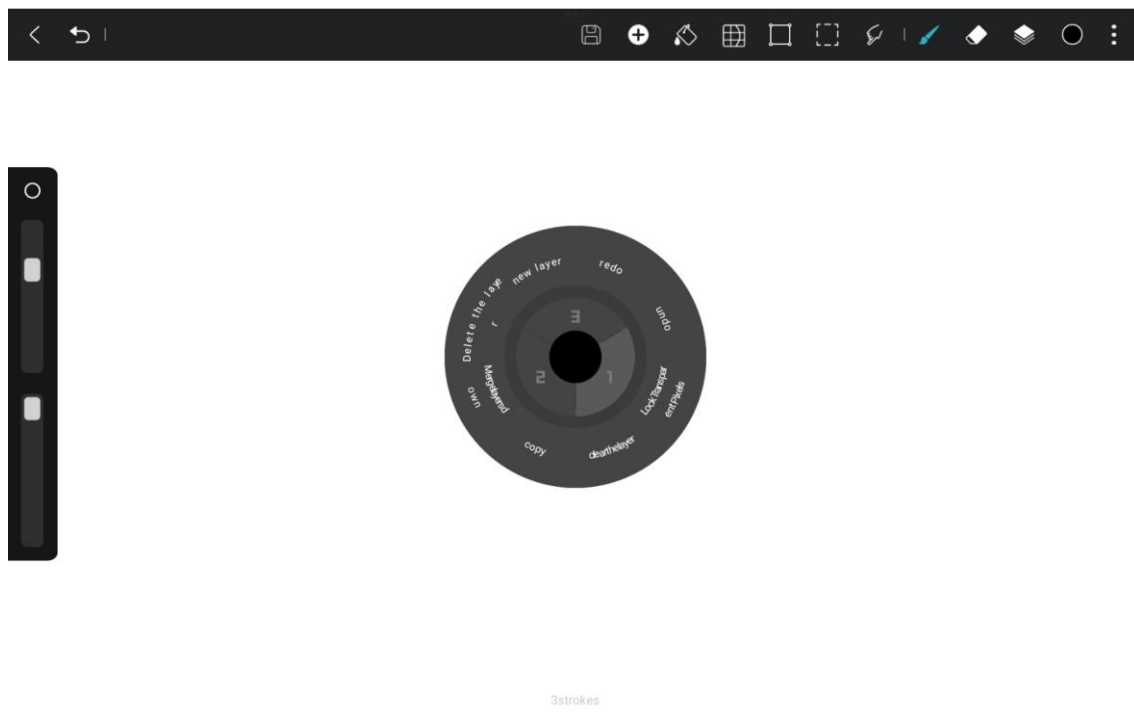 
Enter any file, tap the More button in the upper right corner and select Sketch Setting.

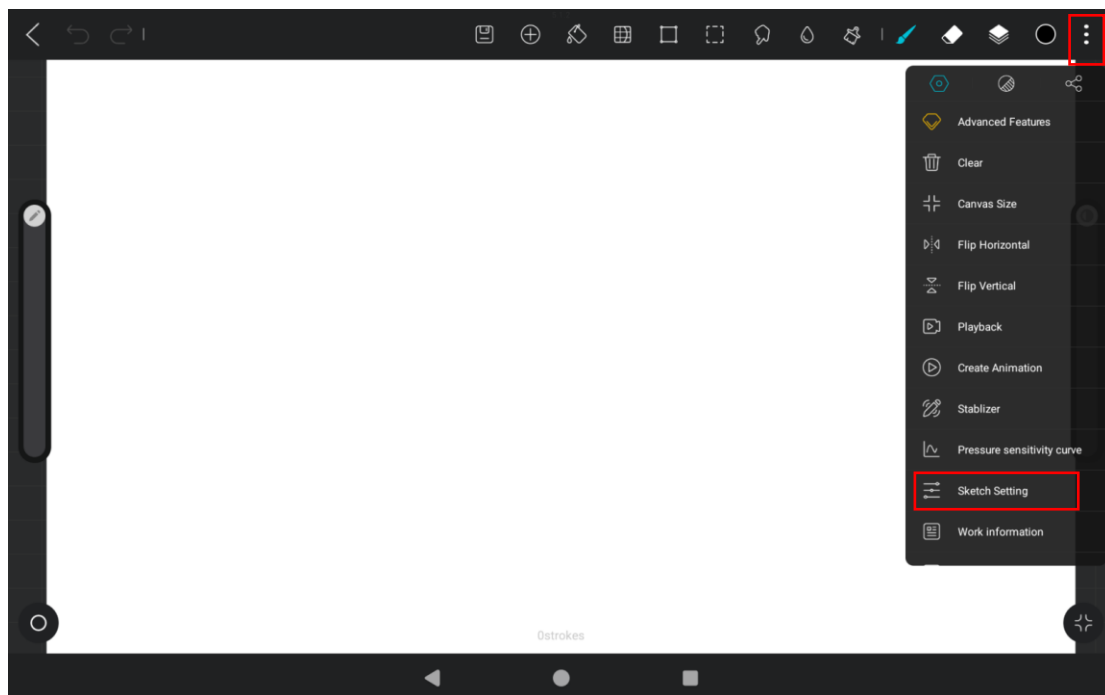

Enter Sketch Setting, and set the functions of the two side buttons in Stylus.

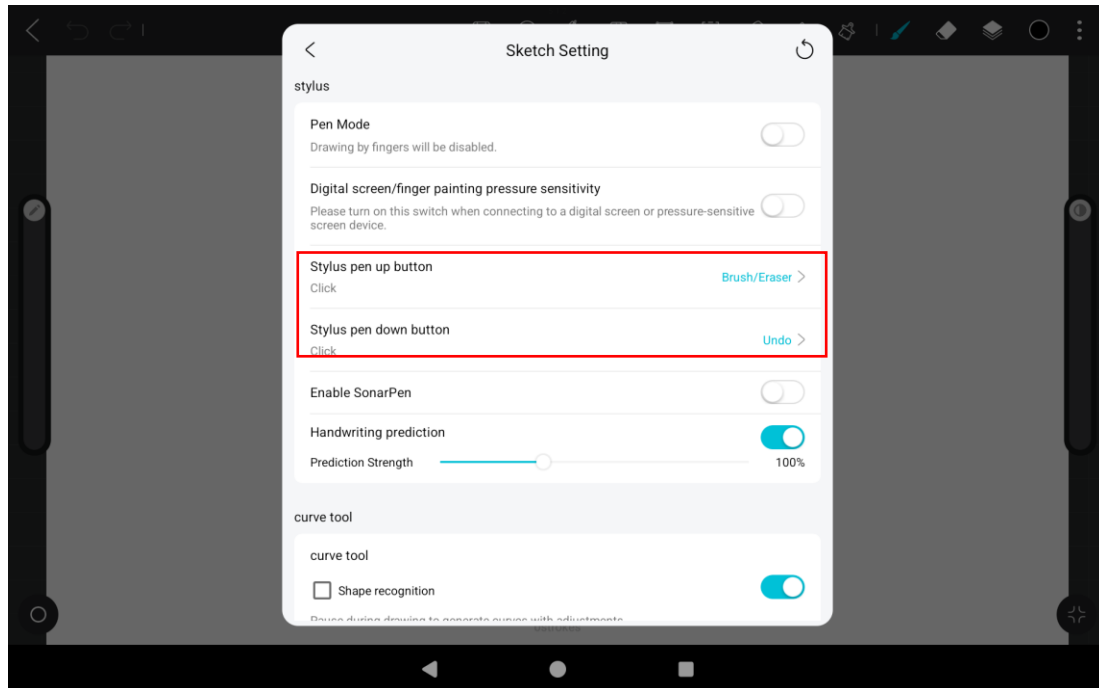

 
After setting the side button function of the stylus, return to any file under the current APP and press the side button of the stylus to activate the most recently set function.

 


In Radial Menu, you can also tap and hold a function block for 2 seconds to enter the redefinition setting of the function block.




Enter any file under the HiPaint app and select any brush.



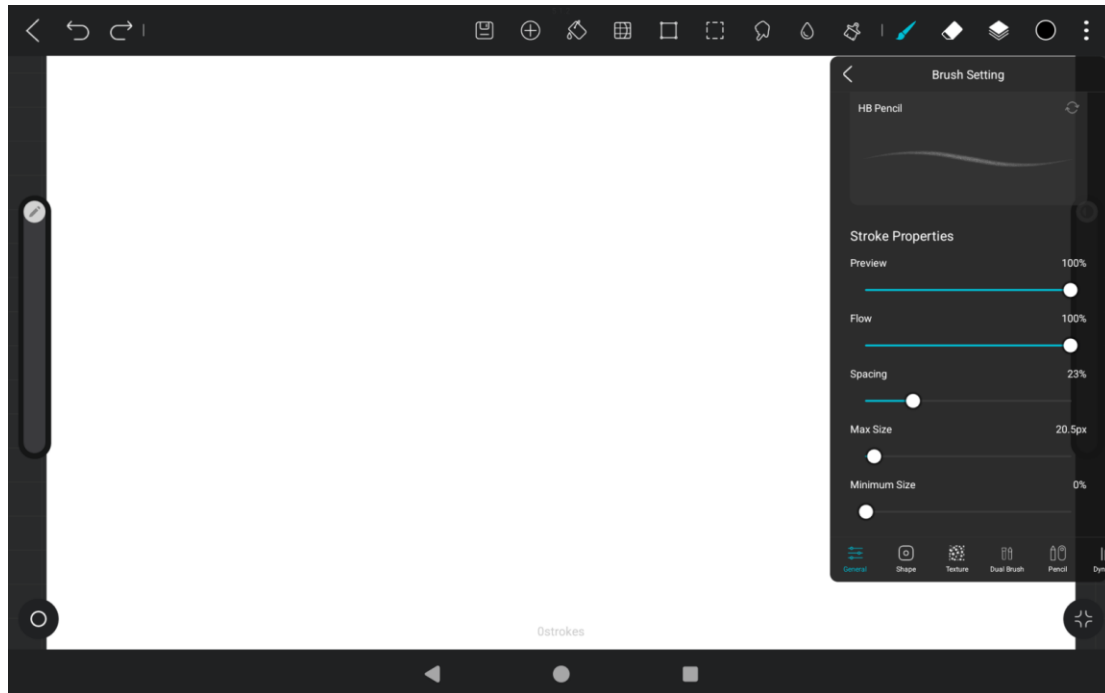

Enter the Tilt settings interface.

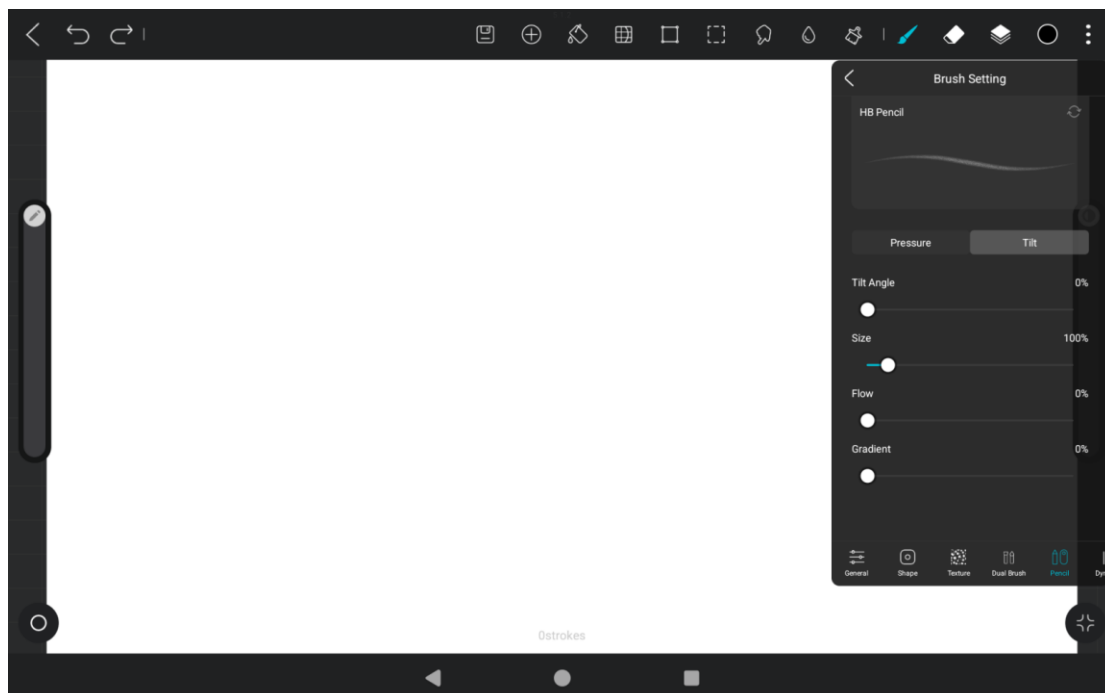 

5. System Update

When there is a new version of the system software of the tablet, we will push an update reminder to you. You can view the update reminder in the Notification Center and tap the reminder message to quickly go to the update interface.

You can also enter the Settings interface through the "Settings" icon on the Home screen or in the app list, and tap System - System update to manually check and update the system.

6. Troubleshooting

Q1 Tablet cannot power on.

- Restart your tablet.
- Press the power button to check if the tablet is in sleep mode.
- Press and hold the power button for 7-8 seconds to restart the device.

Q2 Tablet can't be charged.

- Make sure the USB cable is properly plugged into the charging port.
- Try with another compatible USB cable and power adapter.

Q3 An error message appears during operation.

- Uninstall the app with the error message, then download and reinstall it.
- Press and hold the power button for 7-8 seconds to restart the device.

Q4 Tablet can't be detected on computer.

- Make sure the tablet is turned on.
- Try with another USB cable.
- Try with another USB port on your computer.
- Check whether the USB connection mode between the tablet and computer is charging only.
If so, switch to media (MTP) or camera (PTP) mode.

Q5 Tablet can't connect to the wireless network.

- Make sure your tablet's Wi-Fi is turned on.
- Make sure to enter the correct password when connecting to Wi-Fi.
- Restart the router.
- Check the connection limit in the router settings to see if other devices are restricted from connecting through filters.
- Forget the current Wi-Fi, reset the router and connect to Wi-Fi again.

Q6 There is not enough storage space on the tablet.

- Uninstall infrequently used apps.

- Regularly clear the app's cache.
- Install a Micro SD card to expand storage.

Q7 The screen is unresponsive.

- Check the screen for dust or oil, if so, clean it with a cloth.

Q8 The stylus button does not work.

The side buttons of the stylus are only functional in Huion Note and HiPaint apps, and other software doesn't support button functions. In addition, the functions of the side buttons can only be customized under HiPaint.

7. Parameters

The following product specifications help you better understand the device.

Please contact us if you have any questions.

The following data will vary in different environments and are for reference only.

Specifications

Model: KT1201

Version: Wi-Fi

Dimension: 280.6 x 211.8 x 7.5mm

Working Area: 191 x 259.8mm

Weight: 682 g

Interface: USB-C, 3.5mm Headphone Jack With Mic, Pogo Pin

Button: Power Button, Volume Button

LTE Platform: MTK Helio G99

RAM: 8GB

ROM: 256GB

Front Camera: 8.0MP

Rear Camera: 13.0MP

GPS: GPS, Glonass, Beidou, Galileo A-GNSS

Sensor: Light Sensor, Hall Effect Sensor, Gyroscope Sensor

Bluetooth: BT5.0

Operating System: Android 14.0

Battery Capacity: 10000mAh

Screen

Display Resolution: 2176 x 1600(16:10) FHD+

LCD Type:IPS

Full Lamination: Yes

Typ. Brightness: 350 cd/m²

Color Gamut: 99% sRGB

Stylus

Stylus: HS230

Pen Technology: Active Capacitive Stylus Pen

Pressure Sensitivity: 4096 Levels

Operating Environment

Power Output:9V2A

Operating Temperature and Humidity: 0-40° C, 20-80%

Storage Temperature and Humidity: -20° C-60° C, 10-90%

Copyright Notice

Shenzhen Huion Trend Technology Co., Ltd. reserves the right to make changes to the product specifications and other contents of the manual without prior notice.

Disclaimer

This manual is only intended as a guide for use. We have endeavored to ensure the accuracy of the content when writing, but we do not guarantee that the content is completely free from errors or omissions. The information in this manual does not constitute any express or implied warranty.

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

Note: This equipment has been tested and found to comply with the limits for a Class

B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.