

  Lotogo B1 User Manual	CONTENT 1. Important Safety Information 2. About Lotogo B1 2.1 Lotogo B1 2.2 Function Button & Buzzer Indication 3. Using Your Lotogo B1 3.1 Requirements 3.2 Add Your Lotogo B1 3.3 Change the Name of Lotogo B1 3.4 Locate Your Lotogo B1 3.5 Enable "Notifications" 3.6 Enable "Lost Mode" 3.7 Remove Your Lotogo B1 from Find My app 3.8 Reset Your Lotogo B1 3.9 Replace the Battery of Lotogo B1 4. Specification 5. Warranty 6. Customer Service 7. The Fine Print	1. Important Safety Information Use Coredy Lotogo B1 with care. ! WARNING Do not ingest battery. Do not expose the device to a direct heat source. Do not expose the device to any mechanical stress or impact. Do not attempt to disassemble your Coredy Lotogo B1. Don't use a damaged Coredy Lotogo B1. CHOKING HAZARD Coredy Lotogo B1, the battery compartment door, the screw, and the battery may present a choking hazard or cause other injury to small children, keep these items away from small children.	BATTERY This device contains a replaceable coin cell battery, which will last up to 1-year, and the battery might to be replaced during the life of the product, replace only with the same type (CR2032) and rating of battery, note the correct polarity. Important: Contact your local waste management authority for battery disposal regulations in your area. Keep batteries away from children, if the coin battery is swallowed and ingested, it can cause severe internal burns within two hours and result in serious injury or even death. Seeking medical attention immediately if you think batteries might have been swallowed or placed inside any part of the body. If the battery compartment does not close securely, stop using the product, and keep away from children.	FCC Warning This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with	the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement.	The device can be used in portable exposure condition without restriction.	2. About Lotogo B1 2.1 Lotogo B1 Hang Hole Battery Compartment Door Function Button Battery Compartment Door Rotation Button Speaker	2.2 Function Button & Buzzer Indication <table><tr><th> Function Button</th><th>Buzzer</th><th>Status</th></tr><tr><td>Short press TWICE</td><td>One sound</td><td>Turn on</td></tr><tr><td>Press 5 times, with the 5th long press until a series of sound emitted.</td><td>a series of sounds</td><td>1) Remove device 2) Reset device</td></tr><tr><td>Press and hold for 3 seconds</td><td>Two sounds</td><td>Turn off</td></tr></table>	 Function Button	Buzzer	Status	Short press TWICE	One sound	Turn on	Press 5 times, with the 5th long press until a series of sound emitted.	a series of sounds	1) Remove device 2) Reset device	Press and hold for 3 seconds	Two sounds	Turn off	3. Using Your Lotogo B1 3.1 Requirements Before you start, make sure that: • Your iPhone, iPad, or iPod touch is running with iOS 14.5 or iPadOS 14.5 or later. • Two-factor authentication turned on. • Find My turned on. • Bluetooth turned on. • Wi-Fi or Cellular connection is strong. • Location services turned on, go to: Settings > Privacy > Location Services. • To be able to use Precision Finding, and to see the most accurate location for your Lotogo B1, turn on Location Access for Find My, go to: settings > Privacy > Location Services, then scroll down to tap Find My, choose While Using the App, then turn on Precise Location.	3.2 Add Your Lotogo B1 1) Gently pull out the protective insulation film from the Lotogo B1. 2) Press the function button TWICE to power on your Lotogo B1, your device will play a sound once it is powered on. 3) Place your Lotogo B1 next to your iPhone (or iPad, iPod touch). 4) Open the Find My App. 5) Tap the Devices tab or Items tab. 6) Tap +, then tap "Add Other Item", follow the onscreen instructions to complete the connection. 7) Attach Lotogo B1 to any stuffs you want to find, if your stuff goes missing, you can use Find My to find it back. • If you need to connect your Lotogo B1 to a new device, please remove the connection from current device firstly.	3.3 Change the Name of Lotogo B1 1) Open the Find My app. 2) Tap the "Items" tab. 3) Tap the Lotogo B1 which you want to change the name. 4) Swipe upwards to bring up the full Lotogo B1 settings. 5) Tap "Rename Item". 6) Select a name from the list or select Custom Name. 7) Type a custom name for your Lotogo B1 and select an emoji which you've like to. 8) Tap "Done".	3.4 Locate Your Lotogo B1 • Use "Play Sound" to find Lotogo B1 when it's nearby: 1) Open the Find My app. 2) Tap the "Items" tab. 3) Tap on the Lotogo B1 which you want to find. 4) Tap "Play Sound", your Lotogo B1 will play a series of sounds (13 sounds in total) when it is within Bluetooth range. 5) Tap "Stop Sound" to stop the sounds once you find. • Use "Directions" to find Lotogo B1's location: 1) Open the Find My app. 2) Tap the "Items" tab. 3) Tap the Lotogo B1 that you want to mark as lost. 4) Your Lotogo B1's location will appear on the Map, and an updated location and time stamp appears under its name.	5) Tap "Directions" to navigate to the Lotogo B1's location. 3.5 Enable "Notifications" • Enable "Notify When Found" 1) Open the Find My app. 2) Tap the "Items" tab. 3) Tap the Lotogo B1 in the items list. 4) Swipe upwards to bring up the full Lotogo B1 settings. 5) Under "Notifications", enable the "Notify When Found" toggle. 6) When your Lotogo B1 is seen by another Find My network, you will receive a notification of its location. Note: "Notify When Found" can only be activated when your Lotogo B1 is out of range of your device.	• Enable "Notify When Left Behind" 1) Open the Find My app. 2) Tap the "Items" tab. 3) Tap the Lotogo B1 in the items list. 4) Swipe upwards to bring up the full Lotogo B1 settings. 5) Under "Notifications", enable the "Notify When Left Behind" toggle ON, then tap "Done". 6) You will receive a notification when you leave your Lotogo B1 behind and it's out of range of your device. 3.6 Enable "Lost Mode" 1) Open the Find My app. 2) Tap the "Items" tab. 3) Tap the Lotogo B1 that you want to mark as lost. 4) Swipe upwards to bring up the full Lotogo B1 settings.	5) Under "Lost Mode", tap "Enable", follow the onscreen instructions to Activate. 6) If you want to disable "Lost Mode", under "Lost Mode", tap "Enabled", then tap "Turn Off Lost Mode" popup to turn off. Note: when "Lost Mode" is enabled, "Notify When Found" will be automatically enabled. 3.7 Remove Your Lotogo B1 from Find My app 1) Open the Find My App. 2) Tap the "Items" tab. 3) Tap the Lotogo B1 which you want to remove. 4) Swipe upwards to bring up the full Lotogo B1 settings. 5) Tap "Remove Item", follow the onscreen instructions to remove, once removed, your device will emit a series of sound.	3.8 Reset Your Lotogo B1 • After successfully remove the Lotogo B1 from Find My app, press the Lotogo B1's function button five (5) times rapidly, with the 5th long press until a series of sound emitted. • The Lotogo B1 is now reset successfully, and ready to be paired to a new Apple ID. 3.9 Replace the Battery of Lotogo B1 1) Counter-clockwise push the battery compartment door rotation button. 2) Remove the battery compartment door. 3) Unscrew the screw. 4) Remove the battery. 5) Insert a new CR2032 battery into the device with the positive side (+) facing up. 6) Tighten the screw. 7) Place the battery compartment door on the device. 8) Clockwise push the battery compartment door rotation button until rotation stops.	4. Specification What's in the Box: Coredy Lotogo B1 *1 Loop Ring *1 User Manual *1 Dimension: 2.72(W) x 1.38(H) x 0.32(T) inches 0.42 ounce 5. Specification 1-year warranty 6. Customer Service Contact us if you can't use your Coredy Lotogo B1 or have any concerns, toll-free (US) call: +1 (800) 999 8470. 7. The Fine Print The Apple Find My™ network provides an easy, secure way to locate compatible personal items using the Find My™ app on your iPhone®, iPad®, Mac®, iPod touch®, or the Find Items app on Apple Watch®.	Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. To use the Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch® requires the latest version of watchOS®. Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, iPod touch, Mac, macOS and watchOS are trademarks of Apple Inc. iOS is a trademark of Cisco and is used under license.	 One App to Find it All. An easy and stylish way to find your lost stuffs. TOLL FREE (US): +1 (800) 999 8470 Works with Apple Find My
 Function Button	Buzzer	Status																													
Short press TWICE	One sound	Turn on																													
Press 5 times, with the 5th long press until a series of sound emitted.	a series of sounds	1) Remove device 2) Reset device																													
Press and hold for 3 seconds	Two sounds	Turn off																													