

**FAST &  
FURIOUS**

**DODGE**  
*Charger* **R/T**

# Instruction Manual

**STOP!**

**DO NOT RETURN TO STORE**

**This product cannot be returned  
for a refund after it has been  
unpacked and used.**

**Call us Toll-Free  
at 1-866-204-9737 for  
assistance and information  
from our trained staff.**

**For product related questions  
or custom service needs please  
email [info@hypertoys.com](mailto:info@hypertoys.com)**

**VISIT US ONLINE@  
[www.hypertoys.com](http://www.hypertoys.com)**

**CAUTION! CHARGER IS A ELECTRONICALLY OPERATED PRODUCT:**

**Not recommended for children under 3 years of age. As with all  
electric products, precautions should be observed during handling  
and use to prevent electric shock.**

## **CAUTION-ELECTRIC TOY:**

**NOT RECOMMENDED FOR CHILDREN  
UNDER 3 YEARS OF AGE. AS WITH ALL  
ELECTRIC PRODUCTS, PRECAUTIONS  
SHOULD BE OBSERVED DURING HAN-  
DLING AND USE TO PREVENT ELECTRIC  
SHOCK.**

### **⚠ WARNING:**

**RISK OF FIRE.** DO NOT BYPASS.  
TO REDUCE THE RISK OF INJURY, ADULT  
SUPERVISION IS REQUIRED.  
REPLACE ONLY WITH 10A & 15A FUSE.  
NEVER USE IN ROADWAYS, NEAR MOTOR  
VEHICLES. NEVER USE ON OR NEAR STEEP  
INCLINES OR STEPS. NEVER NEAR SWIMMING  
POOLS OR OTHER BODIES OF WATER. ALWAYS  
WEAR SHOES.

NEVER ALLOW MORE THAN 2 RIDERS  
MAX WEIGHT OF 110 LBS, (50 KG).  
**⚠ CAUTION:** SCREWS CONTAIN SHARP POINTS  
AND EDGES. ADULT ASSEMBLY REQUIRED.

### **⚠ WARNING:**

**CHOKING HAZARD -** THIS  
PACKAGE CONTAINS SMALL  
PARTS. KEEP AWAY FROM  
CHILDREN UNTIL ASSEMBLED.  
THIS PRODUCT IS NOT INTENDED  
FOR CHILDREN UNDER 3 YEARS  
DUE TO AN INABILITY TO  
OPERATE SAFELY.

### **⚠ WARNING:**

THIS PRODUCT CONTAINS A  
BATTERY THAT IS NOT  
REPLACEABLE.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER TOY  
CO**

# FAST & FURIOUS

DODGE  
*Charger* R/T

## Parent and Rider Manual

With directions  
for assembly and  
operation

Please read this manual before assembly.  
Remember to save your receipt.

**12** VOLT  
ELECTRIC

AGE **3+**  
MAX WEIGHT  
110 LBS, (50 KG)



Wireless Remote  
Control Included



[www.HyperToys.com](http://www.HyperToys.com)

**WARNING:**  
Assembly by an adult.

**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 36 months.

**WARNING:**  
Protective equipment  
should be worn.

**WARNING:**  
Do not use this ride  
on toy in traffic.

MAX WEIGHT: 110 LBS (50 KG)

MAX RIDERS: 2

MAX SPEED: 5 MPH (8 KPH) FORWARD HIGH  
2 MPH (3 KPH) FORWARD LOW  
AND REVERSE ONLY

EASY PUSH-BUTTON OPERATION

12 VOLT BATTERY AND CHARGER INCLUDED

WORKS ON HARD SURFACES

CONTAINS LEAD ACID BATTERY

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Table of Contents

|                                      |              |
|--------------------------------------|--------------|
| <b>Important Information</b>         | <b>1</b>     |
| <b>Safety, Warnings and Cautions</b> | <b>2</b>     |
| <b>Riding Safely</b>                 | <b>3</b>     |
| <b>Battery Charging</b>              | <b>4-5</b>   |
| <b>Vehicle Operation</b>             | <b>6-7</b>   |
| <b>Parts</b>                         | <b>8-9</b>   |
| <b>Assembly</b>                      | <b>10-14</b> |
| <b>Vehicle Care</b>                  | <b>15</b>    |
| <b>Troubleshooting Guide</b>         | <b>16</b>    |
| <b>Limited Warranty</b>              | <b>17</b>    |
| <b>Product Information</b>           | <b>18</b>    |

## IMPORTANT INFORMATION

- ADULT ASSEMBLY AND SUPERVISION REQUIRED.
- The battery must be charged for 4-6 hours before first use. To start charging the battery before starting assembly, see Battery Charging and Installation Information on page 4.
- Instruct children on safe operation and driving rules before they take their first ride:
  - Only two riders at a time.
  - Always wear a helmet.
  - Always wear flat close toe shoes while operating this ride-on vehicle.
  - Do not allow other children around this ride-on vehicle while riding.
  - Do not place your hands, feet, any part of your body, clothing or other articles near moving parts of this ride-on vehicle while in operation.
  - Do not sit on the rear end of this ride-on vehicles seat, it could cause the ride-on vehicle to tip over.
  - Both riders must always sit in the correct seat position while operating this ride-on vehicle.
  - Only adults are allowed to fill the "Atomizer" water tank on this ride-on vehicle.
  - Adult supervision is required at all times while the rider operates the "Vapor" button equipped on this ride-on vehicle.
- California Proposition 65 Warning: This product contains or emits chemicals known to State of California to cause cancer and birth defects or other reproductive harm.
- Do not overload this ride-on vehicle or exceed the maximum weight capacity of 110 lbs, (50 kg). If you have questions please call **1-866-204-9737** toll free or email us at **info@hypertoys.com**
- Please read this manual completely for operation and safety information before operating this vehicle. Keep this manual for future reference.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Safety

## Warnings and Cautions

### **WARNING: Electrical Hazard**

**RISK OF FIRE , DO NOT BYPASS.**

- Only use same Hyper Toy 12V lead-acid battery with this ride-on vehicle.
- Only use a Hyper Toy Input AC 100-240V, (50-60Hz), Output DC 12V/1.0A charger when charging this ride-on vehicles battery.
- Never modify the electrical system. Changes could cause a fire resulting in serious injury or death, and could also ruin the electrical system of this ride-on vehicle.
- Never let the rider tip over or flip over this ride-on vehicle because the battery could fall out of the ride-on vehicle and injure the rider.
- Never lift or carry the battery by the wires or connectors. This can damage the battery and possibly cause a fire resulting in serious injury or death. Always use a battery holder to pick up the battery.
- Only an adult should handle the battery equipped in this ride-on vehicle. The battery is heavy and contains sulfuric acid (electrolyte). Dropping the battery could cause serious injury and damage to the battery.
- Only adults are allowed to operate the battery charging of this ride-on vehicle.
- Never allow children to operate charging the battery equipped on this ride-on vehicle. The electricity involved in charging the battery could cause injury, fire, or even death.
- Always wait to handle the electric motors equipped on the ride-on to cool down after the ride-on vehicle has been used.
- Always check for excessive wear or damage of the battery, charger, and their connections before charging the ride-on vehicle. If damage is found do not charge or operate the ride-on vehicle. Contact customer service immediately.

### **WARNING: Riding Hazard**

**To reduce the risk of injury , adult supervision is required.**

- Never use in roadways, near motor vehicles.
- Never use on or near steep inclines or steps.
- Never near swimming pools or other bodies of water.
- Always wear shoes.
- Maximum 2 riders are allowed to use this ride-on vehicle at one time.
- Maximum weight load for this ride-on is 110 lbs, (50 kg.)

### **WARNING FCC ID:2A8PMHYPPFC4612T**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference.(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

### **WARNING: Adult Supervision Required**

- Always Teach Safety First
- While most children can develop the physical skills necessary to operate this vehicle, it is important to remember that they do not yet have mature judgment skills. Children should never be allowed to ride this vehicle without adult supervision. Before any child rides this vehicle an adult must evaluate the child's skill levels and abilities to operate the vehicle safely. Even after instruction hazards are not always anticipated or recognized by children. So before any child operates the vehicle teach them appropriate safety rules.
- Only use the supplied rechargeable battery and charger with this electric ride-on vehicle.
- THERE IS NO SUBSTITUTE FOR DIRECT ADULT SUPERVISION.

### **WARNING: Safe Riding Rules**

To reduce the risk of injury adult supervision is required.

 
- Always sit only on the correct seat inside the ride-on vehicle at all times.
- Always wear flat, close toe shoes while operating the ride-on vehicle.
- No more than two riders ride this ride-on vehicle at one time.
- Do not operate on loose dirt, sand or gravel.
- Do not operate near drop-offs, obstructions, swimming pools or other bodies of water.
- Do not operate in roadways, on the street or near motor vehicles.
- Do not operate on or near steep inclines or steps. Use on generally level ground only.
- Do not operate in the dark as unexpected obstacles could cause an accident.
- Do not operate on slopes. The vehicle may accelerate or roll backwards at unsafe speeds even if the pedal is released.
- Do not place anything near moving parts such as motors, gears or wheels. Rotating parts can snag hair, fingers, etc. causing serious injury.
- Do not operate near flammable vapors (such as gasoline, paint thinner, acetone, liquid wax, etc.).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon/zinc), or rechargeable batteries.
- Electrical components can produce an internal spark when first turned on or off. Using the vehicle near flammable liquids or vapors could cause an explosion or fire resulting in serious injury or death.

# Battery

## Charging Instructions

**ATTENTION!** Only use the provided charger and battery from the original manufacture to charge this ride-on vehicle. For safety purpose all battery charging should only be done by an adult.

### Battery Charging Procedure

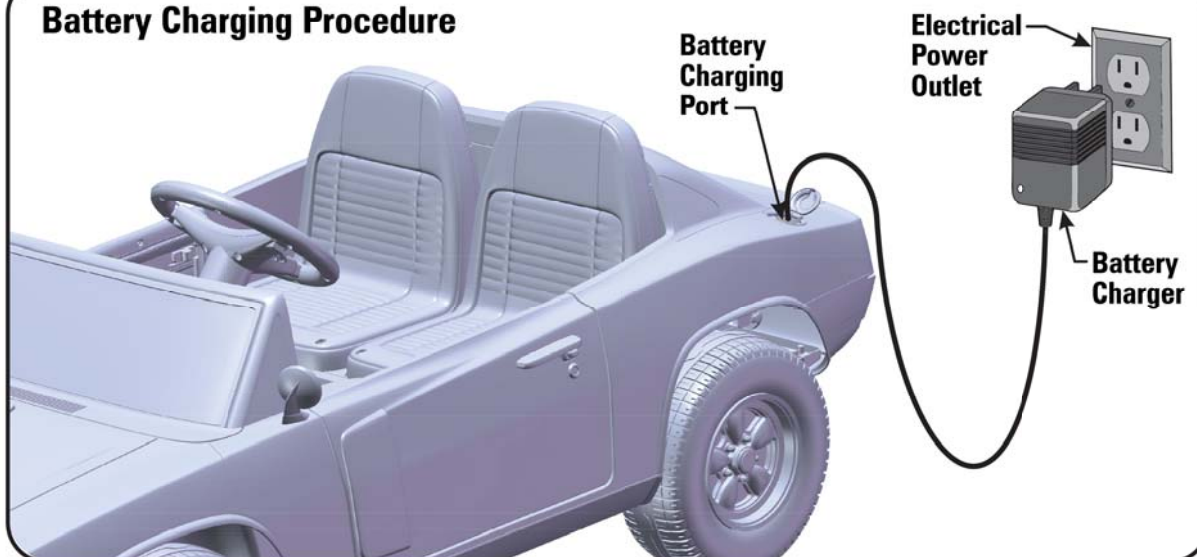

1. The ride-on vehicles power connections must be connected under the seat before operating or charging the battery. Go to page 14 for instructions on how to connect the battery power connections.
2. Gather the ride-on vehicles originally provided battery charger and find a suitable electrical power outlet in a well ventilated area to plug the battery charger into. Turn the ride-on vehicles power switch to the OFF mode first and then align and insert the small round battery charging plug into the battery charging port located on the top of the rear left fender of the ride-on vehicle as shown.
3. This ride-on vehicles battery should be charged 4-6 hours before first use and re-charged 8-12 hours after first use, but never charge the battery longer that 20 hours. NOTE: During the charging process the batter charger and or battery may feel warm to the touch, this is normal during the battery charging process. Recharge the battery every 30 days while not in use or being stored to extend the life of the battery. Leaving the ride-on vehicles battery uncharged for too long will shorten the batteries life.

### Battery Disposal



The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Important! Recycle the dead battery responsibly. The battery contains lead acid (electrolyte) and must be disposed of properly and legally. It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to your local approved lead acid battery recycle center. Do not throw the battery away with your regular household waste!

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

## **WARNING FOR LEAD/ACID BATTERY**

- Do not mix alkaline and standard (carbon/zinc) or rechargeable (Ni-Cd) batteries.
- Please keep battery and charging kit away from anything flammable during battery charging.
- Batteries must always be inserted or connected with correct negative and positive polarity.
- Only use battery and charger kit specified by the manufacturer.
- Never dismantle battery or battery charger kit.
- Never place battery or battery charger kit in fire.
- Battery chargers used with this toy need to be regularly examined for damage to charger cord, connections or enclosures. If damaged contact customer service.

 
## **Battery Trouble Shooting**

- The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 5-10 seconds before becoming operational again.  
If after waiting 5 seconds and the vehicle still not operational first check all battery connections under the seat. Make sure all battery power connections are fully connected in the secure position. If this does not correct the problem the battery is most likely out of order. Please contact customer service and speak to one of our staff.
- The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for 1 to 3 years. Replace the battery with a new one. If the battery has a buzzing or gurgling sound when charging this is normal and not a cause for concern. It may also be silent when charging, which is also normal.
- Charger feels warm when recharging battery. This is normal and not a cause for concern.

# Operation

## Rider Controls

**ATTENTION!** An adult must be present at all times while children operate this ride-on vehicle. Make sure the child knows how to operate this ride-on vehicle safely and responsibly.

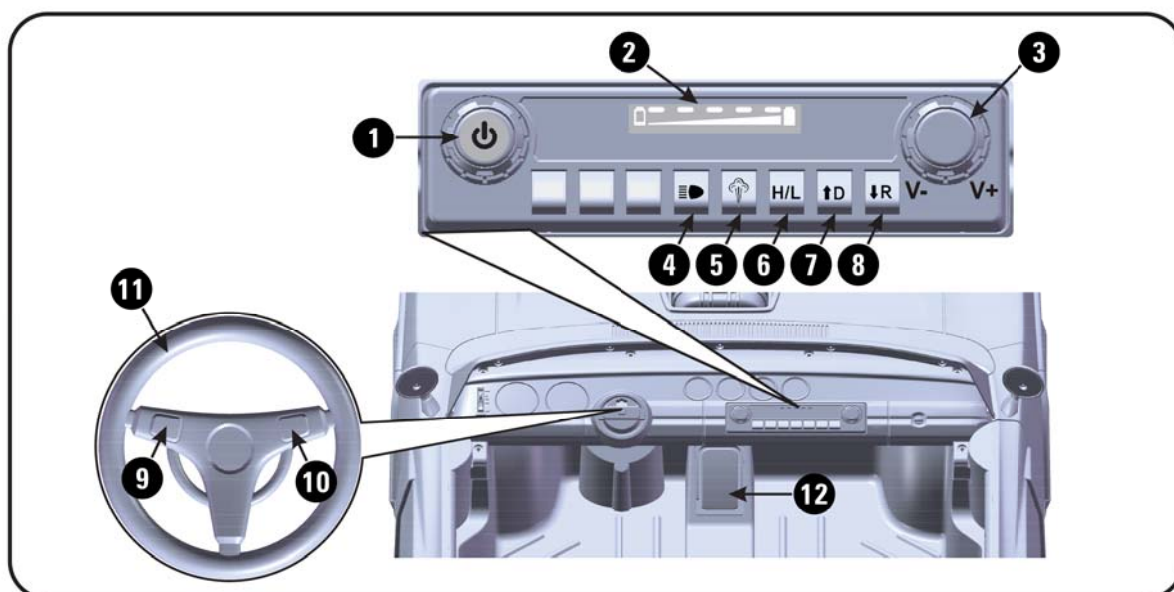

**1. ON/OFF Button:** For ON power mode quickly press and release this button. For OFF power mode press and hold for 3-5 seconds until the ride-on vehicle power turns OFF then release button.

**2. Battery Power Indicator Lights:** This group of LED lights represents the current status of how much charge the ride-on vehicle's battery has. All lights showing mean battery is fully charged and one light on means it's time to re-charge the ride-on vehicles battery.

**3. Volume Dial:** Rotate this dial to the clockwise to increase ride-on sound volume or rotate this dial counter-clockwise to decrease ride-on sound volume.

**4. Lights ON/OFF Button:** Press and release this button to turn the ride-on vehicles front headlights and rear tail lights ON and press and release this button again to turn these lights OFF.

**5. Vapor Button:** Press and release this button to dispense a cloud of water vapor from the Atomizer on top of the engine along with a realistic engine sound for about 8-10 seconds.

**6. High/Low Speed Mode Button:** Selects the high or low speed mode the ride-on vehicle will move when the rider presses down the Foot Pedal Accelerator or set the shifter to STOP to park the ride-on vehicle.

**7. Drive Forward Mode Button:** Press and release this button to put the ride-on vehicle into Forward Drive Mode allowing the rider to move the ride-on vehicle forward by pressing down the accelerator foot pedal.

**8. Reverse Mode Button:** Press and release this button to put the ride-on vehicle into Reverse Drive Mode. This allows the rider to move the ride-on vehicle in reverse while pressing down the accelerator foot pedal.

**9. Horn Sound Buttons:** There are two buttons on the steering wheel that when pressed will sound an realistic horn sound.

**10. Vapor Button:** Press and release this button to dispense a vapor from the top of the engine along with a realistic engine sound for a short amount of time.

**11. Steering Wheel:** The rider turns this steering wheel to steer the ride-on vehicle left and right.

**12. Foot Pedal Accelerator:** The rider presses the foot pedal accelerator to move the ride-on vehicle forward or in reverse. When the rider releases the foot pedal accelerator the ride-on will come to a stop.


FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER TOY CO.**
 
# Operation

## Remote Control

**ATTENTION!** An adult must be present at all times while children operate this ride-on vehicle. **ONLY ADULTS** are allowed to use this Remote Control to operate the ride-on vehicle.

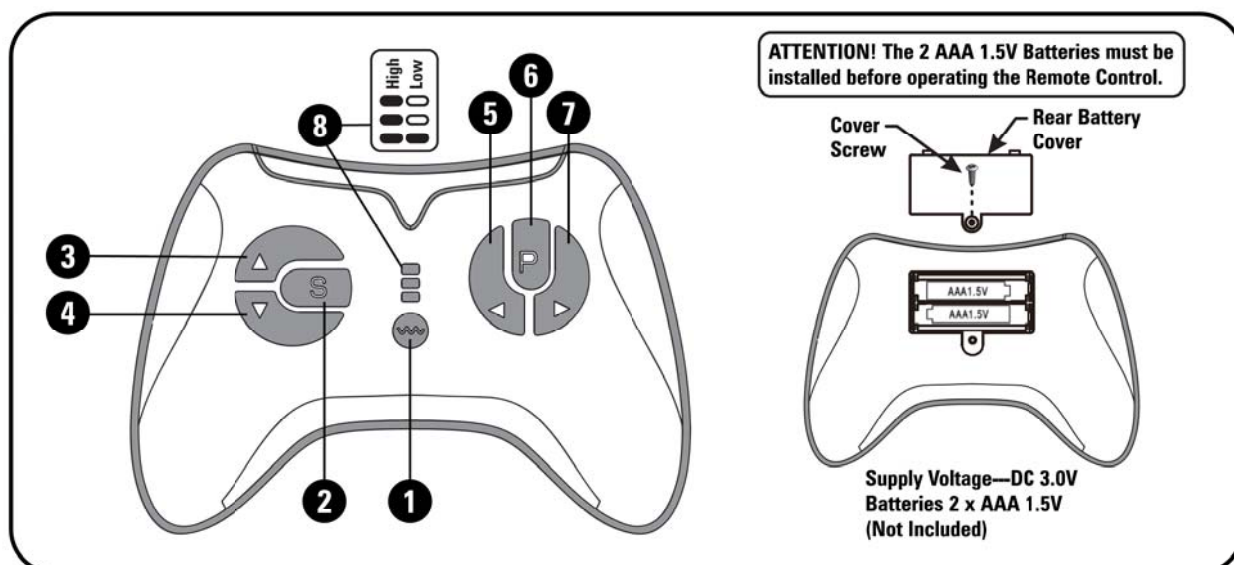

**NOTE:** This remote control overrides all controls from the rider while in use. It is recommended that only adults may operate this remote control while the ride-on vehicle is in use.

### Remote Control Battery Install

Turn the ride-on vehicle to OFF mode. Remove the remote control rear cover screw with a phillips screwdriver. Remove rear battery cover. Install 2 x AAA 1.5V batteries in the correct polarity position. **NOTE:** The AAA batteries are not included. Attach rear battery cover and install cover screw with phillips screwdriver until secured.

- 1. Frequency Code Button** - Press and hold this button for longer 3 seconds until the indicator light starts to blink. This process will only need to be completed once.
- 2. High/Low Speed Button** - Press and release this button to select between the ride-on vehicle's Low and High speed levels.
- 3. Forward Button** - Press down this button to control forward acceleration. Release this button to bring the ride-on vehicle to a stop.
- 4. Reverse Button** - Press down this button to remotely control reverse direction acceleration. Release this button to bring the ride-on vehicle to a stop.
- 5. Steer Left Button** - Press down this button to steer the ride-on vehicle to the left.
- 6. Park/Brake Button** - Press down this button to stop or park the ride-on vehicle.
- 7. Steer Right Button** - Press down this button to steer the ride-on vehicle to the right.
- 8. Indicator Lights** - Indicating what speed level setting the ride-on vehicle is currently set at.

 
FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO


# Parts

## Parts Diagram

**ATTENTION!** All items on this page, unless labeled not included, are provided within this ride-on vehicles original packaging. Some parts are installed on both left and right sides of the ride-on vehicle.

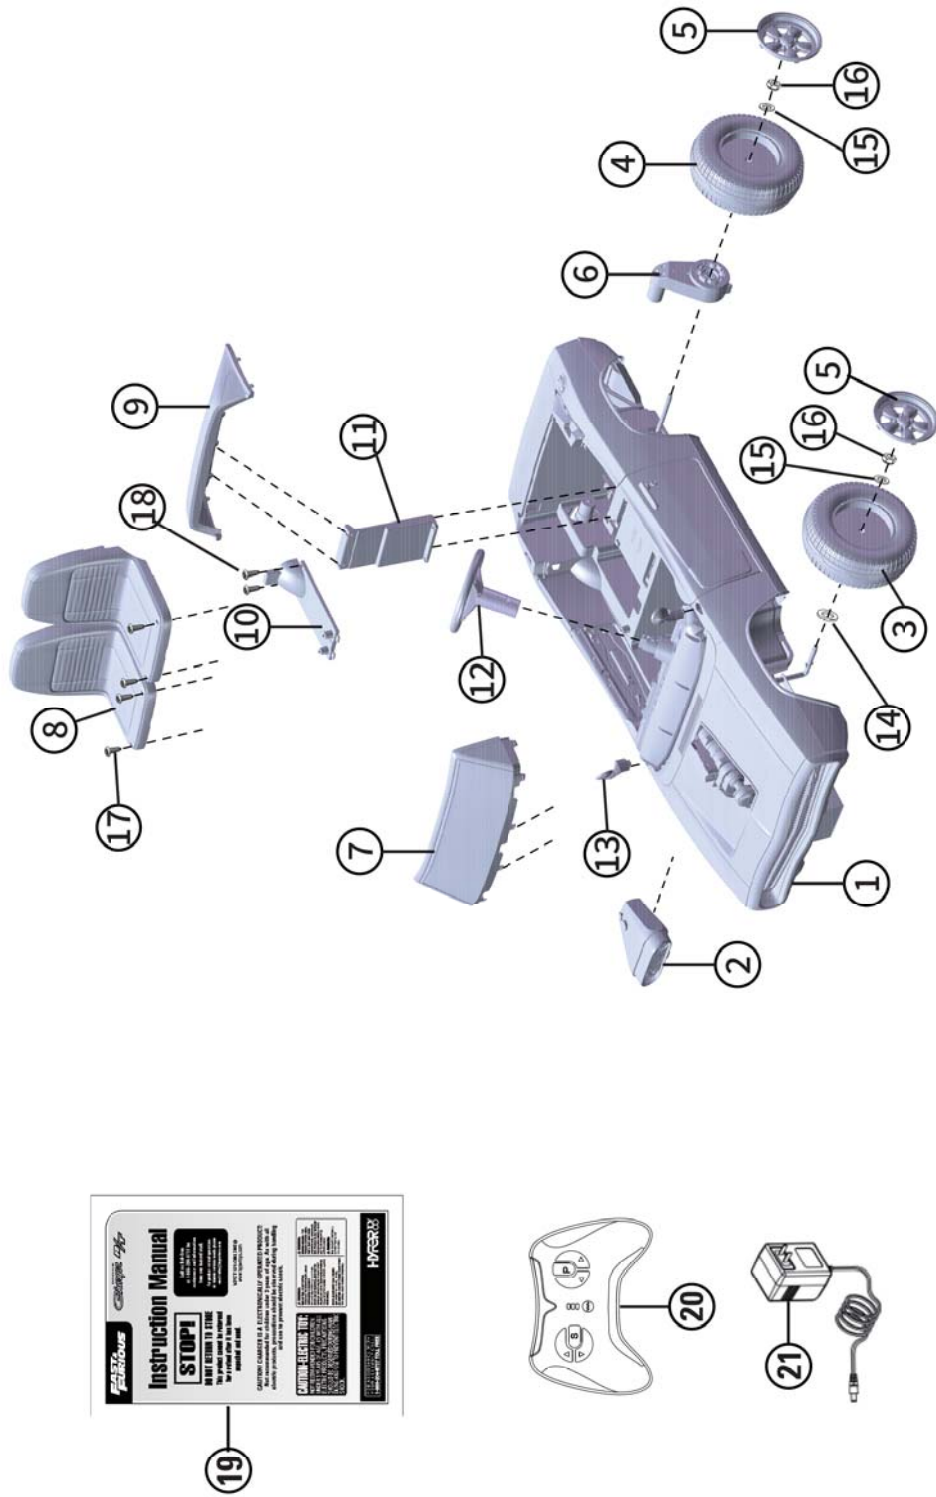

### Tools:

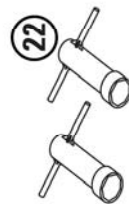 

Screwdriver  
(Not Included)

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY **CO.**

# Parts

## Parts List

 
| Part No. | Part Name       | QTY.<br>(Pieces) |
|----------|-----------------|------------------|
| 1        | Body            | 1                |
| 2        | Atomizer        | 1                |
| 3        | Front Wheels    | 2                |
| 4        | Rear Wheels     | 2                |
| 5        | Wheel Covers    | 4                |
| 6        | Electric Motor  | 2                |
| 7        | Windshield      | 1                |
| 8        | Seats           | 2                |
| 9        | Rear Window     | 1                |
| 10       | Battery Bracket | 1                |
| 11       | Rear Support    | 1                |
| 12       | Steering Wheel  | 1                |
| 13       | Side Mirrors    | 2                |
| 14       | Ø12x2 Washer    | 2                |
| 15       | Ø10x4 Washers   | 4                |
| 16       | M10x4 Locknut   | 4                |
| 17       | M3.5x12 Screws  | 4                |
| 18       | M3x12 Screws    | 6                |
| 19       | Manual          | 1                |
| 20       | Remote Control  | 1                |
| 21       | Battery Charger | 1                |
| 22       | Wrenches        | 2                |

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO


# Assembly

**ATTENTION!** Assembly of this ride-on vehicle must always be performed by an adult. Keep children under the age of 3 years old away while assembling this ride-on vehicle. The small parts or plastic bags may become a choking hazard for children.

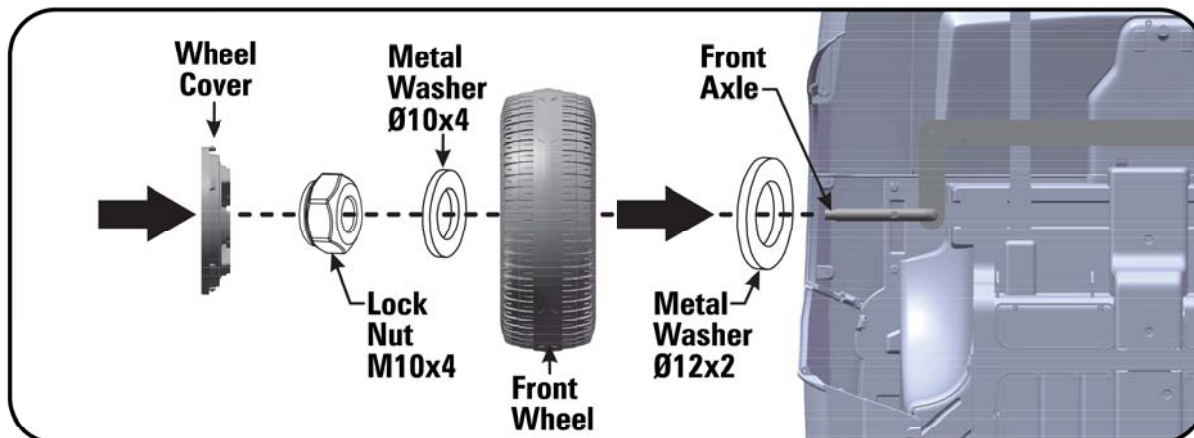

## 1. Install Front Wheels

 First carefully flip the ride-on vehicle upside down. Remove the Locknut M10x4 with the provided wrench and the Ø10x4 Washer from the front axle. Leave the second Ø12x2 Washer on the front axle. Align and slide the center hole of the Front Wheel onto the Front Axle. Place the Ø10x4 Washer onto front axle and lastly install the locknut onto the front axle and tighten until secure with the provided wrench. Align and install the Wheel Cover by pushing the tabs into the wheel center tab slots until fully secured to the Front Wheel. Repeat this process on opposite side.

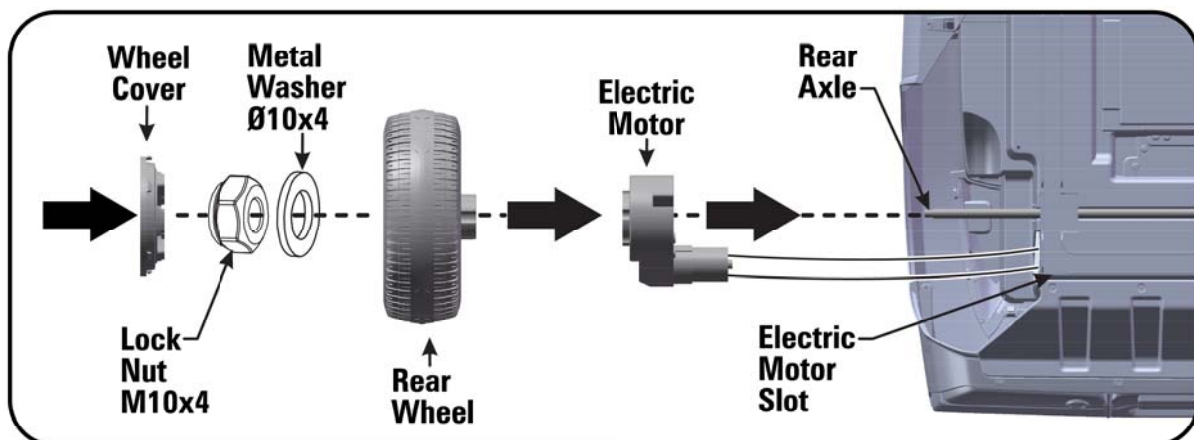


## 5. Install Rear Wheels

Use the provided 2 wrenches at each end of the rear axle remove both left and right M10x4 Locknuts. Remove the Ø10x4 Washers each end of the rear axle. Install the Electric Motor center hole onto the rear axle end and slide into the body slot. Align and slide the right rear wheel onto the rear axle aligning the rear wheel drive gear with the electric motor. Align and press the rear wheel gear into the electric motor. Place the washers onto the rear axle. Repeat this process on the opposite side of the rear axle. Install and tighten the 2 M10x4 Locknuts onto each side of the axle at the same time using the 2 wrenches provided, one on each end, to tighten the rear axle locknuts until locknuts are secure. Align and install the wheel cover by pushing the wheel cover tabs into the wheel center. Repeat wheel cover installation on opposite side.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**
 
# Assembly

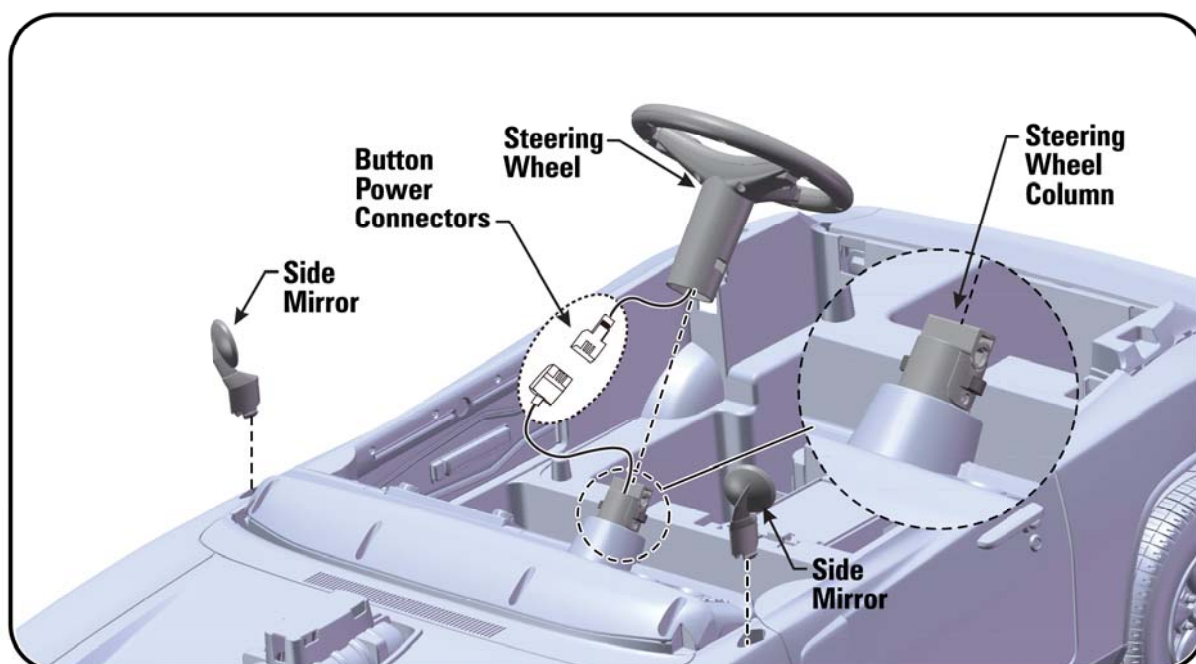


## 6. Install Steering Wheel & Side Mirrors

Carefully with help flip over the ride-on vehicle right side up. Connect the Button Power Connectors by aligning and pressing together until fully secured. Carefully hide the Battery Power Connectors and wires inside the steering wheel. Align the steering wheel facing forward and press the bottom down onto the Steering Column until the Steering Wheel snaps fully secured to the Steering Column. Locate and correct left or right Side Mirror into the slot located on the ride-on vehicles body. Press the Side Mirror down into the ride-on vehicle body slot until the Side Mirror is fully secured to the ride-on vehicle.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO
 
# Assembly

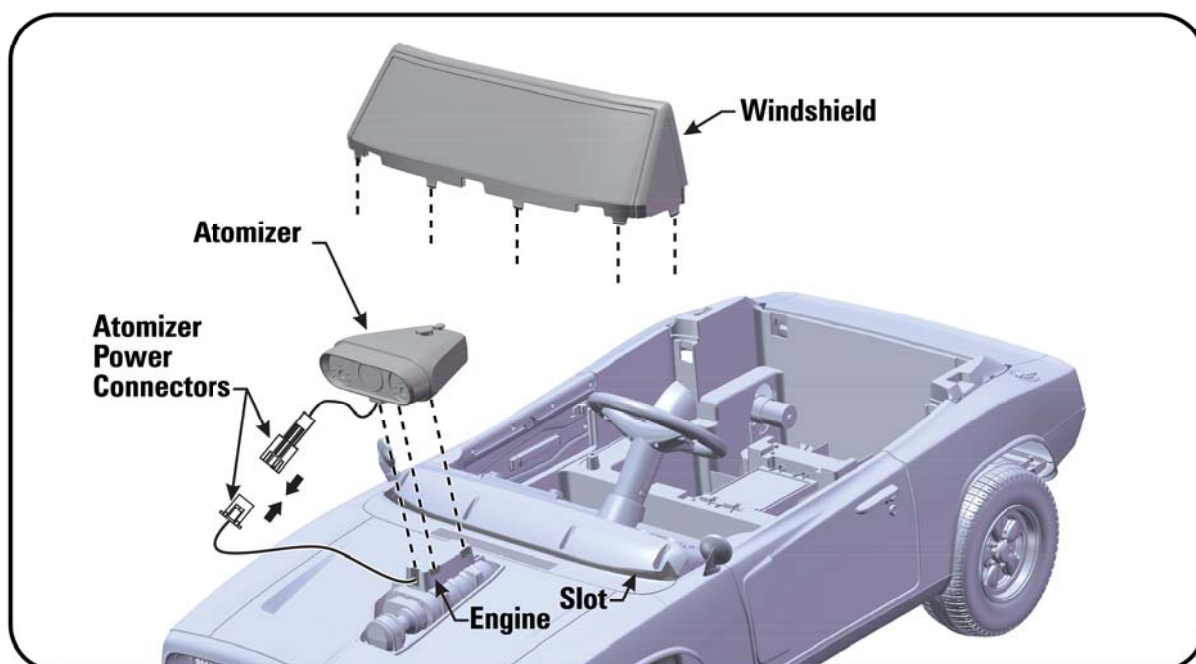

## 7. Install Windshield & Atomizer

 
Locate the windshield and carefully align it with the slot on the top of the ride-on vehicles body as shown. Press all sides of the Windshield down into the slot on the body of the ride-on vehicle until the Windshield is fully secured to the ride-on vehicles body. When the Windshield is properly installed you should not be able to lift up or move it away from the ride-on vehicle and the Windshield should sit level with the ride-on vehicles body.

Next locate the Atomizer and bring it close to the Engine. Connect the Atomizer Power Connectors by aligning and pressing together until fully secured. Carefully hide the Atomizer Power Connectors and wires inside the Engine slot to keep from damage while installing the Atomizer. Align the bottom of the Atomizer with the top of the Engine as shown. Press the bottom of the Atomizer down onto the top of the Engine until the Atomizer is fully secured to the Engine.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Assembly

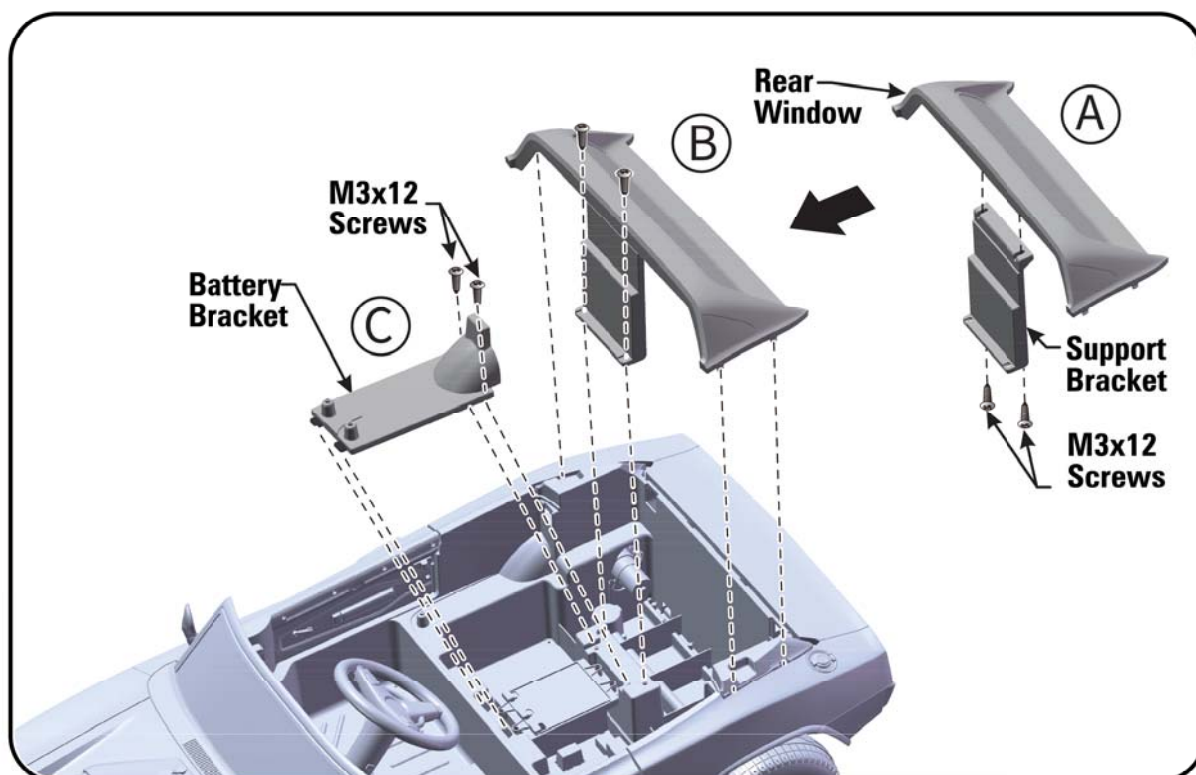

## 8. Install Rear Window and Battery Bracket

**A.** Locate the Rear Window, Support Bracket, and the 2 M3x12 Screws. Align the two screw holes on the bottom of the Rear Window the 2 screw holes on the top of the Support Bracket as shown. Insert the 2 M3x12 Screws through the underside of the Support Bracket. Using a phillips screwdriver tighten the 2 M3x12 Screws until the Rear Window is fully secured to the Support Bracket with no movement between them.

**B.** Align the Rear Window side plastic tabs with the ride-on vehicles body as shown. There are slots on the ride-on vehicles body where the Rear Window plastic tabs insert. Press the Rear Window down into the ride-on vehicles body until the Rear Window is fully secured to the ride-on vehicles body with no movement between them. Align and insert the 2 M3x12 Screws into the Support Brackets bottom 2 screw holes and tighten with a phillips screwdriver until fully secured.

**C.** Locate the Battery Bracket and align and insert the 2 front plastic tabs into the ride-on vehicle body. Then align the Battery Brackets rear 2 screw holes with the ride-on vehicles 2 screw holes as shown. Insert the 2 M3x12 Screws and tighten with a phillips screwdriver until the Battery Bracket is fully secured to the ride-on vehicle body.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

 
**HYPER** TOY  
CO

# Assembly

**⚠ WARNING! RISK OF FIRE!** Do not bypass fuse. This may overload and damage the electrical system. Replace only with original size and type resetting fuse if needed.

## 9. Battery/Motor Power Connections


Locate the 3 of the battery power connectors inside the ride-on vehicle in the seat area. Carefully align and press together the 2 red battery power connectors until fully secured. Test the battery power connections by turning the ride-on vehicle to the ON power mode. If the ride-on vehicle fails to turn ON power then check your battery power connectors and test the battery power again.

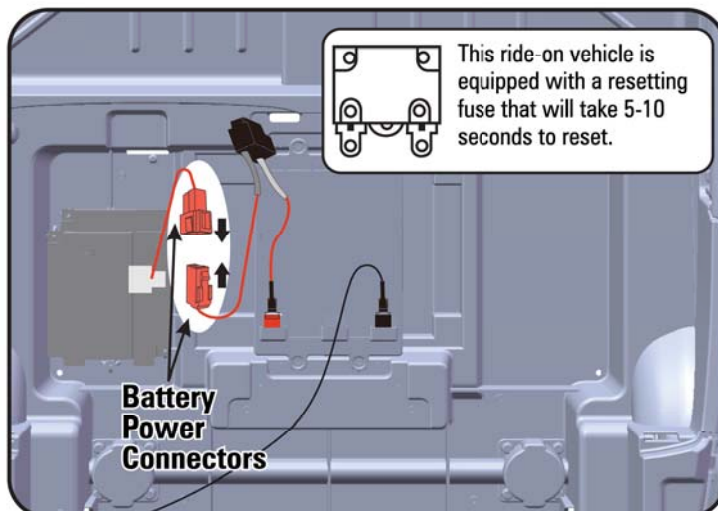

## 10. Install Seats


Locate the Seats and align the seats 4 Rear Support Hooks to the ride-on vehicles 4 Support Slots. The seats 4 Rear Support Hooks will be inserted into the 4 Seat Slots at an angle first then rotate the base of the seat flat in the cab of the ride-on vehicle. Align the 4 Seat Screw Holes with the ride-on vehicles 4 Screw Holes as shown.

 Insert the 4 M3.5x12 Screws and tighten with a phillips screwdriver until the Seats are fully secured to the ride-on vehicle with any movement between them.

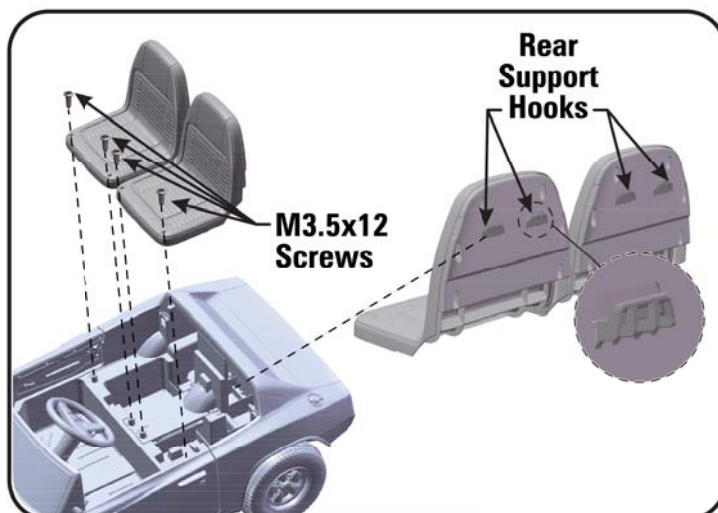

## 11. Atomizer Water Tank Fill Procedure

 Turn the ride-on vehicle to the OFF power mode. **ONLY ADULTS** are allowed to carefully fill the Atomizer with water tank with water. Open the Top Cap on top of the Atomizer. This opens the Water Tank of the Atomizer to allow an adult to fill the Atomizer with a maximum of 300ml of pure water only. **NOTE:** Using a funnel will help keep the water from spilling onto the ride-on vehicle. **ATTENTION!** Close the Top Cap completely to keep water from spilling out of the Atomizer Water Tank when full.

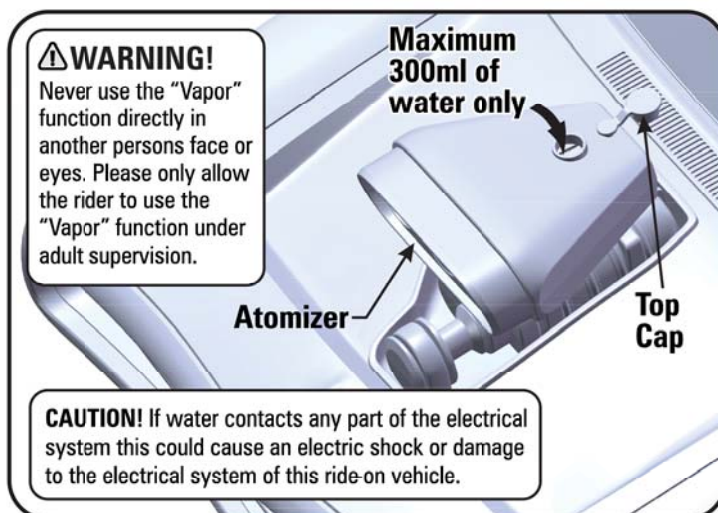

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY CO

# Vehicle Care

 **ATTENTION!** Adult supervision is always required while this vehicle is being operated, battery re-charged, assembled, or repaired.

- ☒ Check all screws, nuts, and protective coverings regularly and tighten securely.
- ☒ Check all plastic parts on a regular basis for cracks or broken pieces.
- ☒ Never use this battery powered vehicle near water or in wet weather conditions such as rain and snow.
- ☒ Never change speed levels while vehicle is still in motion.
- ☒ Never operate this ride-on vehicle in mud, sand, loose dirt, or gravel. This can cause the electric switches and motor to fail.
- ☒ Never wash this battery powered vehicle with soap and water, this can cause the electric parts of the vehicle to fail. To clean this vehicle only use a non-wax furniture polish applied to a soft micro-fiber soft cloth.
- ☒ Always store vehicle inside or under a protective cover.
- ☒ Always re-charge this vehicles battery 8 - 12 hours every month while not in regular use to extend the life of the battery.

 **CALIFORNIA PROPOSITION 65 WARNING:**

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Troubleshooting

**ATTENTION!** Completely read through this entire manual and the troubleshooting guide first before contacting customer service. If you still need assistance troubleshooting contact customer service.

| Problem                                                        | Problem Cause                                                                                   | Solutions                                                                                                                                                                   |
|----------------------------------------------------------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Vehicle does not run                                           | Battery low on power                                                                            | Recharge battery.                                                                                                                                                           |
|                                                                | Thermal fuse has tripped                                                                        | see <Fuse>                                                                                                                                                                  |
|                                                                | Battery connector or wires are loose                                                            | Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor <b>contact customer service.</b>                                  |
|                                                                | Battery is dead                                                                                 | Replace battery, <b>contact customer service.</b>                                                                                                                           |
|                                                                | Electrical system is damaged                                                                    | <b>Contact customer service.</b>                                                                                                                                            |
|                                                                | Motor is damaged                                                                                | <b>Contact customer service.</b>                                                                                                                                            |
| Vehicle does not run very long                                 | Battery is under charged                                                                        | Check that the battery connectors are firmly plugged into each other when recharging                                                                                        |
|                                                                | Battery is old                                                                                  | Replace battery, <b>contact customer service.</b>                                                                                                                           |
| Vehicle runs sluggishly                                        | Battery low on power                                                                            | Recharge battery.                                                                                                                                                           |
|                                                                | Battery is old                                                                                  | Replace battery, <b>contact customer service.</b>                                                                                                                           |
|                                                                | Vehicle is overload                                                                             | Reduce weight on vehicle. Max weight is 110lbs, (50kg).                                                                                                                     |
|                                                                | Vehicle is being used in harsh conditions                                                       | Avoid using vehicle in harsh conditions. see <Safety>.                                                                                                                      |
| Vehicle needs a push to go forward                             | Poor contact of wires or connectors                                                             | Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, <b>contact customer service.</b>                                 |
|                                                                | "Dead Spots" on motor                                                                           | A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. <b>Contact customer service.</b>                       |
| Loud grinding or clicking noises coming from motor or gear box | Motor or gears are damaged                                                                      | <b>Contact customer service.</b>                                                                                                                                            |
| Battery will not recharge                                      | Battery connector or adapter connector is loose                                                 | Check that the battery connectors are firmly plugged into each other.                                                                                                       |
|                                                                | Charger not plugged in                                                                          | Check that the battery charger is plugged into a working wall outlet.                                                                                                       |
|                                                                | Charger is not working                                                                          | <b>Contact customer service.</b>                                                                                                                                            |
| Charger feels warm when recharging                             | This is normal and not a cause for concern                                                      |                                                                                                                                                                             |
| Vapor Function Buttons Not Working                             | Low or no water in Atomizer.<br>Bad battery power connection.<br>Low battery, need to recharge. | Fill the Atomizer water tank to 300ml of water only.<br>Check that all battery power wire connections.<br>Recharge the Battery 8-12 hours.<br><b>Call Customer Service.</b> |

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO

# Limited Warranty

**DON'T RETURN YOUR  
VEHICLE TO THE STORE**

**Do not take back to store, call customer service with any problems or questions.**

Hyper Toy Company offers the following limitations, terms and conditions to the original owner of the Hyper Toy Company electric Ride-On Toy. Should this Hyper Toy Company electric Ride-On toy or an part be determined defective by Hyper Toy Company to be covered by this Limited Warranty, it will be repaired or replaced, at Hyper Toy Company sole option, which will be conclusive and binding. Under no circumstances does this limited warranty include the cost of travel or shipment to and from any retailer or consumer. Such cost, if any, shall be borne by the original or subsequent owner.

This Hyper Toy Company electric ride-on toy has not been designed or engineered for ramp riding, jumping, aggressive riding, in severe climates or over severe terrain, riding with heavy loads of over (110 lbs or 50 kg) or any similar activities. Such uses may damage the Hyper Toy Company electric ride-on toy, that can cause serious injury to the rider and in all cases will void this warranty.

6 Months from the date of the purchase on vehicle

Hyper Toy Company Electric Ride-On display, throttle and throttle assembly, control wiring harness, wiring and wiring harness, motor and associated transmission and all components not directly associated with the 12V battery are warranted from 6 months from date of purchase to The Original Purchaser against any defects in material, manufacturing, and/or workmanship. If there is any evidence of consumer repair the warranty is voided. Any claim of damage under this clause cannot be due to owner abuse or neglect and must first be reported to Hyper Toy Company Customer Service and a Return Merchandise Authorization (RMA) tag to be issued.

Wheels are considered a wear and tear item and are only under warranty in the event of manufacturer defect.

Items not covered under warranty terms under any conditions.

1. Damage due to failure to maintain the battery as accurately described on various product warning stickers and the products owner's manual.
2. Damage due to maintenance or the actual damage caused by the lack of maintenance.
3. Damage due to improperly assembled products.
4. Damage due to climatic or environmental damage, various cleaners and/or chemicals that may result in damage to the finish.

This warranty does not cover and is intended to exclude, any liability on the part of Hyper Toy Company. Whether under this warranty or implied by law or indirect or consequential damages for breach of warranty.

This warranty gives you specific legal rights. You may also have other rights that vary from state to state and province to province. In those states that do not allow the exclusion of implied warranties or limitation of incidental or consequential damages, the above limitations or exclusions may not apply to you. This warranty applies to the United States and Canada.

**DON'T RETURN YOUR VEHICLE TO THE STORE.** Should you require service or assistance with your vehicle during the warranty period, contact our trained technical staff at Hyper Toy Company 1-866-204-9737 toll free or email us at [info@hypertoys.com](mailto:info@hypertoys.com)

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER TOY  
CO**

# Product Information

**DODGE**  
OFFICIAL LICENSED PRODUCT

**HYPER** TOY  
CO

**NOTE: Activation of your warranty gives you FREE telephone and online technical service help. Please visit [www.hypertoys.com](http://www.hypertoys.com) to complete product registration and activate your warranty. You will need to provide the product serial number to complete registration. You will be able to find the product serial number on the underside of the vehicle.**

## **Hyper Toy Company**

### **Customer Service Contact:**

177 Malaga Park Dr.  
Malaga, NJ 08328

### **Call Toll Free**

**1-866-204-9737**

Monday-Friday 8:00AM to 5:00PM (CST)

For product related questions or  
customer service needs please  
email [info@hypertoys.com](mailto:info@hypertoys.com)

### **VISIT US ONLINE@**

[www.hypertoys.com](http://www.hypertoys.com)

## **CAUTION-ELECTRIC TOY:**

**NOT RECOMMENDED FOR CHILDREN  
UNDER 3 YEARS OF AGE. AS WITH ALL  
ELECTRIC PRODUCTS, PRECAUTIONS  
SHOULD BE OBSERVED DURING HAN-  
DLING AND USE TO PREVENT ELECTRIC  
SHOCK.**

### **⚠ WARNING:**

**RISK OF FIRE.** DO NOT BYPASS.  
TO REDUCE THE RISK OF INJURY, ADULT  
SUPERVISION IS REQUIRED.  
REPLACE ONLY WITH 10A & 15A FUSE.  
NEVER USE IN ROADWAYS, NEAR MOTOR  
VEHICLES. NEVER USE ON OR NEAR STEEP  
INCLINES OR STEPS. NEVER NEAR SWIMMING  
POOLS OR OTHER BODIES OF WATER. ALWAYS  
WEAR SHOES.

NEVER ALLOW MORE THAN 2 RIDERS  
MAX WEIGHT OF 110 LBS. (50 KG).  
⚠ **CAUTION:** SCREWS CONTAIN SHARP POINTS  
AND EDGES. ADULT ASSEMBLY REQUIRED.

### **⚠ WARNING:**

**CHOKING HAZARD - THIS  
PACKAGE CONTAINS SMALL  
PARTS. KEEP AWAY FROM  
CHILDREN UNTIL ASSEMBLED.**  
THIS PRODUCT IS NOT INTENDED  
FOR CHILDREN UNDER 3 YEARS  
DUE TO AN INABILITY TO  
OPERATE SAFELY.

### **⚠ WARNING:**

THIS PRODUCT CONTAINS A  
BATTERY THAT IS NOT  
REPLACEABLE.

FOR ASSISTANCE WITH  
YOUR ASSEMBLY CALL:  
**1-866-204-9737 TOLL FREE**

**HYPER** TOY  
CO